

### Agilent E1421B 6-Slot C-Size Mainframe

**User Information** 



Manual Part Number: E1421-90000 Printed in Malaysia E0706 NOTICE: In August 2014, Agilent Technologies' former Test and Measurement business became Keysight Technologies. This document is provided as a courtesy but is no longer kept current and thus will contain historical references to Agilent. For more information, go to **www.keysight.com.** 



#### Certification

Agilent Technologies certifies that this product met its published specifications at the time of shipment from the factory. Agilent Technologies further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology (formerly National Bureau of Standards), to the extent allowed by that organization's calibration facility, and to the calibration facilities of other International Standards Organization members.

#### Warranty

This Agilent Technologies product is warranted against defects in materials and workmanship for a period of one (1) year from date of shipment. Duration and conditions of warranty for this product may be superseded when the product is integrated into (becomes a part of) other Agilent products. During the warranty period, Agilent Technologies will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by Agilent Technologies. Buyer shall prepay shipping charges to Agilent and Agilent shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to Agilent from another country.

Agilent warrants that its software and firmware designated by Agilent for use with a product will execute its programming instructions when properly installed on that product. Agilent does not warrant that the operation of the product, or software, or firmware will be uninterrupted or error free.

#### **Limitation Of Warranty**

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied products or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

The design and implementation of any circuit on this product is the sole responsibility of the Buyer. Agilent does not warrant the Buyer's circuitry or malfunctions of Agilent products that result from the Buyer's circuitry. In addition, Agilent does not warrant any damage that occurs as a result of the Buyer's circuit or any defects that result from Buyer-supplied products.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. Agilent SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

#### **Exclusive Remedies**

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. Agilent SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

#### **Notice**

The information contained in this document is subject to change without notice. Agilent Technologies MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Agilent shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material. This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Agilent Technologies, Inc. Agilent assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Agilent.

#### **U.S. Government Restricted Rights**

The Software and Documentation have been developed entirely at private expense. They are delivered and licensed as "commercial computer software" as defined in DFARS 252.227-7013 (Oct 1988), DFARS 252.211-7015 (May 1991) or DFARS 252.227-7014 (Jun 1995), as a "commercial item" as defined in FAR 2.101(a), or as "Restricted computer software" as defined in FAR 52.227-19 (Jun 1987)(or any equivalent agency regulation or contract clause), whichever is applicable. You have only those rights provided for such Software and Documentation by the applicable FAR or DFARS clause or the Agilent standard software agreement for the product involved.

Agilent E1421A 6-Slot C-Size High-Power VXI Mainframe User Information Edition 1 Rev 3

Copyright @ 1996-2015 Agilent Technologies, Inc. All Rights Reserved.

### **Printing History**

The Printing History shown below lists all Editions and Updates of this manual and the printing date(s). The first printing of the manual is Edition 1. The Edition number increments by 1 whenever the manual is revised. Updates, which are issued between Editions, contain replacement pages to correct the current Edition of the manual. Updates are numbered sequentially starting with Update 1. When a new Edition is created, it contains all the Update information for the previous Edition. Each new Edition or Update also includes a revised copy of this printing history page. Many product updates or revisions do not require manual changes and, conversely, manual corrections may be done without accompanying product changes. Therefore, do not expect a one-to-one correspondence between product updates and manual updates.

Edition 1 (Part Number E1421-90000)	. May 1996
Edition 1 Rev 2 (Part Number E1421-90000)	. July 2006
Edition 1 Rev 3 (Part Number E1421-90000)	. August 2015

### Safety Symbols



Instruction manual symbol affixed to product. Indicates that the user must refer to the manual for specific WARNING or CAUTION information to avoid personal injury or damage to the product.

Indicates the field wiring terminal that must be connected to earth ground before operating

the equipment—protects against electrical

shock in case of fault.



Alternating current (AC).



Direct current (DC).

Indicates hazardous voltages.



Calls attention to a procedure, practice, or condition that could cause bodily injury or death.



Frame or chassis ground terminal—typically connects to the equipment's metal frame.

CAUTION

Calls attention to a procedure, practice, or condition that could possibly cause damage to equipment or permanent loss of data.

### **WARNINGS**

The following general safety precautions must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. Agilent Technologies assumes no liability for the customer's failure to comply with these requirements.

**Ground the equipment**: For Safety Class 1 equipment (equipment having a protective earth terminal), an uninterruptible safety earth ground must be provided from the mains power source to the product input wiring terminals or supplied power cable.

DO NOT operate the product in an explosive atmosphere or in the presence of flammable gases or fumes.

For continued protection against fire, replace the line fuse(s) only with fuse(s) of the same voltage and current rating and type. DO NOT use repaired fuses or short-circuited fuse holders.

**Keep away from live circuits:** Operating personnel must not remove equipment covers or shields. Procedures involving the removal of covers or shields are for use by service-trained personnel only. Under certain conditions, dangerous voltages may exist even with the equipment switched off. To avoid dangerous electrical shock, DO NOT perform procedures involving cover or shield removal unless you are qualified to do so.

**DO NOT operate damaged equipment:** Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture, or any other reason, REMOVE POWER and do not use the product until safe operation can be verified by service-trained personnel. If necessary, return the product to an Agilent Technologies Sales and Service Office for service and repair to ensure that safety features are maintained.

**DO NOT service or adjust alone:** Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

**DO NOT substitute parts or modify equipment:** Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the product. Return the product to an Agilent Technologies Sales and Service Office for service and repair to ensure that safety features are maintained.



### **DECLARATION OF CONFORMITY**

According to ISO/IEC Guide 22 and CEN/CENELEC EN 45014



Manufacturer's Name: Agilent Technologies, Incorporated

Manufacturer's Address: 815 – 14<sup>th</sup> St. SW

Loveland, Colorado 80537

USA

Declares, that the product

**Product Name:** C-Size VXI Mainframe

Model Number: E1421A

**Product Options:** This declaration covers all options of the above product(s).

### Conforms with the following European Directives:

The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC (including 93/68/EEC) and carries the CE Marking accordingly.

### Conforms with the following product standards:

EMC	Standard	Limit
	CISPR 11:1990 / EN 55011:1991 IEC 801-2 :1991 / EN50082-1 : 1992 IEC 801-3 :1984 / EN50082-1 : 1992 IEC 801-4 :1988 / EN50082-1 : 1992	Group 1 Class A 4kV CD, 8kV AD 3 V/m 0.5kV signal lines, 1kV power lines
Safety	The produt was tested in a typical configuration with Agilent Technologysystems IEC 1010-1:1990+A2:1996 / EN 61010-1:1993 Canada: CSA C22.2 No. 1010.1:1992 UL 3111-1	, ,

3 May 2001

Date

Ray Corson

**Product Regulations Program Manager** 

For further information, please contact your local Agilent Technologies sales office, agent or distributor.

Authorized EU-representative: Agilent Technologies Deutschland GmbH, Herrenberger Strabe 130, D 71034 Böblingen, Germany

N	n	te	C
ιv	"	ıĸ	٠,

### **Table of Contents**

Chapter 1 - Using the Mainframe	
Mainframe Description	7
Options	7
Line Voltage & Input Power	7
Air Flow	8
Power Line Fuse and Power Cord	10
Agilent E1421B Safety Grounding Information	
Rack Mounting the Agilent E1421B	14
Intermodule Chassis Shield Kit	21
Chapter 2 - Replaceable Parts & Assemblies	
Agilent E1421B Replaceable Parts List	23
Appendix A - Specifications	
Overall Mainframe Size	26
Mainframe Weight	26
Module Size	26
Input Power	26
General Power Supply	26
Power Supply Outputs	
VXI Ripple/Noise*	27
Humidity	27
Temperature Range	27
Shock	28
Vibration	28
Cooling Provided	28
Acoustical Noise	28
EMC Testing	29
Module Weight	29
Safety	29

# Chapter 1 Using the Mainframe

# Mainframe Description

The Agilent E1421B mainframe is designed in full compliance with the VXIbus specifications (Rev. 1.4) and VMEbus system specifications (Rev. C.1). The mainframe contains 6 slots for plug-in modules and can be rack mounted in either the forward or reverse position. Features of the Agilent E1421B mainframe include:

- Improved power supply reliability.
- Solid state automatic bus grant sensing to bypass empty slots.
- Variable speed fan cooling.
- Easy replacement of major components most can be replaced from the rear of the mainframe, even while the mainframe is rack mounted.
- Seven standard VXIbus power supply voltages all overvoltage, overcurrent, and temperature protected.
- Maximum usable power (total power supply output power before thermal protection shutdown): 450 W at 55°C.

### **Options**

Options available for the E1421B mainframe include:

- Opt. #W01 Warranty conversion to 1-year on-site
- Opt. #500 Module installation using standard address settings
- Opt. #918 Install backplane connector shields
- Opt. #908, #909, #916 Rack mounting kits. Refer to *Rack Mounting the Agilent E1421B* later in this chapter.

Contact your nearest Agilent Technologies Sales and Support Office for information on ordering these options.

# Line Voltage & Input Power


The Agilent E1421B mainframe includes a power supply which automatically adjusts for standard nominal line voltages of 100/120 VAC and 220/240 VAC, and nominal power line frequencies of 50 Hz and 60 Hz. The power supply has a power factor corrected input section and thus can be powered from any nominal line input over the range of 100 VAC to 240 VAC. The power supply can also be powered from a 400 Hz AC line frequency or DC power line voltages. Refer to *Appendix A - Specifications* for complete input power specifications.

### Warning

Refer to Agilent E1421B Safety Grounding Information later in this chapter for complete grounding information when power line frequencies exceed 66 Hz.

### **Air Flow**

The Airflow into the plug-in module slots in the Agilent E1421B mainframe is significantly more than previous mainframes. The mainframe supplies each of the 6 slots with enough air to cool 60 Watts while maintaining only a 10°C rise across a typically dense module. Up to 75 Watts per slot may be dissipated if a 15°C rise is acceptable across a typically dense module. The graph of Figure 1-1 shows the air flow volume (liters/second) versus change in pressure (mm H2O) across the module for the mainframe.

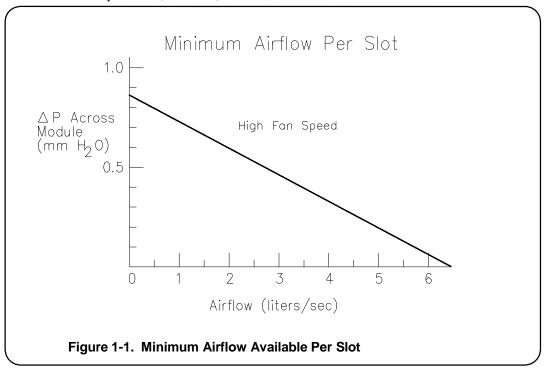

The mainframe has a fan chamber with one circulation fan. The speed of the fans is controlled by the ambient temperature of the air drawn into the mainframe. Air from the fan chamber is forced through the right side of the plug-in modules. The air passes through the installed modules and escapes out the left side of the mainframe.

A second fan provides cooling for the power supply. This fan is mounted on the right side of the mainframe next to the power supply.


### Caution

When installing the mainframe in your system, ensure that the air inlets and outlets are not obstructed. Blocked inlets and outlets can cause damage to the mainframe and plug-in modules due to overheating.

### Variable Speed Fan

Normally, the speed of the two internal circulation fans is determined by the ambient temperature of the air drawn into the mainframe. One fan cools the power supply and the other fan cools the VXI modules inserted into the mainframe. You can override the temperature-controlled speed of the fans by changing the position of the Fan Speed Control Switch on the rear of the mainframe to "HIGH." This forces both fans to remain at full speed all of the time. The two fan modes are:


- Variable Speed Mode (factory default): Quiet operation (≈75% airflow) at <30°C ambient temperature. High speed operation at >40°C ambient temperature.
- High Speed Mode (switch selectable): Full airflow at all times.

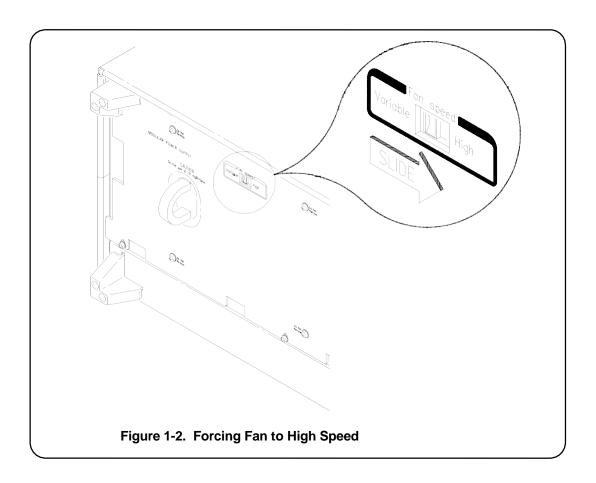

# Power Line Fuse and Power Cord

The mainframe is shipped with a 15A fast blow (15 AF) fuse (Agilent Part Number 2110-0054) already installed. This fuse is suitable for all line voltages. Figure 1-3 shows how to replace the fuse if necessary.

Power cords and their Agilent Part Numbers are listed in Table 1-1. Figure 1-3 shows how to install the power cord.

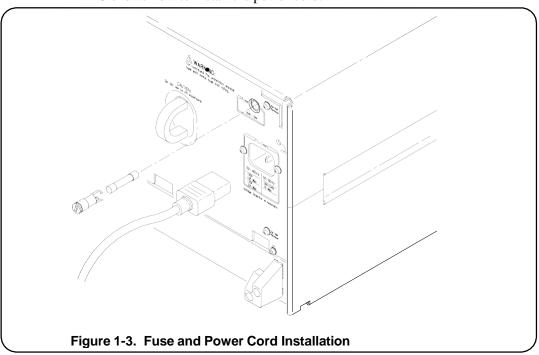

### WARNING

For protection from electric shock hazard, power cord ground must not be defeated. The front power switch on this instrument does not disconnect all power from internal circuits. In case of emergency, the operator may need to disconnect the power to this mainframe. Do not block the operators access to the power cord, or (if installed in a rack) to the circuit breaker which supplies power to the mainframe.

### **AVERTISSEMENT**

Pour ne pas compromettre la protection contre le choc èlectrique, ne pas couper le circuit de continuité des masses de la fiche. L'interrupteur avant de cet appariel ne coupe pas la totalité de l'alimentation des circuits internes. En cas d'urgence, l'utilisateur peut devoir debrancher cet appareil. Ne pas bloquer l'accès au cordon d'alimentation ou (si l'appareil est installè sur un chassis) au disjoncteur alimentant l'appareil.

### Power cord part numbers

Table 1-1 lists the power cords and their Agilent Technologies part numbers. The table also lists the specifications of each power cord.

Table 1-1. Power Cords for the Agilent E1421B

Country	Part Number	Volts	Rated Amps	Туре
U.K.	8120-1351	250 VAC	10 A	Straight Connector
Australia	8120-1369	250 VAC	10 A	Straight Connector
Europe	8120-1689	250 VAC	10 A	Straight Connector
U.S./Canada	8120-2371	125 VAC	13 A	Straight Connector
Switzerland	8120-2296	250 VAC	10 A	Right Angle Connector
Denmark	8120-2956	250 VAC	10 A	Straight Connector
Japan	8120-5400	125 VAC	15 A	Right Angle Connector
India/S.A.	8120-4211	250 VAC	10 A	Straight Connector

### WARNING

Use power cord rated for maximum current of operating voltage.

### **AVERTISSEMENT**

Utilisez le cordon d'alimentation qualifié pour la valeur de maximum courant sous la tension de fonctionnement.

Power cords supplied by Agilent have polarities matched to the power input socket on the instrument:

L = Line or Active Conductor (also called "live" or "hot")

N = neutral or identified conductor

E = Earth or safety ground

#### Note

These are special high power cords. Make certain that any replacement cord is capable of handling the indicated loads.

### WARNING

To prevent possible electric shock hazard, disconnect power cord before removing power supply from mainframe.

### **AVERTISSEMENT**

Pour éviter les risques de choc électrique, débranchez le cordon d'alimentation avant de retirer l'alimentation de l'unité central.

### **Agilent E1421B Safety Grounding Information**

### **WARNING**


For protection from electrical shock when operating at frequencies greater than 66 Hz, connect the chassis ground terminal to permanent earth ground.


### **AVERTISSEMENT**

Risque de Choch èlectrique. Si la frèquence du secteur est supèrieure à 66 Hz, relier la borne de masse du chassis à une prise de terre fixe.

## **Grounding Procedure**

Connect a 16 AWG (1.3 mm or larger) wire to the PEM nut shown in Figure 1-4. The wire must be green with a yellow stripe or bare (no insulation). Use a M4 x 10 screw, grounding lug, and toothed washers (or toothed lug) as shown in Figure 1-5. Securely attach the other end of the wire to a permanent earth ground using toothed washers or a toothed lug.

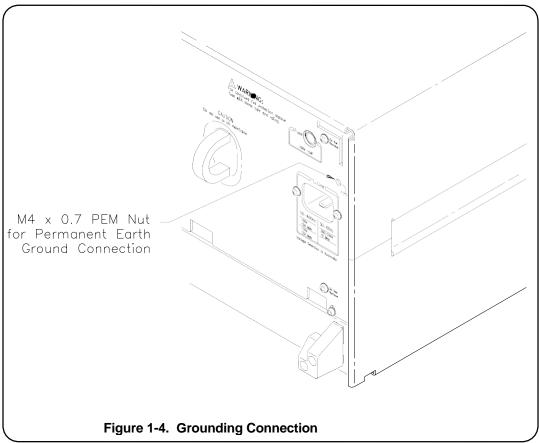


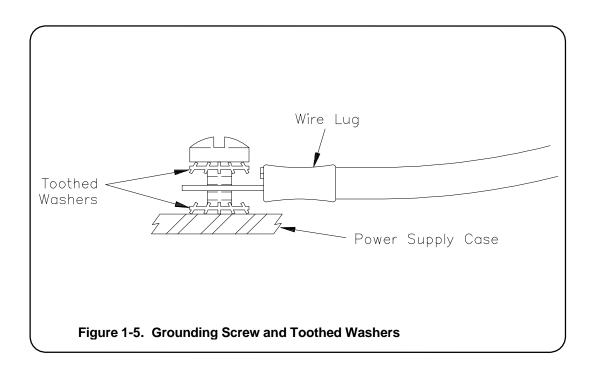


# **Rack Mounting**

The Agilent E1421B mainframe has three rack mount option kits. These **the Agilent E1421** are shown in Figures 1-6, 1-7, and 1-8. A rack slide or rail kit is also required to rack mount the mainframe. These kits are shown in Figures 1-9 and 1-10. If you are not using an Agilent Technologties rack, you may also need an adapter bracket. This bracket is shown in Figure 1-11. These kits may be ordered from your nearest Agilent Technologies Sales and Support Office using the part numbers or option numbers listed with each part description.

> Option 908 The Option 908 kit includes flush mount flanges and hardware designed to flush mount the mainframe. This kit is compatible with both the rack slide and rail kits.

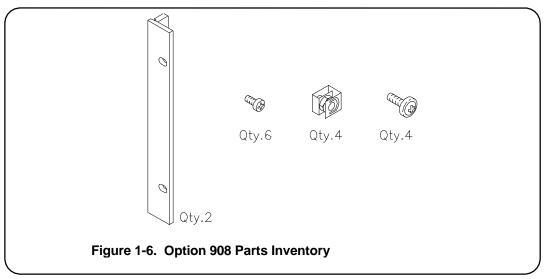


**Option 916** The Option 916 kit includes the flanges included with Option 908 plus a recess rack mount bracket and supporting hardware. This kit is designed to mount the mainframe at a recess of 10.4 cm (4  $^{1}/8 \text{ in}$ ) or 12.9 cm (4  $^{1}/8 \text{ in}$ ).

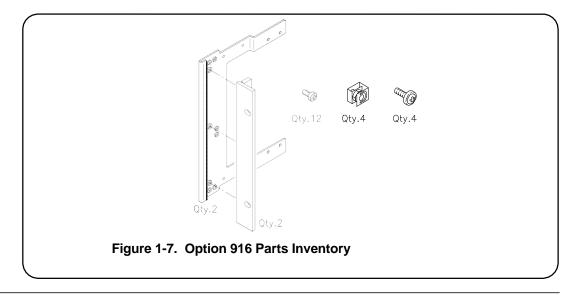

The Option 916 kit is not compatible with rack slides shown in Figure **1-10**.


### Option 909

The Option 909 kit includes the flanges and a set of front mount handles. This kit is designed to flush or recess mount the mainframe and provide handles for convenient removal and installation. The Option 909 is compatible with both rack slide and rail kits.

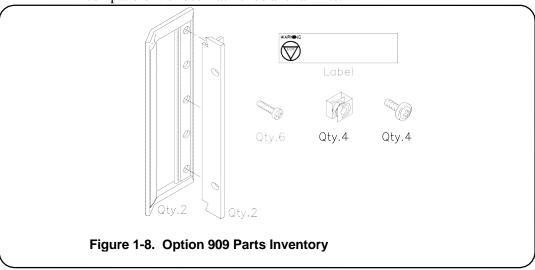


### **Rail Kit**

The rail kit is Agilent Part Number E3665A. This kit is designed to support the mainframe in a fixed position in the rack. It is compatible with all of the options listed in this section. The rail kit must be ordered separately from the option kits.

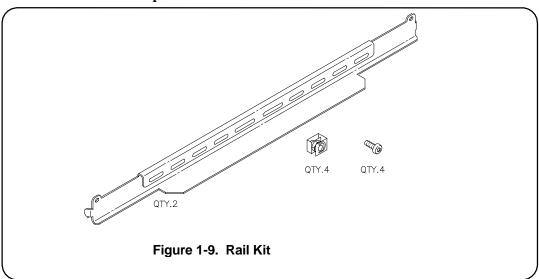


### **Rack Slides**

The rack slide kit is Agilent Part Number 1494-0060. This kit is designed to support the E1421B in the rack while allowing it to be slid in and out for greater access. The Rack Slide Kit is not compatible with Option 916 - Recess Rack Mount Kit. The Rack Slide Kit must be ordered separately from the options kits.

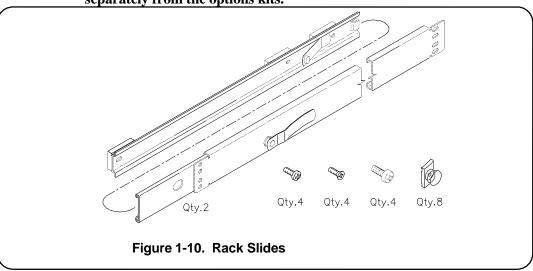


### **Adapter Bracket**


This bracket (Agilent Part Number 1494-0061) is designed for Rack Slides that are to be used in non-Agilent Racks.

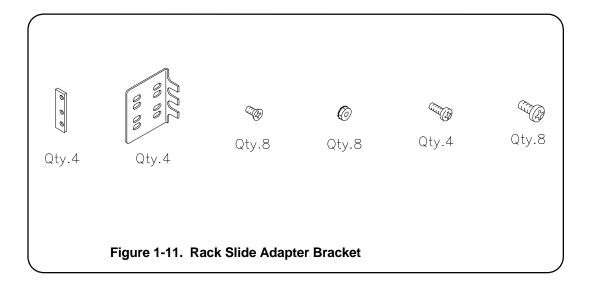

## Mounting the Rails or Rack Slides


Figures 1-12 and 1-13 show how to mount the rails or rack slides in the rack.

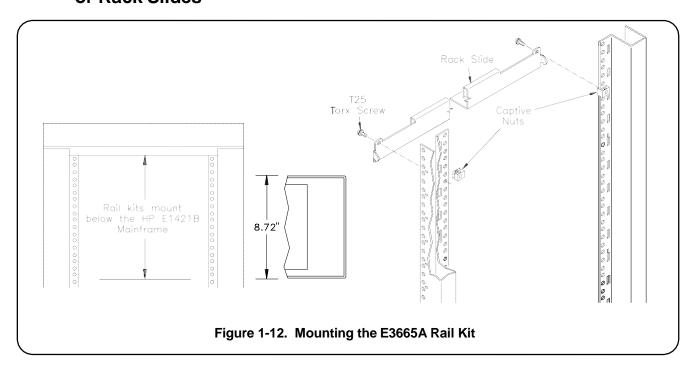


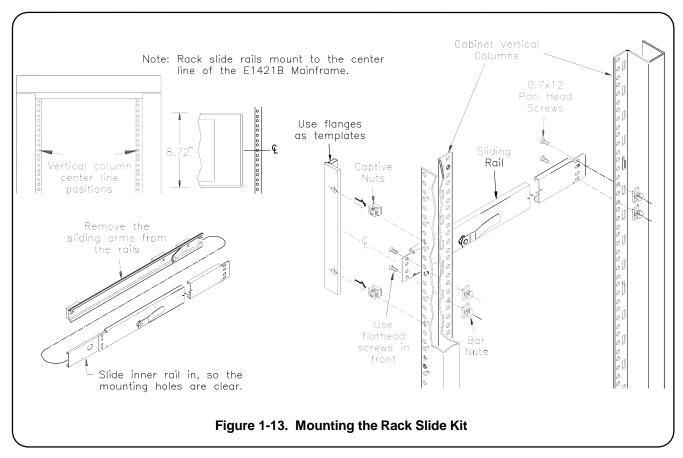

## Preparing the Mainframe


Figure 1-14 shows the steps that are needed to prepare the mainframe for rack mounting. Figure 1-15 shows how to attach the Option Kits to the mainframe.

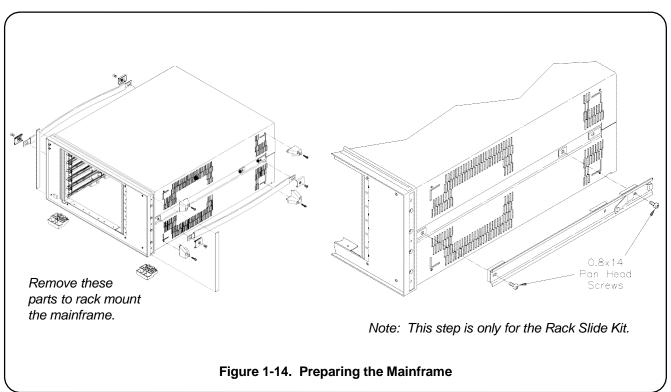

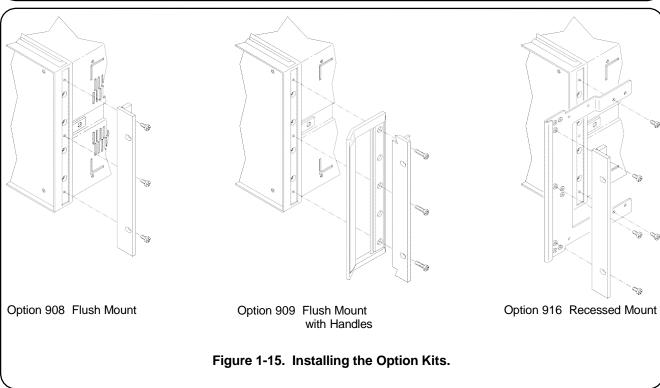

### Installing the mainframe

Figure 1-16 shows the final step to install the mainframe into the rack. Be sure to connect the mainframe power cord to the rack power supply. Figure 1-16 is shown with Option 908 Flush Mount Kit and the Rack Slide Kit.

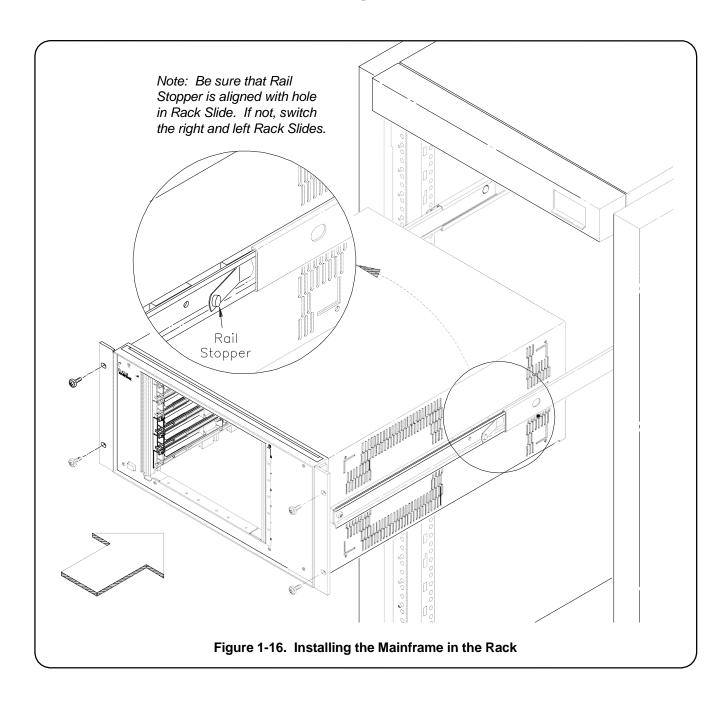

### WARNING Hazardous voltages may be present on modules. Prevent

electrical shock by covering all unused slots and securely


fastening all faceplates.

### **AVERTISSEMENT**

Des tensions dangereuses peuvent être présentes sur les modules. Éviter les chocs électriques en couvrant tous les emplacements inutilisés et fixer solidement tous les plastrons/caches.

### Intermodule Chassis Shield Kit

The Intermodule Chassis Shield Kit (Agilent Part Number E1409B) is the Agilent implementation of the VXIbus specification that allows grounded shielding between mainframe slots. Figure 1-17 shows how to install the E1409B in the E1421B mainframe. The E1409B can be ordered from your nearest Agilent Technologies Sales and Support Office.

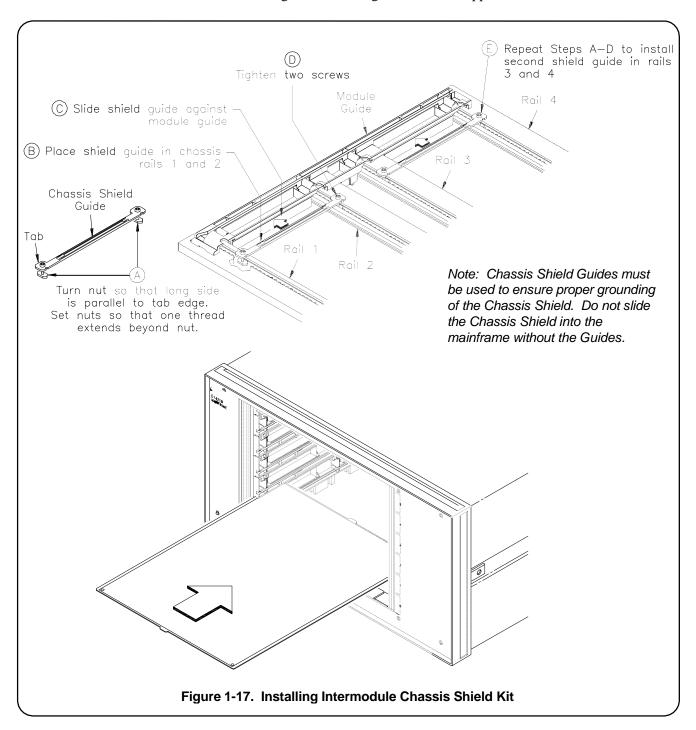

# Chapter 2 Replaceable Parts & Assemblies

There are no user servicable parts in the Agilent E1421B. Repair is limited to replacing the power supply module, the backplane module, or other mechanical parts only.

### Module Replacement

The power supply is available on an exchange basis. The backplane assembly should be replaced and not repaired (no exchange required on the backplane).

Power Supply	E1401-69202
Backplane	E1421-67500

### **Component Locator**

Refer to Figures 2-1 and 2-2 for component locator information.

### WARNING

There are no user servicable parts in the Agilent E1421B. Refer repair and servicing to trained service personnel.

### **AVERTISSEMENT**

Ne contient pas d'èlèment que l'utilisateur puisse rèparer. Confier les rèparations et la maintenance à un technicien qualifiè.

### **Cleaning Fan Filters**


The Agilent E1421B does not have any fan filters. Therefore it is not necessary to remove, clean, or replace the filters.


### **Agilent E1421B Replaceable Parts List**

Reference Designator	Agilent Part Number	Total Qty.	Description	Mfr. Code	Mfr. Part Number
A1 A2	E1421-67500 E1401-69202	1	PC ASSY BACKPLANE/INTERFACE POWER SUPPLY 650W	28480 28480	E1421-67500 E1401-69202
B1-B2 PNL1	3160-0864 E1421-04300	2	FAN - TBAX; 12V DC PANEL FRONT	28480 28480	3160-0864 E1421-04300
CBL2 CBL3 CR1 CVR1	E1401-61612 E1401-61610 1990-1027 E1421-04110	1 1 1	CABLE - PWR SWITCH LED CABLE - FAN LED - LMP COVER TOP	28480 28480 28480 28480	E1401-61612 E1401-61610 1990-1027 E1421-04110
F1	2110-0054	1	FUSE 15A, 250V NTD FE UL	75915	314015
MP94	1400-1502 E1421-81206 E1421-81206	1 3 3	CLIP - LED T - 1 RAILS VERTICAL RAILS VERTICAL	28480 28480 28480	1400-1502 E1421-81206 E1421-81206
MP98	E1421-00102 E1421-00103 E1421-04602	1 1 1	CHASSIS MAIN CHASSIS TOP PLENUM AIR	28480 28480 28480	E1421-0102 E1421-00103 E1421-04602
MP103-114	E1401-41202	12	CARD GUIDE	28480	E1401-41202
MP130 MP135-MP136	E1401-00203 5001-0541	1 2	BLANK PANEL (Fan Carrier) TRIM, SIDE	28480 28480	E1401-00203 5501-0541
MP137 MP138-MP141 MP142 MP143-MP146 MP149 MP150	5021-8407 5041-8801 5041-8802 5041-8821 E1421-81204 E1421-81205 E1421-21200 E1421-21201	1 4 1 8 1 1 2 2	FRAME, FM, FRONT FOOT, MOLD TRIM TOP STNDF - REAR PNL RAIL FRONT LEFT RAIL FRONT RIGHT NUT BARS FRONT NUT BARS REAR	28480 28480 28480 28480 28480 28480 28480 28480 28480	5021-8407 5041-8801 5041-8802 5041-8821 E1421-81204 E1421-81205 E1421-21200 E1421-21201
MP1 MP2 MP3	5041-8819 5062-3704 54710-62501	2 2 2	CAP - STRP HDL FRT STRAP HDL 18 IN CAP STRAP HANDLE	28480 28480 28480	5041-8819 5062-3704 54710-62501
PNL2-PNL3 PNL5	E1400-00209 E1400-00203	2	FILLER PANEL ONE SLOT FILLER PNL - 3 SLOT	28480 28480	E1400-00209 E1400-00203
X1	2110-0565	1	FUSEHOLDER CAP 15A MAX	28480	2110-0565

**WARNING** For continued fire protection replace fuse with same type and rating.

**AVERTISSEMENT** Pour une protection continue contre le feu, remplacer le fusible par un fusible de même type et le même classe.

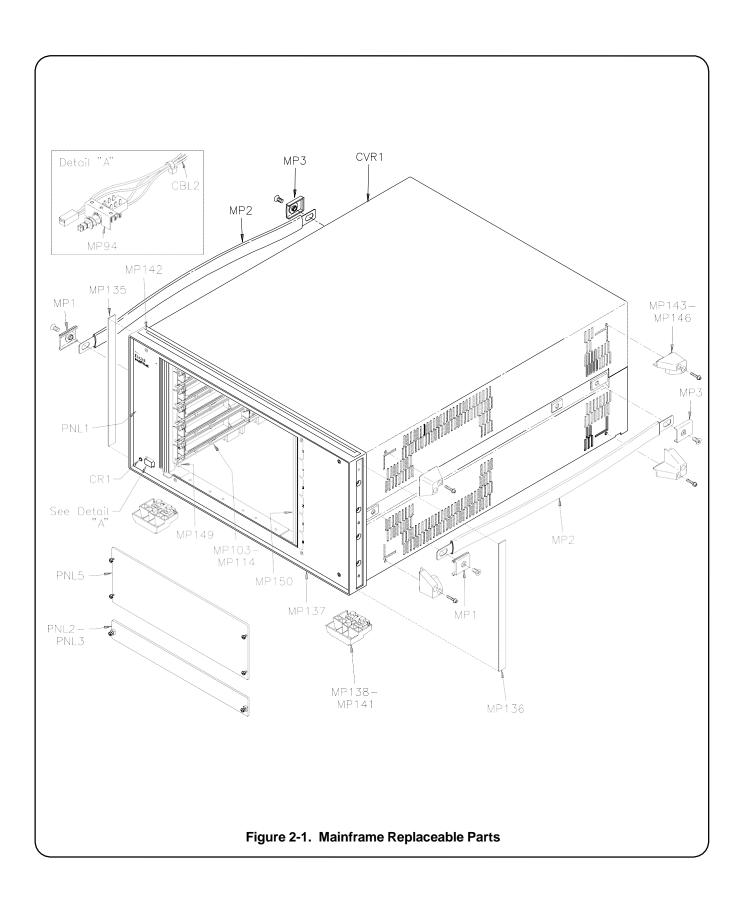


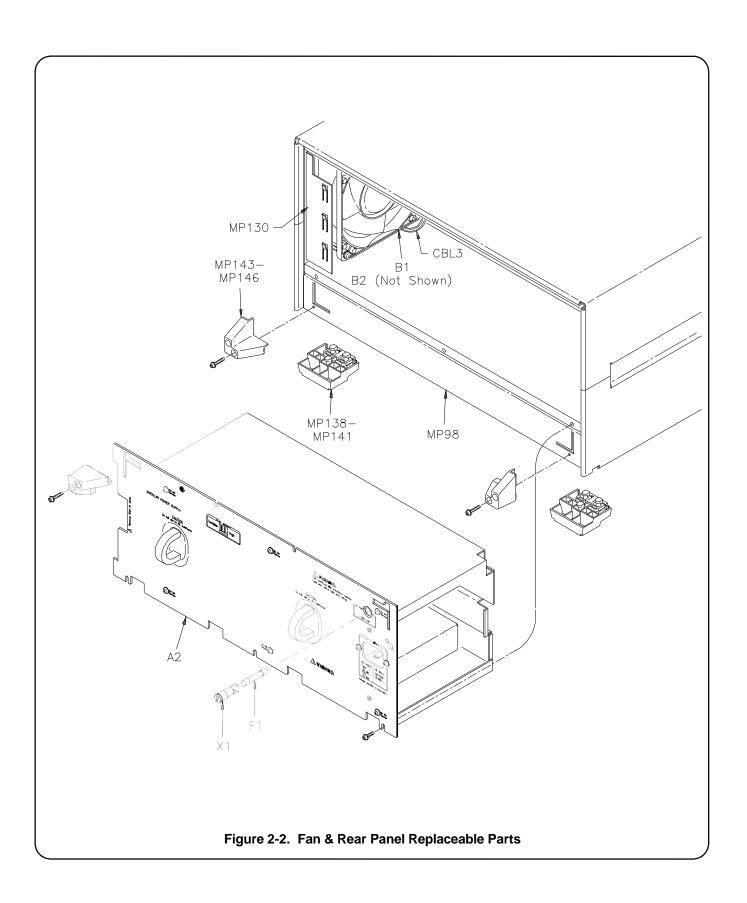

# **Appendix A Specifications**

The Agilent E1421B mainframes are 100% compatible with VXIbus specification revision 1.4.

### **Overall Mainframe Size**

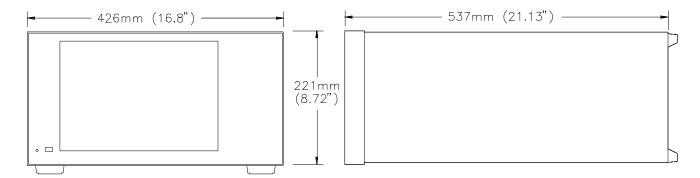

**Mainframe Weight** Agilent E1421B: 15.0 Kg (33.0 lbs) with no modules installed.

**Module Size** Six (6) C-Size slots. The mainframes also accept A- or B- Size modules using the optional Agilent E1403 Module Carrier.

**Input Power** 50 - 60 Hz Input Power:

Automatic Voltage Ranging, nominal range:  $100 - 240 \text{ Vac} \pm 10\%$ 

Nominal Frequency Range:50 - 60 Hz  $\pm 10\%$ 

400 Hz Input Power:

Nominal Voltage Range: 100 - 120 VAC ±10%

Nominal Frequency:  $400 \, \text{Hz} \pm 10\%$ 

**DC Input Power:** 

Input Voltage Range: 100 VDC minimum - 370 VDC maximum

**General Power Supply** Power Factor Corrected

Power Switch: On/Standby with lighted indicator in front.

Inrush Current: 40A max Designed to meet EN-60555-2

Socket for detachable line cord: IEC 320 "HOT"

Chassis ground tap on rear panel: M4 x 0.7 threaded insert.

### Fuse:

Voltage	Maximum Current	Fuse
100Vac	15A	15AF
120Vac	12A	15AF
220-240Vac	8A	15AF

### **Power Supply Outputs**

DC Output Voltage	Peak DC Output Current (IMP*) 55 °C	P-P Dynamic Current (IMD**)
+5V	45A	5.0A
+12V	8A	2.5A
-12V	8A	2.5A
+24V	8A	4.0A
-24V	8A	4.0A
-5.2V	40A	5.0A
-2V	15A	3.5A

<sup>\*</sup> IMP = Rated mainframe peak DC output current as defined by the VXIbus Specification.

current vs. frequency curve.

### VXI Ripple/Noise\*

DC Output Voltage	Allowed Variation	Max. DC Load Ripple/Noise	Max. Induced Ripple/Noise
+5V +12V -12V +24V -24V -5.2V -2V	+0.25/-0.125 +0.06/-0.36 -0.60/+0.36 +1.2/-0.72 -1.2/+0.72 -0.26/+0.156 -0.10/+0.10	50 mV 50 mV 50 mV 150 mV 150 mV 50 mV	50 mV 50 mV 50 mV 150 mV 150 mV 50 mV

<sup>\*</sup> Per VXI Specification rev. 1.4

**Humidity** Up to 65% relative humidity from 0 to 40  $^{\circ}$ C

**Temperature Range** Non-operating:-40 °C to +75 °C

Operating: 0°C to 55 °C

<sup>\*\*</sup> IMD = Rated mainframe peak-to-peak dynamic current as defined in the VXIbus Specification by a

### **Shock** Operating, Functional:

Random:  $0.0001 \text{ g}^2/\text{Hz}$ , 5-500 Hz, ~0.21 Grms, 10 min/axis.

Survival:

Swept Sine: 5-500 Hz resonant search, 1 Octave/min sweep rate, 5 min

dwell at resonance.

Random:  $0.015 \text{ g}^2/\text{Hz}$ , 5-500 Hz, ~2.09 Grms, 10 min/axis.

### **Vibration** End use, Handling:


Less than 45.5 kg: Half sine waveform, <3ms duration, velocity change depending on weight.

Greater than 45.5 kg: 10.2 cm free fall tilt drop.

Transportation:

Trapezoidal waveform, velocity change dependent on weight, minimum acceleration 30 g.

### **Cooling Provided**

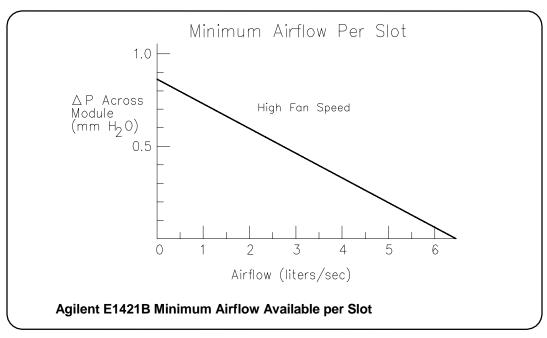

Fan set to "Variable": Quiet operation (approx. 75% airflow) at <30 °C ambient temperature and high speed operation at >40 °C ambient temperature.

Fan set to "HIGH": Full airflow all the time.

For modules with typical density:

10 °C rise at 60W per slot

15 °C rise at 75W per slot

### **Acoustical Noise** Low fan speed: 53 dBA sound pressure at bystander position.

Lpa = 53 dB fiktiver Arbeitsplatz, normalier Betrieb, nach DIN 45635 T.1 High fan speed: 59 dBA sound pressure at bystander position.

Lpa = 59 dB fiktiver Arbeitsplatz, normalier Betrieb, nach DIN 45635 T.1

**EMC Testing** Meets requirements of CISPR 11 Level A.

**Module Weight** Maximum 3.5 Kg (7.7 lbs) per slot to comply with vibration and shock specifications. Heavier modules may be installed if vibration and shock environment is less severe.

**Safety** IEC 348, UL 1244, and CSA C22.2 #231.