

# Keysight Technologies

## U3042AE08

Notice: This document contains references to Agilent. Please note that Agilent's Test and Measurement business has become Keysight Technologies. For more information, go to [www.keysight.com](http://www.keysight.com)

# Notices

## Copyright Notice

© Keysight Technologies. 2011-2020

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies, Inc. as governed by United States and international copyright laws.

## Trademark Acknowledgments

## Manual Part Number

U3042-90002

## Edition

Edition 6, October 2020

Supersedes: March 2019

## Printed in:

Printed in USA

## Published by:

Keysight Technologies Inc  
1400 Fountaingrove Parkway  
Santa Rosa, CA 95403

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## What's Changed

In this document the terms "master" and "slave" have been replaced with "primary" and "secondary."

## U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFARS 227.7103-5 (c), as applicable in any technical data.

## Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

## Safety Notices

### CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

### WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

## Table of Contents

### U3042AE08

|   |    |
|---|----|
| Introduction.....   | 7  |
| Description .....   | 8  |
| Measurement Application Note .....                              | 8  |
| Verifying the Shipment .....                                    | 8  |
| Network Analyzer Requirement .....                              | 9  |
| Available Options .....   | 10 |
| Test Set Options .....  | 10 |
| Accessory Options .....   | 10 |
| Network Analyzer Interface Kit Options .....                    | 10 |
| General Specifications.....                                     | 11 |
| Power Requirements .....  | 11 |
| Environmental Requirements .....                                | 12 |
| Environmental Tests .....                                       | 12 |
| Equipment Heating and Cooling .....                             | 12 |
| Required Conditions for Accuracy Enhanced Measurement .....     | 12 |
| Dimensions and Space Requirements .....                         | 12 |
| Frequency Range and Maximum Power Levels .....                  | 13 |
| Typical Reflection Tracking .....                               | 14 |
| Front and Rear Panel Features.....                              | 15 |
| Test Ports – 3.5 mm Bulkhead (male).....                        | 15 |
| Access Ports – SMA (female) .....                               | 15 |
| Chassis Ground .....  | 15 |
| Test Port LEDs .....  | 15 |
| Control Lines and Voltage Adjust .....                          | 15 |
| Standby Switch .....  | 16 |
| Active LED .....  | 16 |
| Bias Tee Input (Option 002).....                                | 16 |
| Chassis Ground .....  | 16 |
| Pass Through Interface .....                                    | 16 |
| Test Set Interface.....   | 16 |
| Line Module .....   | 17 |
| Available Fuses .....   | 17 |
| Hardware Lock-link Installation (U3021-60001) .....             | 18 |
| Locking the Test Set to the PNA-L .....                         | 18 |
| Hardware Lock-link Installation (U3021-60002) .....             | 21 |
| Locking the Test Set to the PNA-X .....                         | 21 |
| PNA-L RF Interface Cable Connections (U3021-60045) .....        | 24 |
| PNA or PNA-X RF Interface Cable Connections (U3021-60047) ..... | 26 |
| Test Set I/O Cable Installation .....                           | 28 |
| Interconnect Cable Verification .....                           | 28 |
| System Operational Checks .....                                 | 29 |
| Equipment Setup.....  | 29 |
| Verify Results.....   | 29 |
| Controlling the Test Set .....                                  | 36 |
| Typeface Key Conventions .....                                  | 36 |
| Definitions for Specifications.....                             | 36 |

## Table of Contents

|  |    |
|--|----|
| Analyzer Multiport Mode for Option 551                 | 37 |
| How to Access Multiport Mode                           | 37 |
| External Test Set Control Feature                      | 38 |
| Trace Measure S-Parameter                              | 39 |
| New Trace Measure S-Parameter                          | 39 |
| Sweep Setup for Multiport and Standalone Modes         | 42 |
| Sweep Setup for PNA-X N52xxB Models                    | 43 |
| RF Path Configuration with Option 029                  | 44 |
| N-Port Calibration with Analyzer                       | 45 |
| Interface Control Mode                                 | 47 |
| Overview of the Interface Control                      | 47 |
| How to Access Interface Control Mode                   | 47 |
| Using Interface Control Mode                           | 48 |
| SCPI Control Mode                                      | 50 |
| Overview of the SCPI Control                           | 50 |
| How to Access the Command Processor                    | 51 |
| SCPI Command Processor Console                         | 52 |
| Address and Data Values                                | 54 |
| Setting the Test Port Paths with Address and Data      | 54 |
| Control Lines  | 56 |
| Internal Voltage Supply Configuration                  | 58 |
| External Voltage Supply Configuration                  | 59 |
| Setting the Control Lines with Address and Data Values | 60 |
| Cal Kit Operational Check                              | 62 |
| Equipment Required                                     | 62 |
| Verification Limits                                    | 63 |
| Operational Check Procedure                            | 64 |
| Preparing the N5230C or N5242A/B                       | 64 |
| 1-Port Calibration and Verification Procedure          | 65 |
| Cal Set Verification                                   | 66 |
| Reflection Tracking Plot Examples                      | 68 |
| Verifying Cal Kit Operational Check Failures           | 70 |
| ECal Confidence Check                                  | 70 |
| Service Information                                    | 71 |
| Electrostatic Discharge Protection                     | 71 |
| Replaceable Parts                                      | 71 |
| System Block Diagram                                   | 74 |
| Theory of Operation                                    | 77 |
| RF Coupler/Bridges                                     | 77 |
| RF Switch Components                                   | 77 |
| Test Set Switch Paths                                  | 78 |
| PNA-X Switch Paths                                     | 79 |
| Troubleshooting the Test Set                           | 80 |
| Non-RF Failures  | 80 |
| RF Switching Path Test                                 | 83 |
| Equipment Required                                     | 83 |
| Equipment Setup  | 83 |
| Source and Receiver Path Tests                         | 83 |
| Connection Tables and Diagrams                         | 89 |



# Table of Contents

- Safety and Information ..... 92
  - Introduction ..... 92
  - Safety Earth Ground ..... 92
  - Statement of Compliance ..... 92
  - Connector Care and Cleaning Precautions..... 92
  - Before Applying Power ..... 93
- Regulatory Information ..... 95
  - Instrument Markings ..... 95
- Keysight Technical Support and Services ..... 97
  - Contacting Keysight ..... 97
  - Shipping Your Product to Keysight for Service or Repair..... 97

---

U3042AE08

## Introduction

This document describes how to use and service the U3042AE08 Multiport Test Set Extension.

Figure 1 N5230C 4-Port PNA-L with U3042AE08


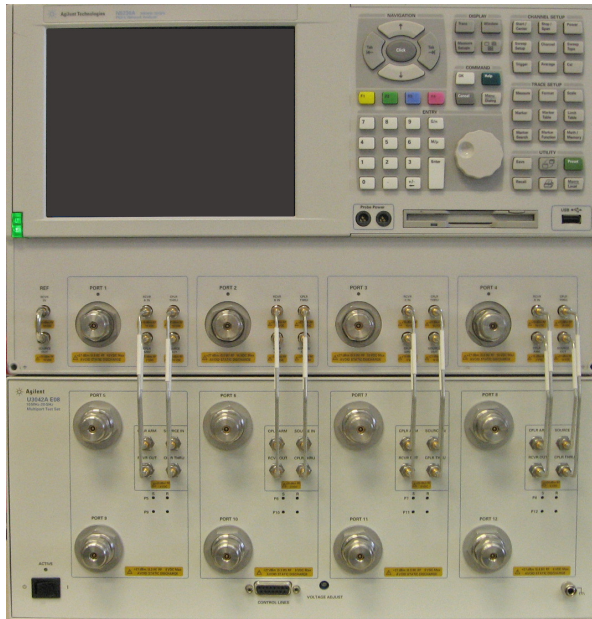


Figure 2 N5242A 4-Port PNA-X with U3042AE08

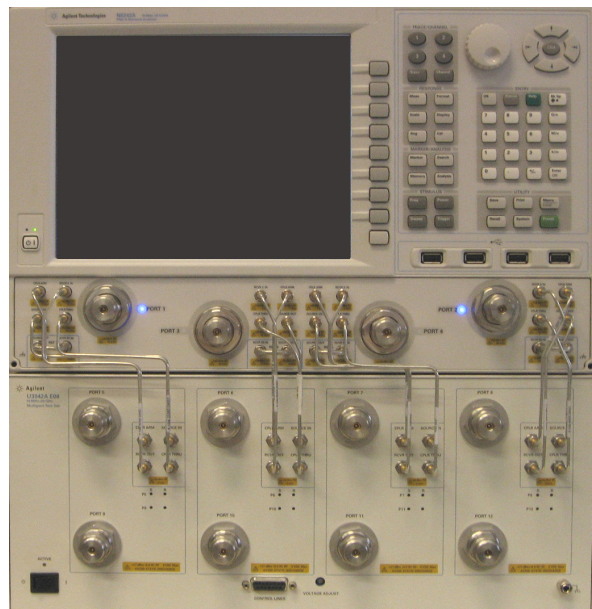

## Description

The U3042AE08 is a Multiport Test Set that adds 8 ports to extend the 4-Port network analyzer to 12 full crossbar test ports with N-Port calibration capability.

The U3042AE08 has the following key features:

- 8 test ports (3.5 mm male connectors)
- High speed, solid state RF switching
- Frequency Range of Operation: 10 MHz to 26.5 GHz
- Keysight PNA compatibility with rear panel Test Set I/O interface for operational control. The PNA Option 551 is required. An external personal computer is not required.

### NOTE

The N5222A/B PNA, N5232A/B PNA-L and N5242A/B PNA-X Network Analyzers will be referred to throughout this document as the PNA, PNA-L and PNA-X. Analyzer refers to all series of PNA, PNA-L and PNA-X. The U3042AE08 will be referred to as the Test Set. The N5221A/B, N5231A/B and N5241A/B can be used, but will limit the frequency range to 13.5 GHz.

## Measurement Application Note

### Low Loss DUT Measurements

Low loss trace stability is a product of switch repeatability and calibration technique. Low insertion loss measurements exhibiting 0.1 dB of uncertainty is not uncommon.

## Verifying the Shipment

To verify the contents shipped with your product, refer to the “Box Content List” included with the shipment.

Inspect the shipping container. If the container or packing material is damaged, it should be kept until the contents of the shipment have been checked mechanically and electrically. If there is physical damage refer to [“Contacting Keysight” on page 97](#). Keep the damaged shipping materials (if any) for inspection by the carrier and an Keysight Technologies representative.

Table 1 U3042AE08 Accessories Supplied

| Description              | Part Number | Quantity |
|--------------------------|-------------|----------|
| Short, 3.5 mm (female)   | 85052-60007 | 1        |
| User's and Service Guide | U3042-90002 | 1        |

## Network Analyzer Requirement

All network analyzers require Option 551 for multiport operation (N-Port error correction and measurement capability). **Table 2** provides a listing of other network analyzer option requirements. The analyzer's frequency range must be equal to or exceed that of the test set so that the measurement system covers the full frequency range of the test set.

The test set files indicated in **Table 2** must be installed into the analyzer's file directory:  
c:\Program Files\Keysight\Network Analyzer\testsets

Table 2 Network Analyzer Configuration Requirements

| 4-Port Network Analyzer   | Options              | Test Set File         | System Figure         |
|---------------------------|----------------------|-----------------------|-----------------------|
| N5221A/B & N5222A/B PNA   | 401, 417, or 419     | u3042ae08_pnax_p4.tsx | Figure 2 <sup>1</sup> |
| N5230A/C PNA-L            | 145, 146 or 245, 246 | u3042ae08_p4.tsx      | Figure 1 <sup>1</sup> |
| N5231A/B & N5232A/B PNA-L | 416                  | u3042ae08_p4.tsx      | Figure 1 <sup>1</sup> |
| N5241A/B & N5242A/B PNA-X | 400                  | u3042ae08_pnax_p4.tsx | Figure 2              |

1. The image does not show the exact analyzer, but the port configuration is similar.

Ensure that the network analyzer has the latest firmware version installed. The following web site links provide the necessary information needed:

- Network Analyzer - <http://www.keysight.com/find/pna>
- U3042AE08 Test Set Files - <http://na.support.keysight.com/multiport/testsetsupport.html>
- Firmware PNA - <http://na.support.keysight.com/pna/firmware/firmware.html>

## Available Options

### Test Set Options

The test set has one available option: Refer to “[System Block Diagram](#)” on page 74.

- Option 700 - Standard, Solid-State switches (no Option 001 or 002 on the serial tag)
- Option 001 - (Discontinued) Solid-state switches with amplifiers to improve dynamic range
- Option 002 - (Discontinued) Solid-state switches with amplifiers and bias-tees for each port

The Options 001 and 002 limit the frequency range due to blocking capacitors in the bias tee and amplifiers' performance. Bias tees degrade frequencies below 45 MHz and amplifiers degrade performance below 45 MHz and above 20 GHz.

### Accessory Options

Available options for system cabinet mounting:

- U3042AE08-1CM Rack Mount Kit without Handles (5063-9215)
- U3042AE08-1CP Rack Mount Kit with Handles (5063-9222)
- U3042AE08-1CN Front Handle Kit (5063-9228)

### Network Analyzer Interface Kit Options

The U3042AE08 requires one of the following kits to interface the test set with your network analyzer. The interface kit model option includes the hardware lock-link and cable kit listed in [Table 3](#).

Table 3 Interface Kit Options

| 12-Port System                         | Interface Kit Option | Hard ware Lock-link      | Cable Kit Connector Type           |
|--|----------------------|--------------------------|------------------------------------|
| N5221A/B & N5222A/B PNA                | U3021PL3 Opt 442     | U3021-60002 <sup>1</sup> | U3021-60047 <sup>2</sup> , SMA m/m |
| N5230A/C, N5231A/B<br>& N5232A/B PNA-L | U3021PL3 Opt 430     | U3021-60001 <sup>3</sup> | U3021-60045 <sup>4</sup> , SMA m/m |
| N5241A/B & N5242A/B PNA-X              | U3021PL3 Opt 442     | U3021-60002 <sup>1</sup> | U3021-60047 <sup>2</sup> , SMA m/m |

1. “[Hardware Lock-link Installation \(U3021-60001\)](#)” on page 18.
2. “[PNA-L RF Interface Cable Connections \(U3021-60045\)](#)” on page 24.
3. “[Hardware Lock-link Installation \(U3021-60002\)](#)” on page 21.
4. “[PNA or PNA-X RF Interface Cable Connections \(U3021-60047\)](#)” on page 26.

## General Specifications

Specifications for the test set are characteristic for the system performance of the analyzer and test set. Actual performance of the system is based on the customers analyzer and options that are used with the test set. A functional certificate is only offered for the U3042AE08.

When connected to a network analyzer, this test set will degrade the performance at the test ports. The internal switch paths reduce test port power and power to the receivers. This affects the test port power of the analyzer and also reduces dynamic range. The reflection tracking values measured in the **“Cal Kit Operational Check”** on page 62 can be subtracted from the analyzers dynamic range to determine the approximate performance of the system.

## Power Requirements

Verify that the required ac power is available before installing the test set to the analyzer.

- 100/120/220/240 VAC (50/60Hz)
- U3042AE08 maximum power is 350 W. Refer to your network analyzer’s documentation for maximum wattage to calculate the total needed.
- The instruments can operate with mains supply voltage fluctuations up to  $\pm 10\%$  of the nominal voltage.
- Air conditioning equipment (or other motor-operated equipment) should not be placed on the same AC line that powers the test set and analyzer.

### WARNING

This is a Safety Class I product (provided with a protective earthing ground incorporated in the power cord). The mains plug shall only be inserted into a socket outlet provided with a protective earth contact. Any interruption of the protective conductor, inside or outside the instrument, is likely to make the instrument dangerous. Intentional interruption is prohibited.

---

## Environmental Requirements

Refer to your analyzer's standard documentation for environmental requirements. The PNA-L provides front panel access to the source outputs, receiver inputs and couplers for use with multiport test sets.

### Environmental Tests

The test set complies with all applicable safety and regulatory requirements for the intended location of use.

- Pressure Altitude (Operation)  
3,000 meters (~10,000 feet)
- The instrument can safely operate in a relative humidity of 80% for temperatures to 31 degrees C, decreasing linearly to 50% relative humidity at 40 degrees C.

### Equipment Heating and Cooling

If necessary, install air conditioning and heating to maintain the ambient temperature within the appropriate range. Air conditioning capacity must be consistent with the BTU ratings.

#### CAUTION

Ventilation Requirements: When installing the instrument in a cabinet, the convection into and out of the instrument must not be restricted. The ambient temperature (outside the cabinet) must be less than the maximum operating temperature of the instrument by 4 °C for every 100 watts dissipated in the cabinet. If the total power dissipated in the cabinet is greater than 800 watts, forced convection must be used.

### Required Conditions for Accuracy Enhanced Measurement

Accuracy-enhanced (error-corrected) measurements require the ambient temperature of the analyzer and test set to be maintained within  $\pm 1$  °C of the ambient temperature at calibration.

### Dimensions and Space Requirements

Standard installation of the test set and analyzer includes configuration and installation on a customer provided lab bench or table top of adequate size and strength. For weight, dimensions and space requirements, refer to the network analyzer documentation that is used to configure the test set.

#### CAUTION

The network analyzer is heavy. It is recommended that two individuals, or a mechanical lift be used to lift or transport the instrument.

Table 4 Instrument Dimensions

| Model     | Weight          | Height           | Width             | Depth           |
|-----------|-----------------|------------------|-------------------|-----------------|
| U3042AE08 | 12 kg (26.5 lb) | 19.1 cm (7.5 in) | 42.5 cm (16.7 in) | 43.2 cm (17 in) |



## Frequency Range and Maximum Power Levels

### NOTE

When the test set is configured with your network analyzer, the system frequency range of operation will be determined by the frequency range limits of this combination.

Table 5 Usable Frequency Range

| Model                             | Standard           | 001 or 002   |
|-----------------------------------|--------------------|--|
| N5230C, N5231A/B & N5232A/B PNA-L | 10 MHz to 20 GHz   | 10 MHz to 20 GHz   |
| N5222A/B PNA & N5242A/B PNA-X     | 10 MHz to 26.5 GHz | 10 MHz to 26.5 GHz<br>(significantly degraded<br>performance above 20 GHz) |

### CAUTION

It is recommend that you do not operate components near damage levels (+30 dBm). The power levels must be 3 dB below maximum level to ensure no damage.

Table 6 Power Levels

| Maximum U3042AE08 Test Port<br>RF Power Level: |         |
|--|---------|
| PORT 5-12                                      | +27 dBm |
| Maximum U3042AE08 Access Ports:                |         |
| SOURCE OUT                                     | +20 dBm |
| CPLR ARM                                       | +20 dBm |
| CPLR THRU                                      | +20 dBm |
| RCVR OUT                                       | +20 dBm |

### NOTE

Refer to your analyzer's specifications to determine the maximum input power levels for the analyzer's access and test ports, or to optimize the power levels in the receivers.

### NOTE

Damage and maximum levels are not necessarily the optimum level.

## Typical Reflection Tracking

Specifications for the test set are typical. System performance for the analyzer and test set are only characteristic and intended as non warranted information.

### NOTE

Typical specifications are based on 1 to 2 units performance. Refer to [Table 6](#) and [Table 7](#) below, and [Table 17](#) and [Table 18 on page 63](#).

Table 7 Typical Reflection Tracking N5230C & N5232A/B

| Frequency                      | Standard 700 | Option 001 | Option 002 |
|--------------------------------|--------------|------------|------------|
| 300 kHz to 10 MHz <sup>1</sup> | -80          | -100       | -100       |
| 10 MHz to 4 GHz                | -2           | +2         | +1         |
| 4 GHz to 6 GHz                 | -7           | +1         | +0         |
| 6 GHz to 10.5 GHz              | -8           | -2         | -3         |
| 10.5 GHz to 13.5 GHz           | -13          | -3         | -4         |
| 13.5 GHz to 15 GHz             | -15          | -3         | -4         |
| 15 GHz to 20 GHz               | -20          | -13        | -15        |


1. Generally improves at 3 MHz to -6 dBm.

Table 8 Typical Reflection Tracking N5222A/B & N5242A/B

| Frequency          | Standard 700 | Option 001 | Option 002 |
|--------------------|--------------|------------|------------|
| 10 MHz to 50 MHz   | -2           | +5         | +4         |
| 50 MHz to 500 MHz  | -3           | +5         | +4         |
| 500 MHz to 3.2 GHz | -8           | +2         | +1         |
| 3.2 GHz to 10 GHz  | -12          | -2         | -3         |
| 10 GHz to 16 GHz   | -15          | -4         | -5         |
| 16 GHz to 20 GHz   | -20          | -13        | -15        |
| 20 GHz to 24 GHz   | -24          | -21        | -23        |
| 24 GHz to 26.5 GHz | -25          | -35        | -37        |

## Front and Rear Panel Features

Figure 3 Front Panel (Multiport Test Set)

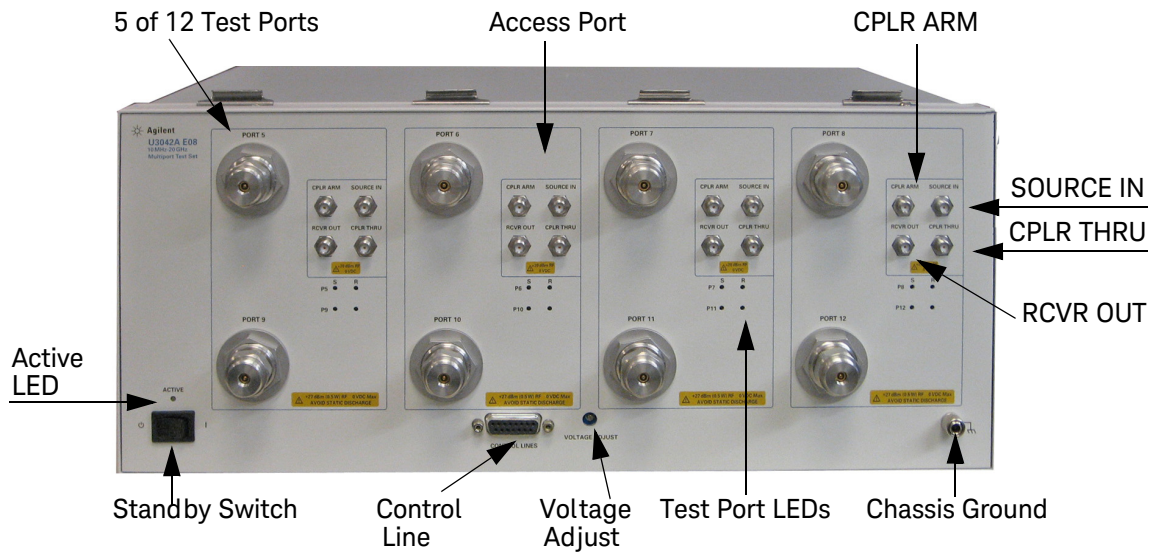

### Test Ports – 3.5 mm Bulkhead (male)

- Port 5–12

### Access Ports – SMA (female)

- SOURCE OUT
- CPLR THRU
- CPLR ARM
- RCVR (A-D) OUT

### Chassis Ground

Chassis ground that is provided for ESD and safety connection.

### Test Port Status LEDs

- An illuminated LED indicates an active port in Source or Receiver mode. On the front panel, “S” indicates Source test ports and “R” indicates Receiver test ports.

### Control Lines and Voltage Adjust

For further information pertaining to control lines and voltage adjustments see [“Control Lines” on page 55](#).

## Standby Switch

Note that this switch is Standby only, not a line switch. The main power cord can be used as the system disconnecting device. It disconnects the mains circuits from the mains supply.


## Active LED

When the Test Set is connected and addressed by a PNA-X, the LED is ON (illuminated). The LED is OFF (not illuminated) when the Test Set is in Standby, or not addressed by the PNA-X.

### NOTE

When the two Test Sets are connected together, as in the multi-Test Set system, the first Test Set connected to the PNA-X will never have an ON Active LED. Instead, the last Test Set in the I/O cable chain will show the "Active LED" status for all.

Figure 4 Rear Panel (Multiport Test Set)

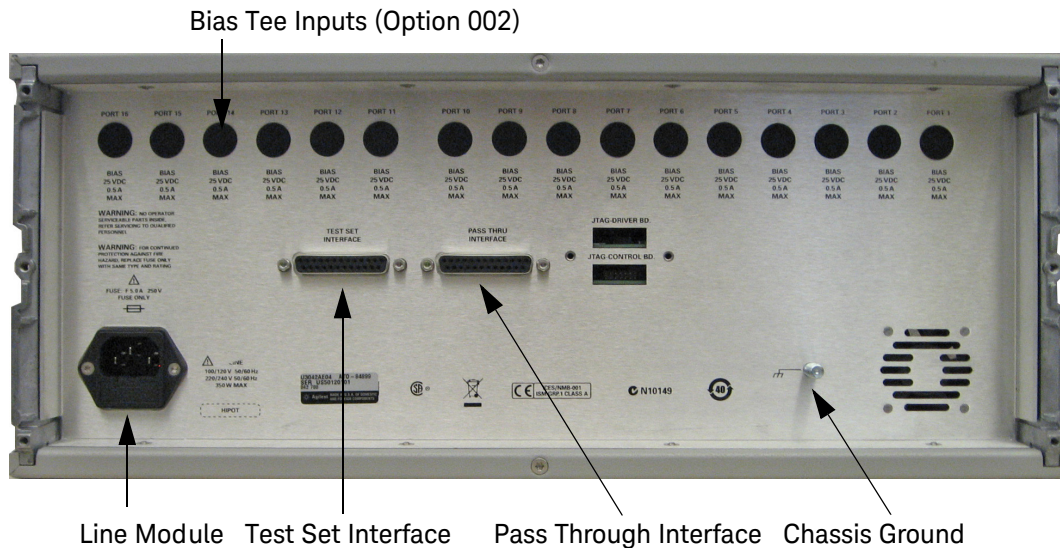

## Bias Tee Input (Option 002)

BNC Input connectors for Option 002.

## Chassis Ground

A threaded terminal post for connecting the test set to a conductive object, cabinet or structure to ensure a common potential and reduce leakage current in a system. Requires an English 1/4-20 thread nut (2950-0004) and lock washer (2190-0067).

## Pass Through Interface

Connection to another test set.

## Test Set Interface

The test set Interface connector is used to send address and data to the test set from the analyzer.

## Line Module

The line fuse, as well as a spare, reside within the line module. **Figure 5** illustrates where the fuses are located and how to access them.

### Available Fuses

- Fuse (F 5 A/250V, 2110-0709) UL listed and CSA certified

#### **WARNING**

For continued protection against a fire hazard, replace the line fuse only with the same type and rating. The use of other fuses or material is prohibited.

---

Figure 5      Line Fuse



#### **CAUTION**

Verify that the premise electrical voltage supply is within the range specified on the instrument.

---

## Hardware Lock-link Installation (U3021-60001)

### **WARNING**


The opening of covers or removal of parts is likely to expose dangerous voltages. Disconnect the instrument from all voltage sources while it is being opened.

---

### Locking the Test Set to the PNA-L

1. The lock-link kit (U3021-60001) includes:
  - 5023-9253 - Lock-link kit (left, 5022-2816 & right 5022-2817), Test Set
  - 5023-0132 - Lock-link kit (left, right and screws), Analyzer
2. Remove the feet from the bottom of the network analyzer.
3. Remove the 2 lower standoffs from the rear panel on the analyzer using a T20 torx driver.


Figure 6      Rear Bottom Feet

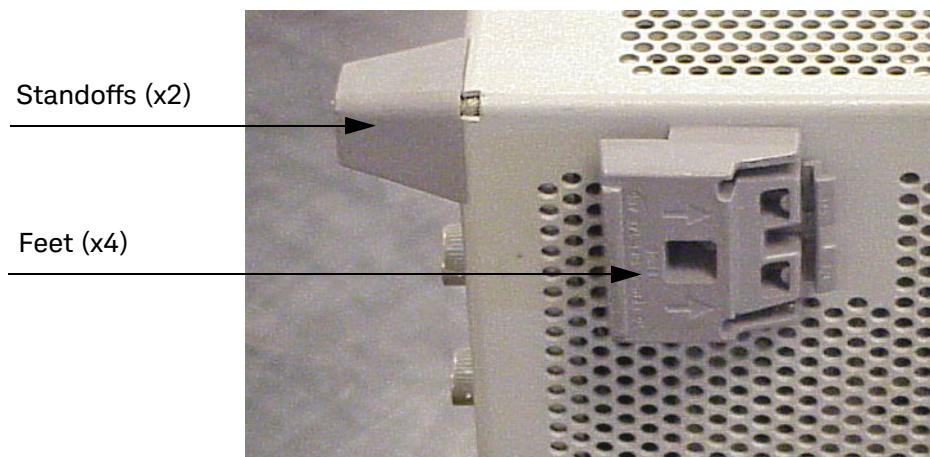




4. Install the lower lock-links (left not shown) onto the analyzer.

Figure 7 Install Lock-links to the Analyzer

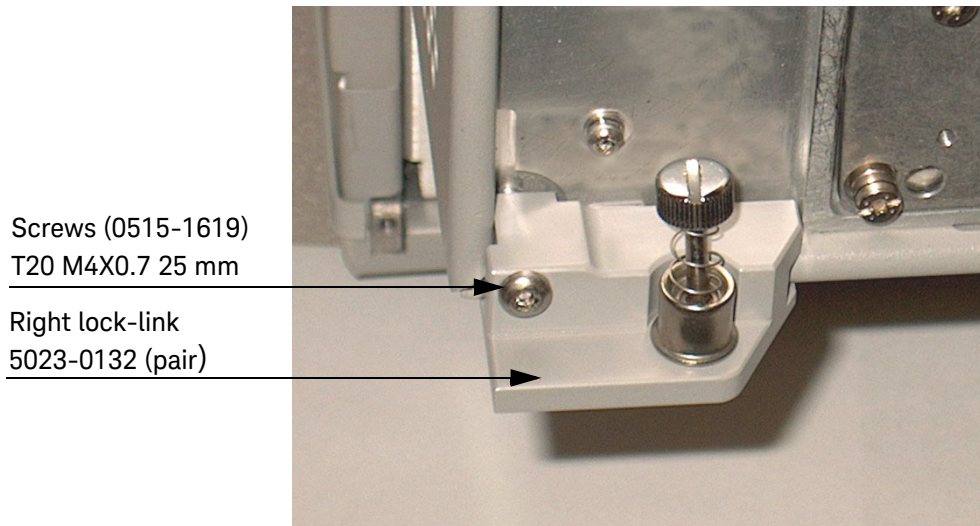


5. Remove the two upper standoffs from the rear panel on the test set using a T20 Torx driver.
6. Install the left and right lock-links onto the test set.

Figure 8 Rear Lock-links to the Test Set

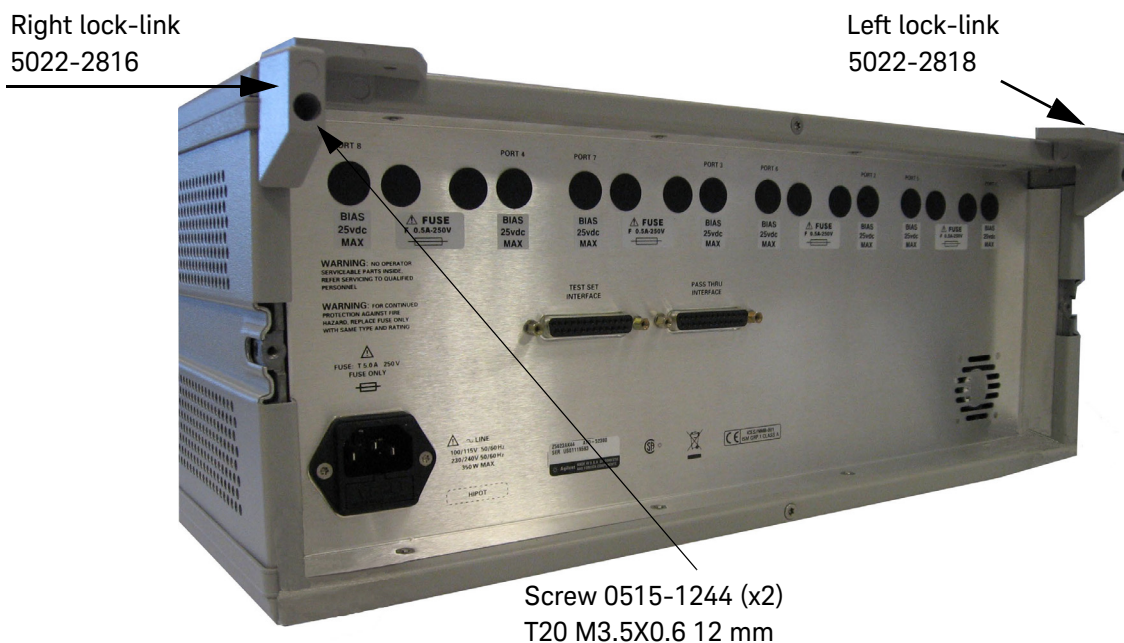


7. Place the network analyzer on top of the test set and ensure that the front frame of the network analyzer is positioned slightly forward of the locks that are attached to the test set. Slide the network analyzer back so the locks engage the front frame of the analyzer.

Figure 9 Locking the Analyzer

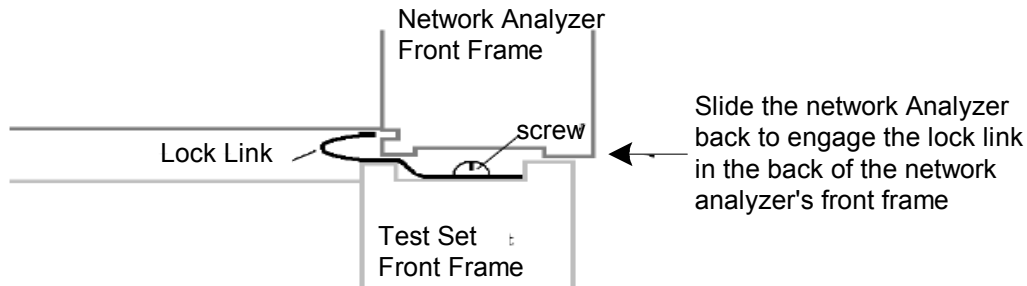

8. Secure the network analyzer's lower locking feet to the test set upper locking feet using the spring-loaded screws. If the analyzer's lock-links are not aligned with the screw holes, loosen the screws securing the feet to the instrument to align and tighten.

Figure 10 Lock-link Secured

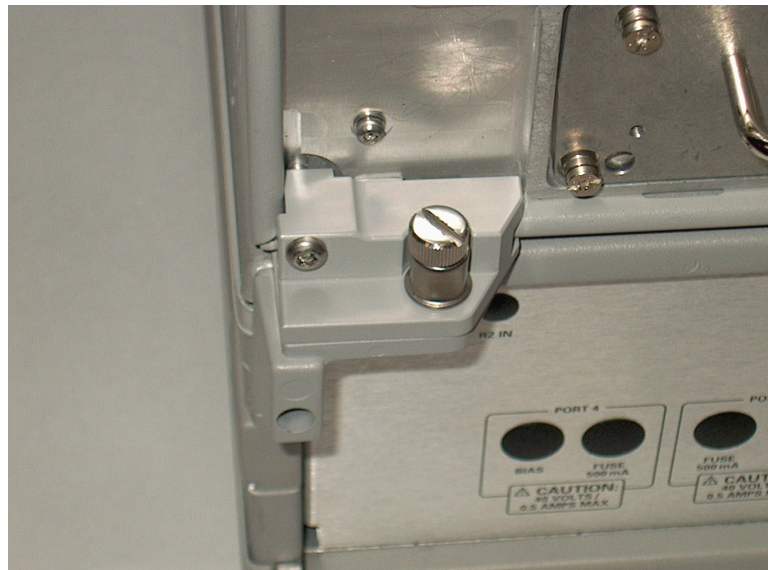

**NOTE**

Refer to **"Network Analyzer Interface Kit Options"** on page 10.



## Hardware Lock-link Installation (U3021-60002)


### **WARNING**

The opening of covers or removal of parts is likely to expose dangerous voltages. Disconnect the instrument from all voltage sources while it is being opened.

### Locking the Test Set to the PNA-X


1. The lock-link kit (U3021-60002) includes:
  - 5023-0132 - Lock-link kit (left, right and screws), Analyzer
  - 5023-2317 - Screw T15 M3.5x0.6 12 mm
  - N5242-20138 - Right Lock-link, Test Set
  - N5242-20139 - Left Lock-link, Test Set
2. Remove the feet from the bottom of the network analyzer.
3. Remove the 2 lower standoffs from the rear panel on the analyzer using a T20 Torx driver.

Figure 11      Rear Bottom Feet

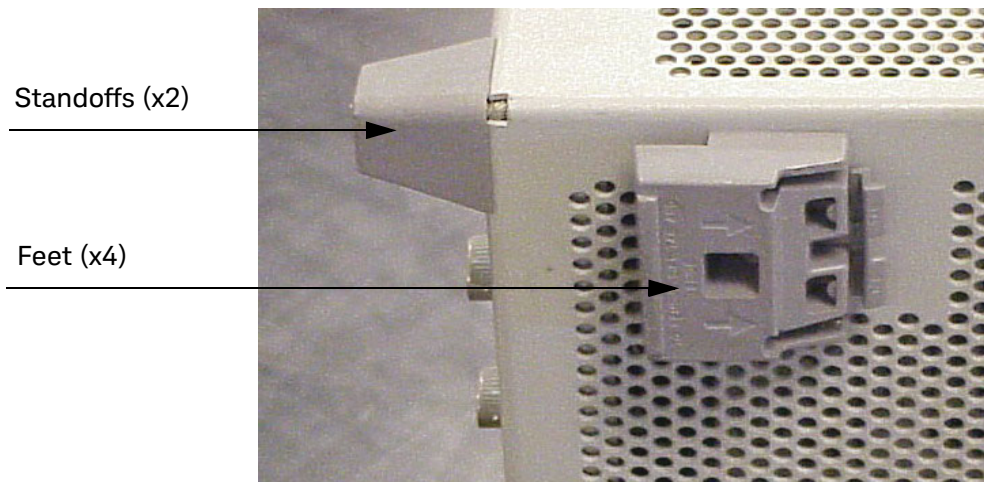

4. Install the lower lock-links (left not shown) onto the analyzer.

Figure 12 Install Lock-links on the Analyzer

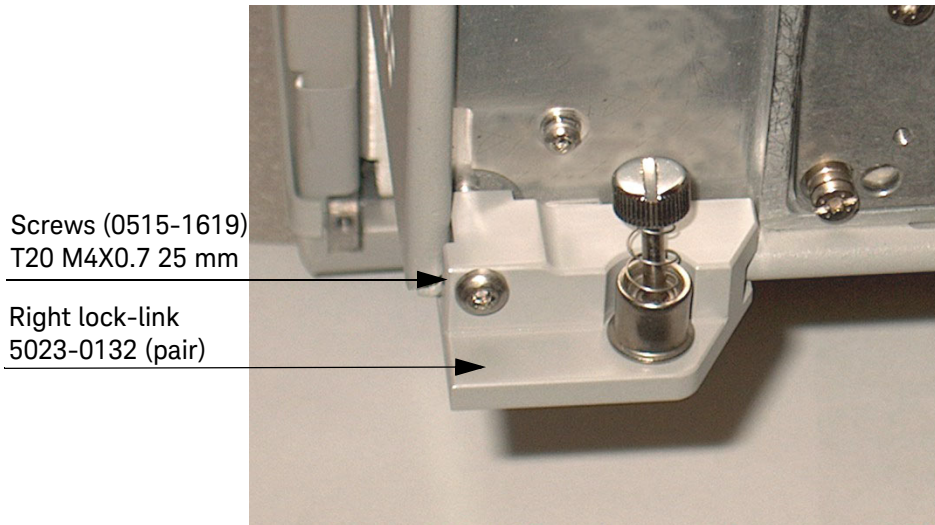


5. Remove the two upper standoffs from the rear panel of the test set using a T20 torx driver.
6. Install the left and right lock-links onto the test set.

Figure 13 Rear Lock-links to the Test Set



7. Place the analyzer on top of the test set and ensure that the front frame of the analyzer is positioned slightly forward of the locks that are attached to the test set. Slide the analyzer back so the locks engage the front frame of the analyzer.

Figure 14 Locking the Analyzer

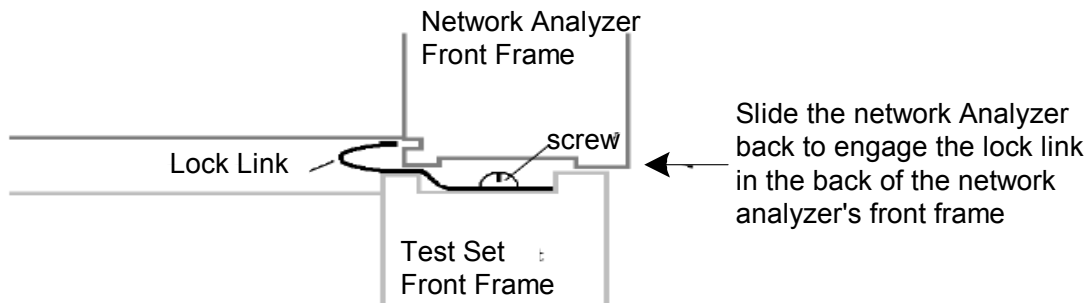

8. Secure the analyzer's lower lock-links to the test set's upper lock-link using the spring-loaded screws. If the analyzer's lock-links are not aligned with the screw holes, loosen the screws securing the feet to the instrument to align and tighten.

Figure 15 Lock-link Secured



## PNA-L RF Interface Cable Connections (U3021-60045)

Figure 16 on page 25 illustrates the cable configuration of the test set to the analyzer. The cables have been supplied with Cable Kit (U3021-60045).

1. Remove the SOURCE OUT to CPLR THRU and RCVR IN to CPLR ARM jumpers (x16) on the analyzer. The RCVR R1-R4 to SOURCE OUT reference loop jumpers (x1) remain on the front panel.
2. Connect the RF interconnect cables, supplied with this option, from the analyzer to the test set. As you are connecting each cable, torque to 8 in-lb. The Z5623-20418 is the short cable and the Z5623-20419 is the long cable. Table 9 below and Figure 16 on page 25.


**CAUTION** Over torque will cause damage to the test set and may cause connectors to spin or become loose.

**CAUTION** Each end of the interconnect RF cables have a different length from the bend. When connecting the RF Interconnect cables be sure that the longer end from the bend is connected to the PNA-L.

Table 9 PNA-L Interface Cable Connection (U3021-60045)

| RF Cables   | From: PNA-L | To: Test Set |
|-------------|-------------|--------------|
| Z5623-20418 | SOURCE OUT  | SOURCE OUT   |
| Z5623-20418 | CPLR ARM    | CPLR ARM     |
| Z5623-20419 | CPLR THRU   | CPLR THRU    |
| Z5623-20419 | RCVR IN     | RCVR OUT     |

Figure 16 PNA-L Interface Connections

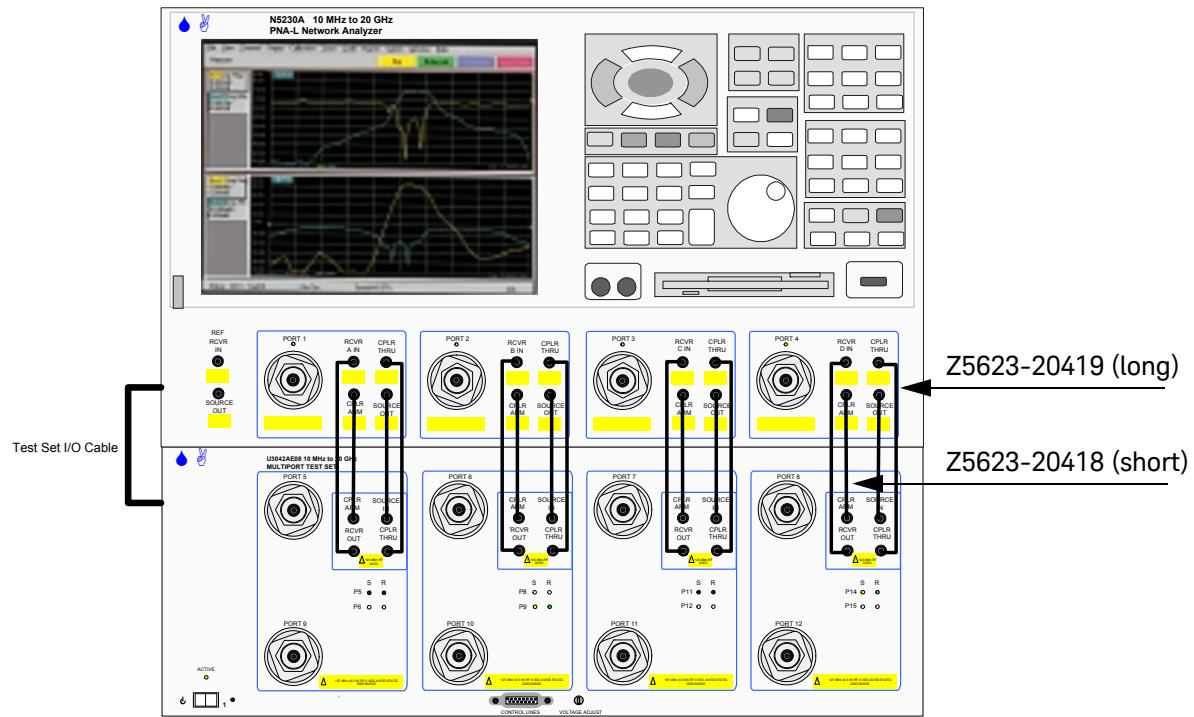

3. Connect the PNA-L test set I/O cable (N4011-21002) to the test set interface on the rear panel. Refer to [Figure 18 on page 28](#).

Refer to [“System Operational Checks” on page 29](#) for turn-on verification of the multiport system.

## PNA or PNA-X RF Interface Cable Connections (U3021-60047)

Figure 17 on page 27 illustrates the setup configuration of the test set to the analyzer. The cables have been supplied with Cable Kit (U3021-60047).

1. Remove the SOURCE OUT to CPLR THRU and RCVR IN to CPLR ARM jumpers (x8) on the analyzer. The RCVR R1-R4 to SOURCE OUT reference loop jumpers (x4) remain on the front panel.
2. Connect the RF interconnect cables from the analyzer to the test set in the order listed. As you are connecting each cable, torque to 8 in-lb. The longer, straight end of each cable is connected to the test set Refer to Table 10 below and Figure 17 on page 27.

### CAUTION

Over torque will cause damage to the test set and may cause connectors to spin or become loose.


Table 10 PNA and PNA-X Interface Cable connections (U3021-60047)

| Numeric Order | RF Cables   | From: PNA-X       | To: Test Set     |
|---------------|-------------|-------------------|------------------|
| 1             | U3042-20031 | Port 1 SOURCE OUT | Port 5 SOURCE IN |
| 2             | U3042-20032 | Port 1 CPLR THRU  | Port 5 CPLR THRU |
| 3             | U3042-20029 | Port 1 CPLR ARM   | Port 5 CPLR ARM  |
| 4             | U3042-20030 | Port 1 RCVR A IN  | Port 5 RCVR OUT  |
| 5             | U3042-20035 | Port 3 SOURCE OUT | Port 6 SOURCE IN |
| 6             | U3042-20033 | Port 3 CPLR ARM   | Port 6 CPLR ARM  |
| 7             | U3042-20034 | Port 3 RCVR C IN  | Port 6 RCVR OUT  |
| 8             | U3042-20036 | Port 3 CPLR THRU  | Port 6 CPLR THRU |
| 9             | U3042-20039 | Port 4 SOURCE OUT | Port 7 SOURCE IN |
| 10            | U3042-20037 | Port 4 CPLR ARM   | Port 7 CPLR ARM  |
| 11            | U3042-20038 | Port 4 RCVR D IN  | Port 7 RCVR OUT  |
| 12            | U3042-20040 | Port 4 CPLR THRU  | Port 7 CPLR THRU |
| 13            | U3042-20041 | Port 2 CPLR ARM   | Port 8 CPLR ARM  |
| 14            | U3042-20044 | Port 2 CPLR THRU  | Port 8 CPLR THRU |
| 15            | U3042-20043 | Port 2 SOURCE OUT | Port 8 SOURCE IN |
| 16            | U3042-20042 | Port 2 RCVR B IN  | Port 8 RCVR OUT  |



Figure 17 illustrates the final two digits of the part number for each cable. The cables must be connected in the numeric order listed in Table 10 on page 26.

Figure 17 N5242A/B RF Interface Cable Connections

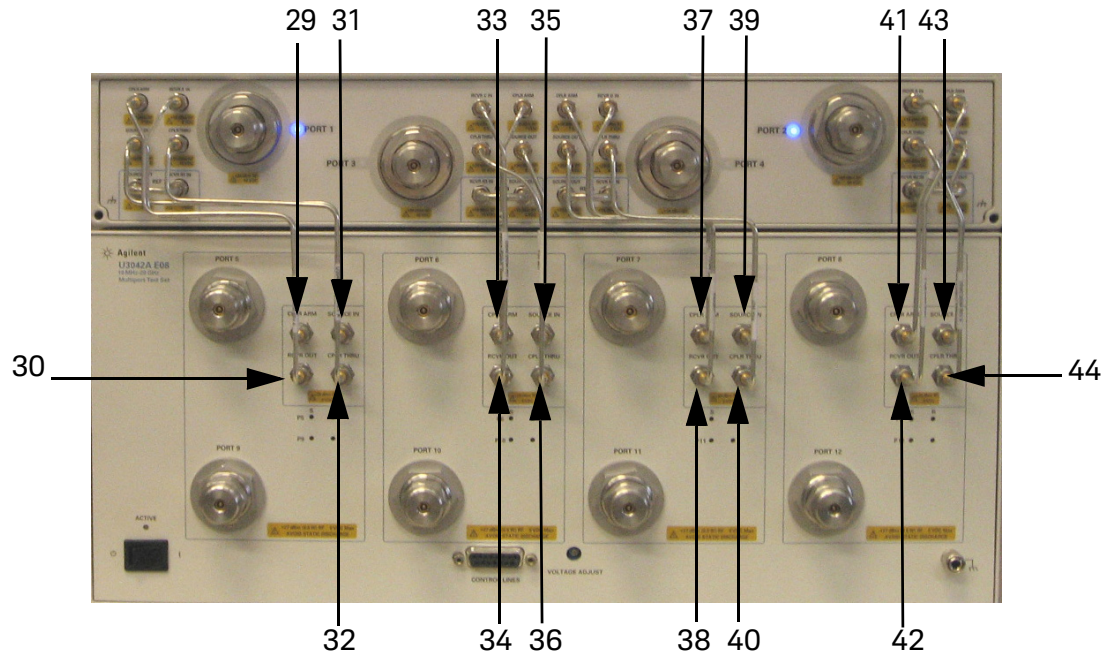

3. Connect the Test Set I/O cable (N4011-21002) to the Test Set Interface connector on the rear panel, similar to Figure 18 on page 28.

## Test Set I/O Cable Installation

1. Connect the Test Set I/O cable (N4011-21002) to the test set Interface connector on the rear panel, similar to **Figure 18**.

Figure 18      Test Set I/O Cable Connection



## Interconnect Cable Verification

1. Perform the “System Operational Checks” on page 29.
2. If the problem still exists, perform the “Troubleshooting the Test Set” on page 80.
3. If a power hole or other failure still exists, refer to “Contacting Keysight” on page 97.



## System Operational Checks

The following procedure will confirm that the RF interface cables between the test set and analyzer are installed and the system is working correctly. Ensure that your analyzer is calibrated by measuring the short on each port before connecting the test set.

### NOTE

This section is written using the PNA-X as an example. It is valid for the PNA and PNA-L, simply adjust the settings accordingly.

Complete the following steps before beginning this procedure:

- Stack the analyzer on top of the test set.
- Install the Test Set I/O cable on the rear panel.
- Install all of the RF interface cables on the front panel.
- Install the included female 3.5 mm short (85052-60007) to Port 1 on the analyzer.

## Equipment Setup

- Turn on the test set and analyzer.
- Preset the analyzer and complete the following settings:
  - Set to Multi-Port Mode (refer to [“Analyzer Multiport Mode for Option 551” on page 37](#)).
  - Frequency range: 10 MHz to 26.5 GHz
  - IFBW: 1 kHz
  - Scale: 10 dB/Div
  - Set the analyzer to measure S11

## Verify Results

The 3.5 mm short will be relocated to each Test Port and an uncorrected reflection response trace should be displayed that resembles the following plots indicated in the table below. If you suspect an RF signal path problem, refer to the RF cable diagram and check the interface cables associated with this signal path for proper installation.

Table 11 Reflection Response Results

| Reflection Port | Response Trace | Cable Path Diagram    | Response Trace (Opt 001) | Cable Path Diagram (Opt 001) |
|-----------------|----------------|-----------------------|--------------------------|------------------------------|
| Port 1 to 4     | Figure 19      | Figure 20             | Figure 21                | Figure 22                    |
| Ports 5 to 12   | Figure 23      | Figure 24 & Figure 25 | Figure 26                | Figure 27 & Figure 28        |

**NOTE**

The trace ripple (peak-peak variation) will be higher than when using an ECal Module due to variation in your Short's performance. If response is in question perform "Cal Kit Operational Check" on page 62.

Figure 19 Typical Reflection Response Ports 1 to 4 (Std)

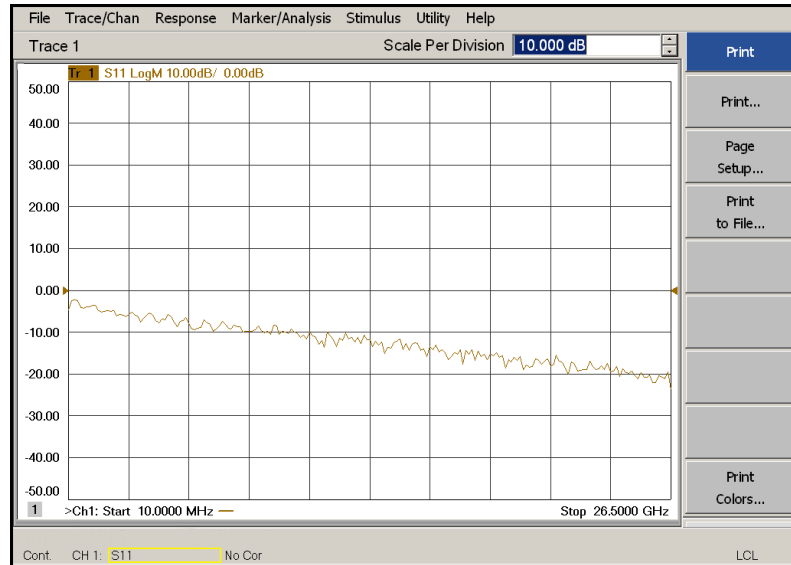


Figure 20 Reflection Response Signal Path Diagram Ports 1 to 4 (Std)

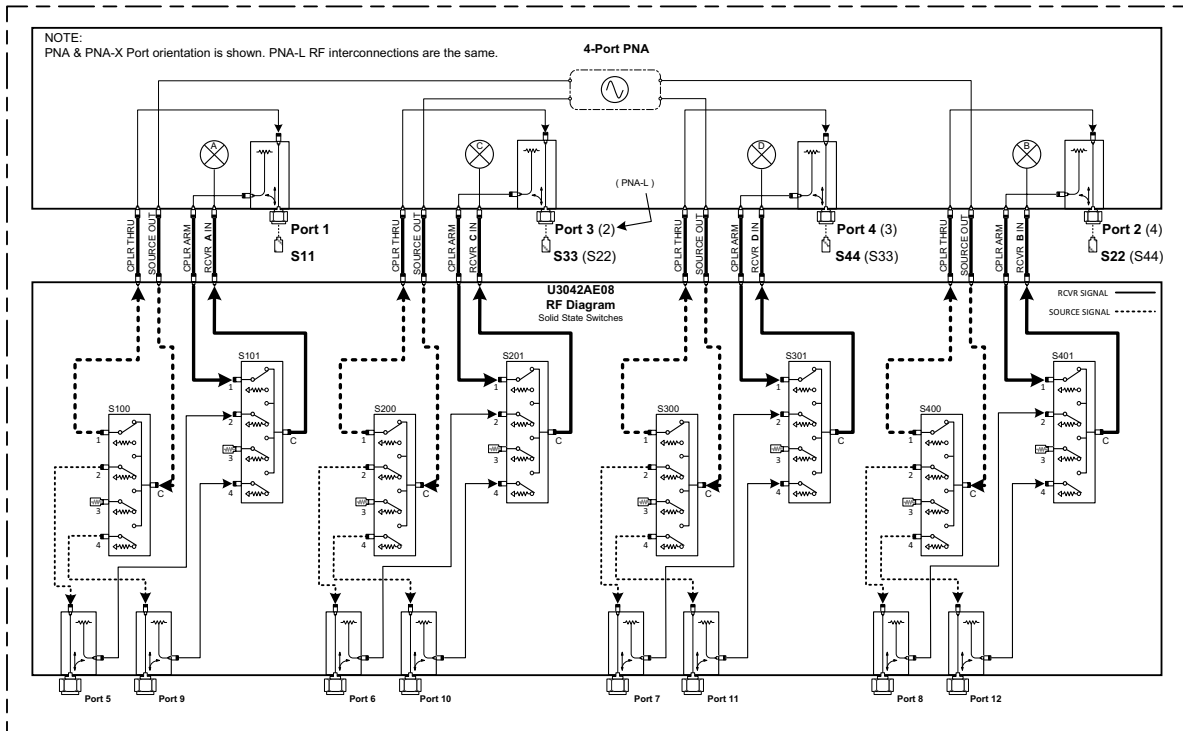


Figure 21 Typical Reflection Response Ports 1 to 4 (Option 001)


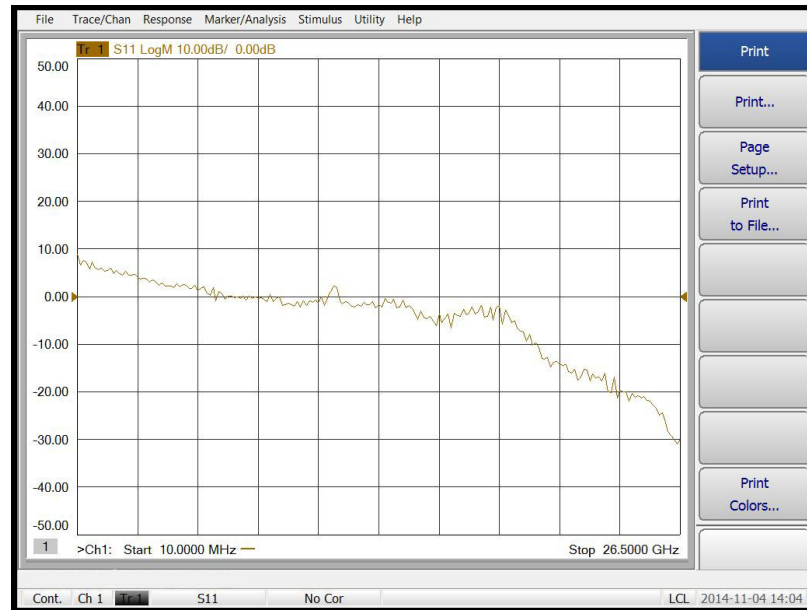


Figure 22 Reflection Response Signal Path Diagram Ports 1 to 4 (Option 001)

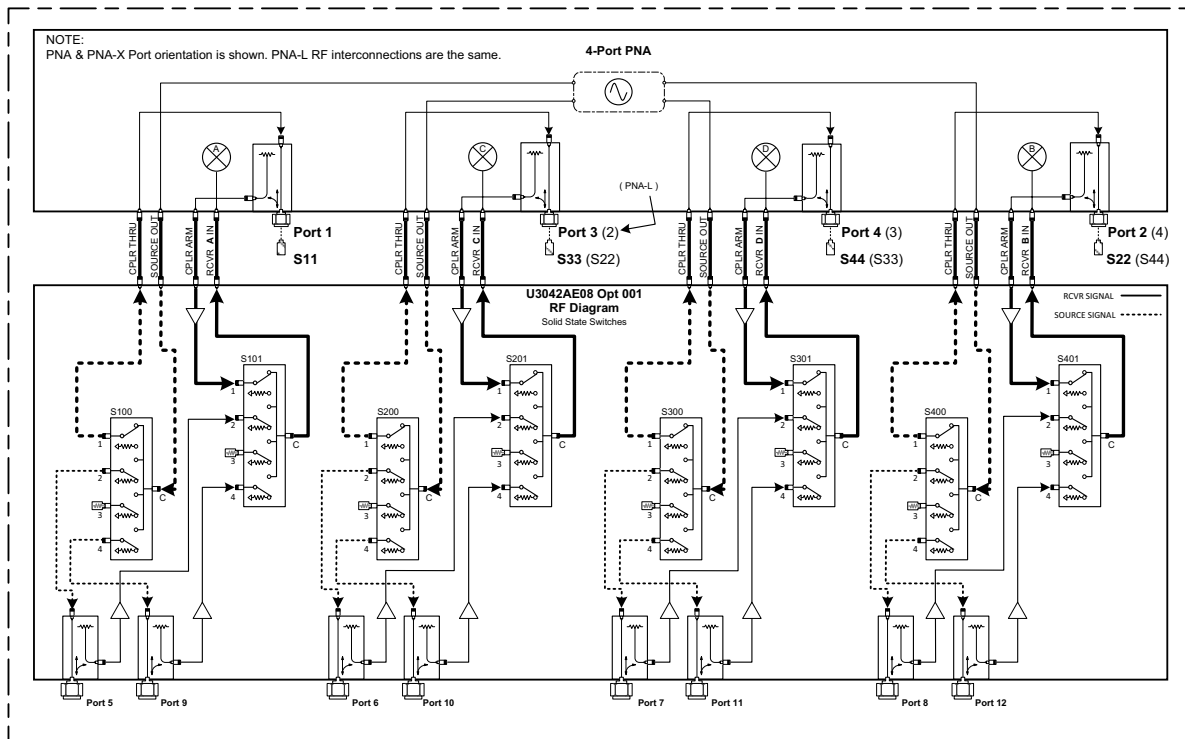

U3042AE08  
System Operational Checks

Figure 23 Typical Reflection Response Ports 5 to 12 (Std)

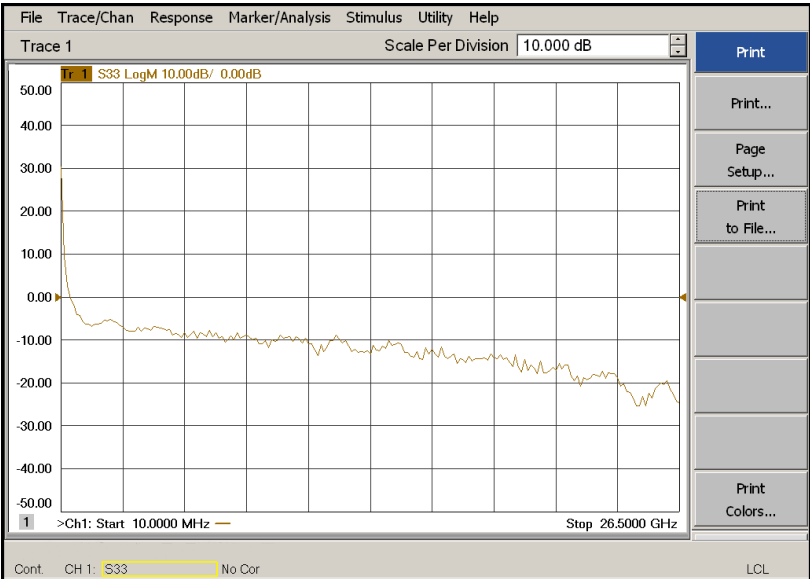


Figure 24 Reflection Response Signal Path Diagram Ports 5 to 8 (Std)

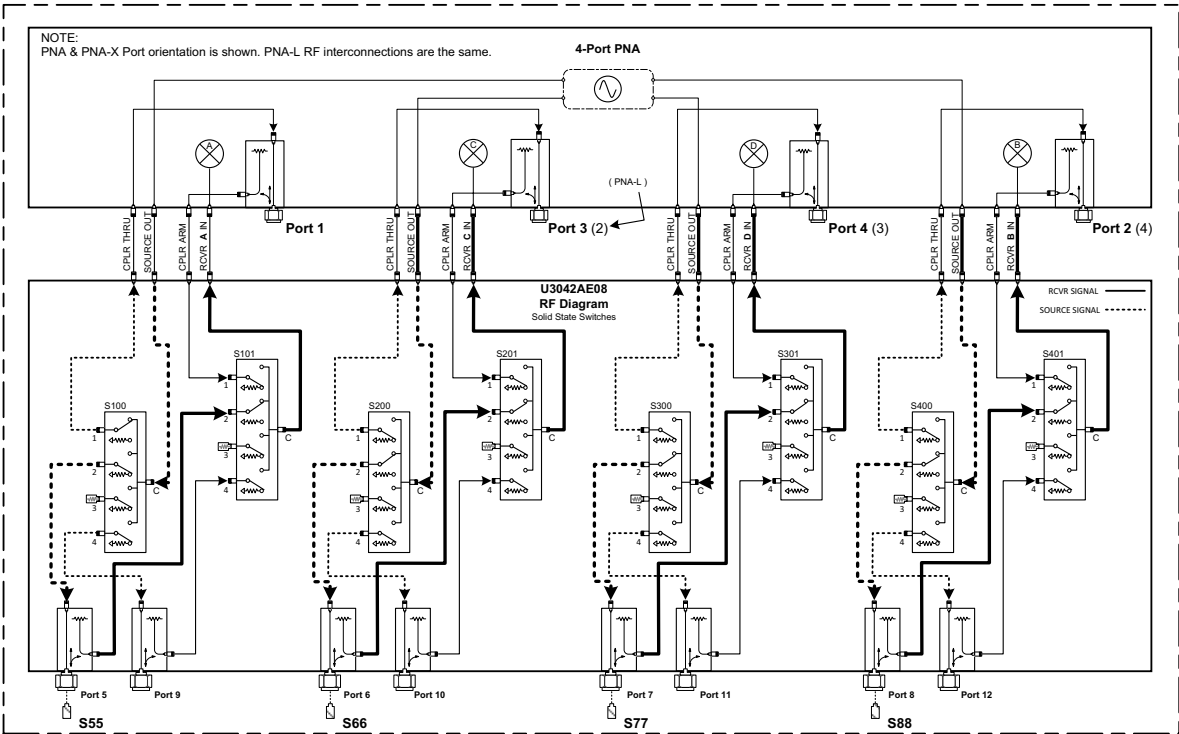


Figure 25 Reflection Response Signal Path Diagram Ports 9 to 12 (Std)

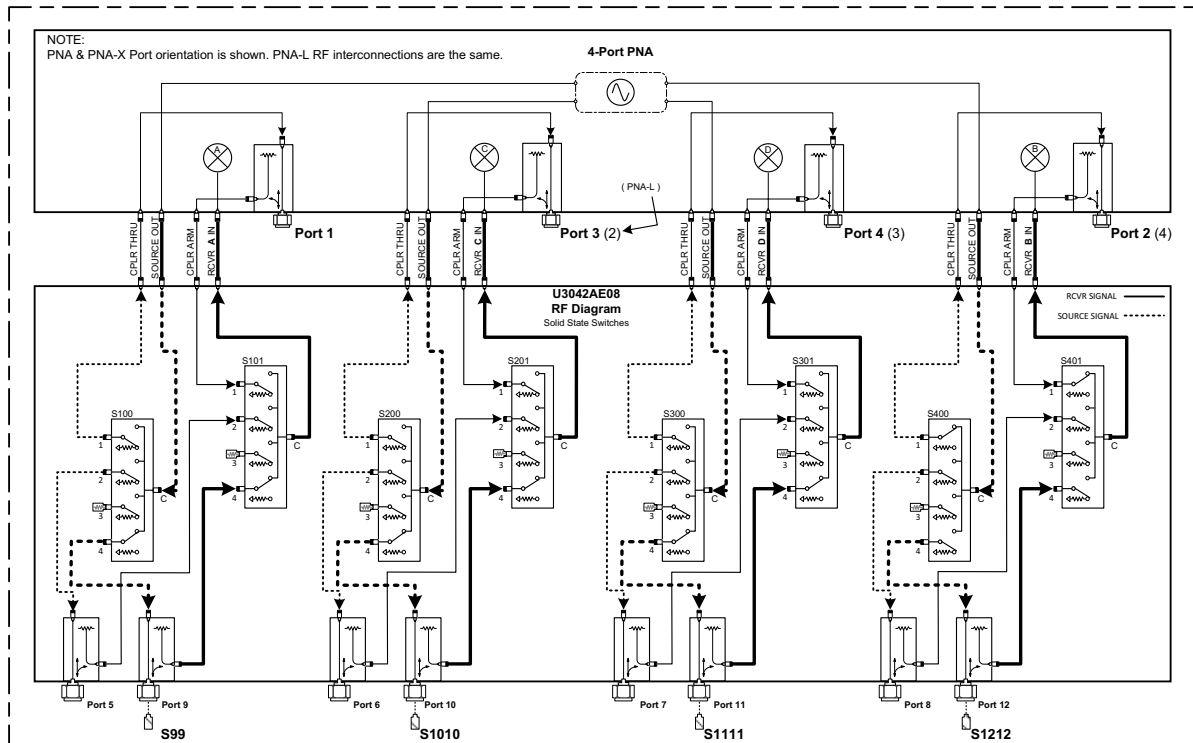


Figure 26 Typical Reflection Response Ports 5 to 12 (Option 001)

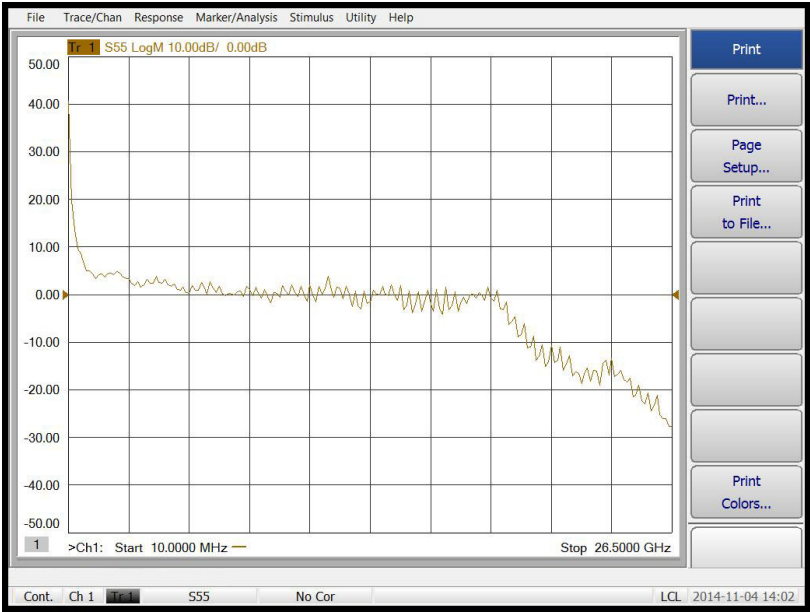


Figure 27 Reflection Response Signal Path Diagram Ports 5 to 8 (Option 001)


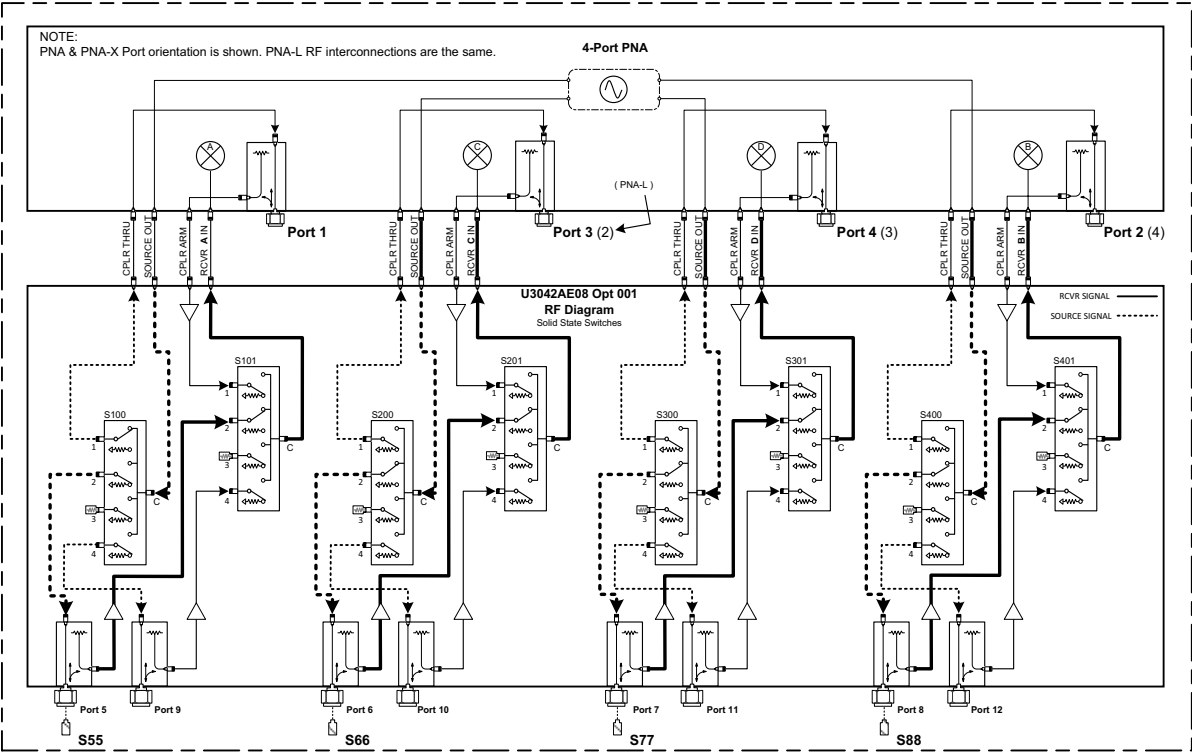


Figure 28 Reflection Response Signal Path Diagram Ports 9 to 12 (Option 001)

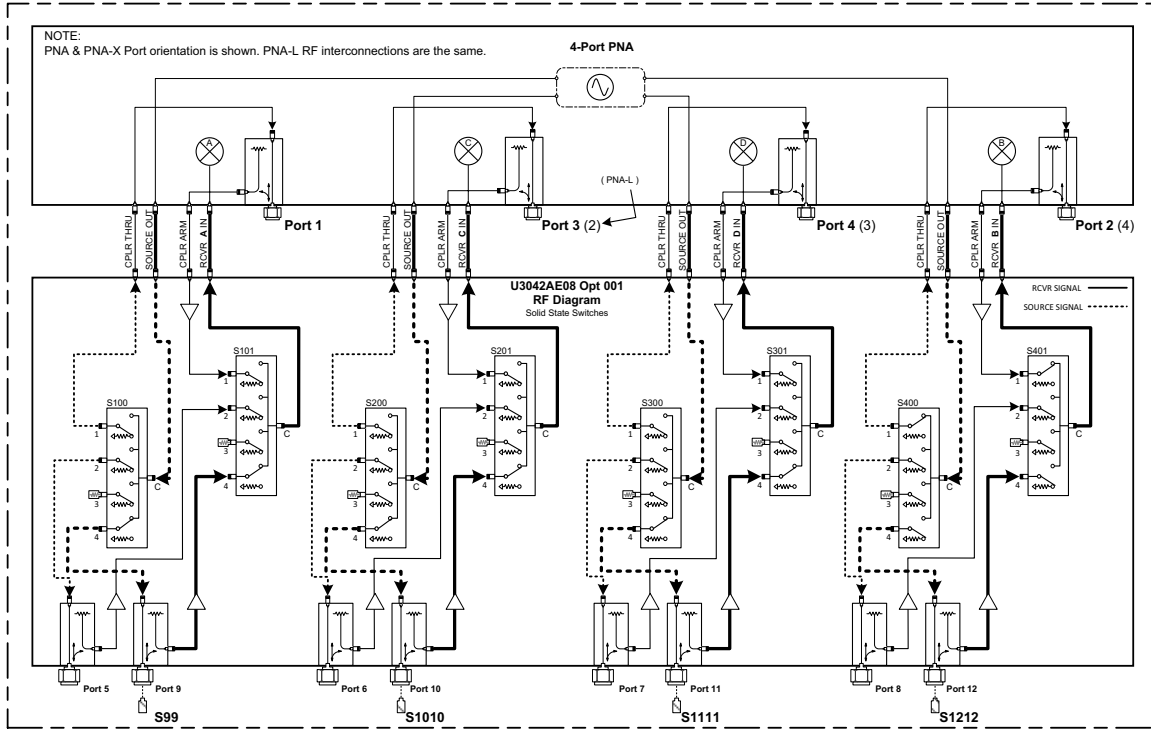

## Controlling the Test Set

This section will describe how to setup and operate the test set with the N5242A/B or N5230C.

The test set is considered a “secondary” instrument. A N5230C or N5242A/B must be used to control the test set. There are three methods to control the test set. Multiport mode is recommended due to calibration and ease of use.

The following test set file must be installed into network analyzer file directory:  
c:\Program Files\Keysight\Network Analyzer\testsets

4-Port PNA-L requires test set: **u3042ae08\_p4.tsx**

4-Port PNA & PNA-X requires test set: **u3042ae08\_pnax\_p4.tsx**

## Typeface Key Conventions

The following key conventions are used throughout this document.

- **[HARDKEYS]** are labeled front panel keys
- **SOFTKEYS** are indicated on the instrument display
- *(Italicized in parenthesis)* are menu paths for the 'B' model analyzer.

## Definitions for Specifications

Specifications describe the warranted performance of calibrated instruments that have been stored for a minimum of 2 hours within the operating temperature range of 0 to 55 °C, unless otherwise stated, and after a 45 minute warm-up period. Data represented in this document are specifications unless otherwise noted.

**Characteristics** describe product performance that is useful in the application of the product, but that is not covered by the product warranty. Characteristics are often referred to as Typical or Nominal values.

- **Nominal** describes representative performance that is useful in the application of the product when operated over a 20 to 30 °C temperature range. Nominal performance is not warranted.
- **Typical** describes characteristic performance, which 80% of instruments are expected to meet when operated over a 20 to 30 °C temperature range. Typical performance is not warranted.



## Analyzer Multiport Mode for Option 551


Multiport mode selects the test set file that will enable the analyzer to control the test set. Multiport mode allows you to complete a N-Port calibration using the Cal Wizard application in the analyzer. Refer to the Help system for more information.

### How to Access Multiport Mode

1. The Option 551 must be installed for multiport capability. To access the multiport application select **[Utility] > System > Configure > Multiport Capability -OR- (Instrument > Setup > External Hardware > Multiport > Multiport Configuration...)**.
2. Select **U3042AE08 (12-Port System)** from the drop-down menu and select **Restart as a multiport PNA with this testset > OK**. The analyzer will restart the network application with the test set interface features.

If the U3042E08 is not available in the Test Set list, it will be necessary for you to copy the required test set file to the analyzer hard drive. The current version of the test set files are available on the web at <http://na.support.keysight.com/multiport/testsetsupport.html>. Copy the appropriate file to c:\program files\Keysight\Network Analyzer\testsets directory.

Figure 29 Selecting Multiport Mode

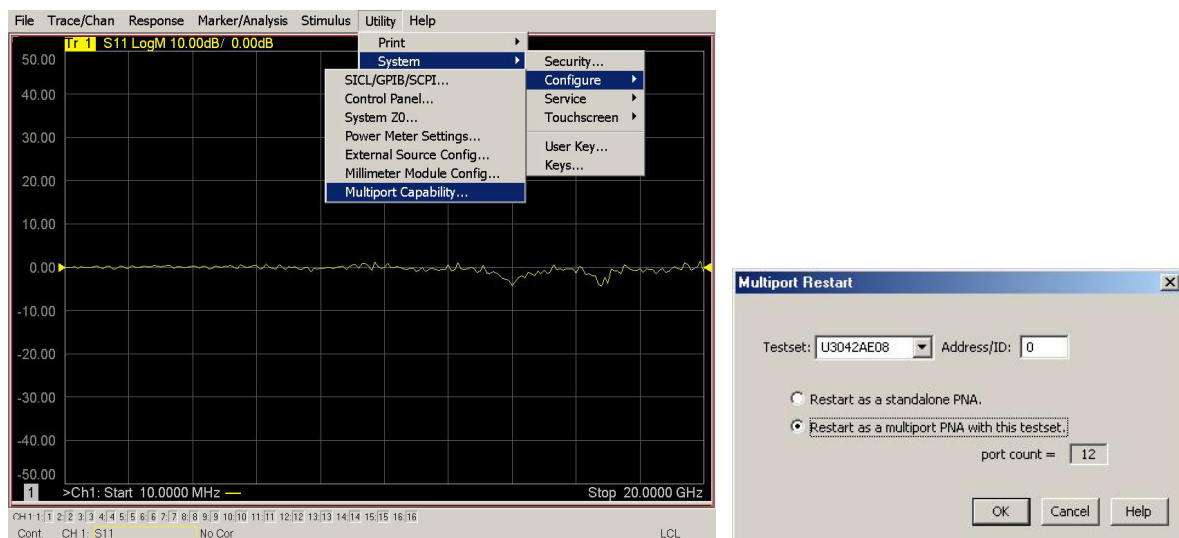


## External Test Set Control Feature

To verify that the network application has the test set interface features, select **Trace/Chan > Channel > Hardware Setup > External Test Set > Other -OR- (Instrument > Setup > External Hardware > External Device... > Multiport > Other Test Set Setup...)**.

The test set will be displayed as External Test Set Control-U3042AE08.

Figure 30 External Test Set Control

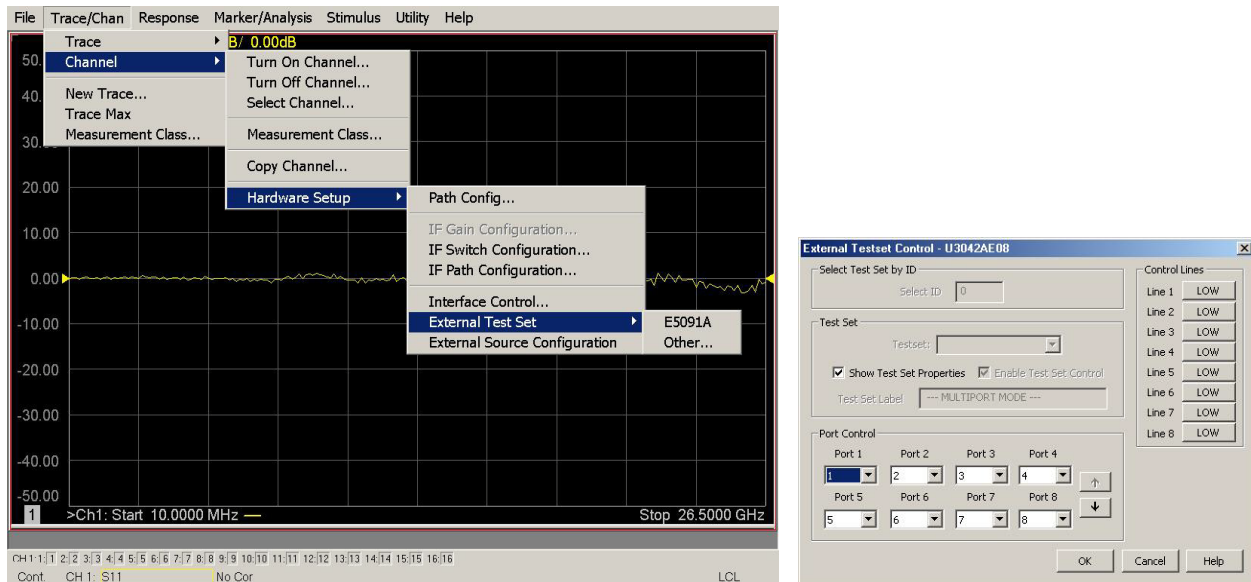

This menu will allow the physical Ports 1 through 12 to be identified as any port for your convenience. For example, Port 5 can be named Port 2.

The **External Test Set Control-U3042AE08** also allows control of the DUT control lines, refer to **“Control Lines” on page 56**. To change the state from LOW to HIGH, select the graphical user interface (GUI) for the specific control (LINE 1 through 8) and then press OK. Each line can be controlled separately.

Select the **Port Control** down arrow for Ports 9 thru 12, as shown in **Figure 30**.

## Trace Measure S-Parameter

S-Parameter selection can be accomplished using Response > Measure. Use the drop-down menus to select 1 of 144 S-Parameters for the 12-Port system. The first number in the Sxx selection is the Receiver Port and the second number will be the Source Port. Any port can be selected to be the Receiver, Source or both, as in S11. The front panel R LED indicates the port is the Receiver and the S LED indicates the port is the Source.

The 'B' model analyzer provides an S-Parameter selection method by using the keypad. For example, to select S25: **MEAS [MEAS] > Enter S-Parameters > [2][.][5] [Enter]**

Figure 31 Trace Measure



## New Trace Measure S-Parameter

**S-Parameter Tab:** Multiple S-Parameters can be made from the **New Measurement** menu. In the drop-down menu, select **Trace > New Trace -OR- (Instrument > Trace > New Trace)**.

The **New Measurement** window allows the selection of any of the 144 S-Parameters. Refer to [Figure 33](#) and [Figure 34](#).

Figure 32 New Trace Measure

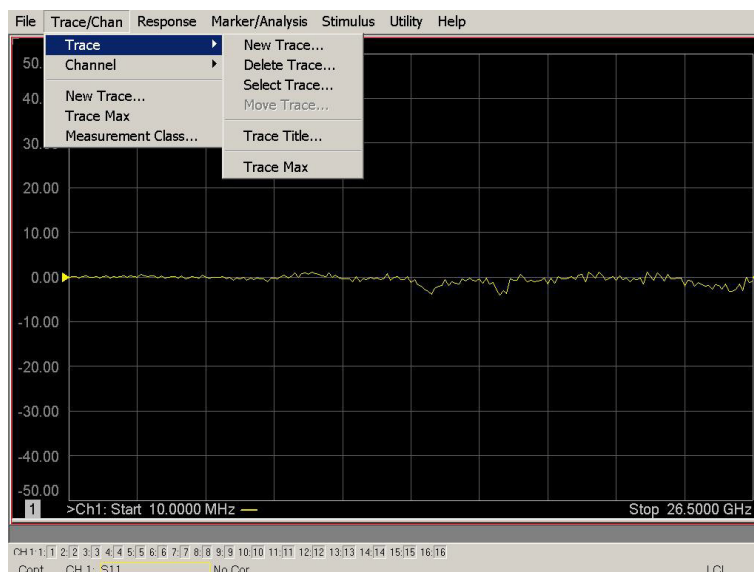


Figure 33 12-Port New Trace Measure (S11 - S55)


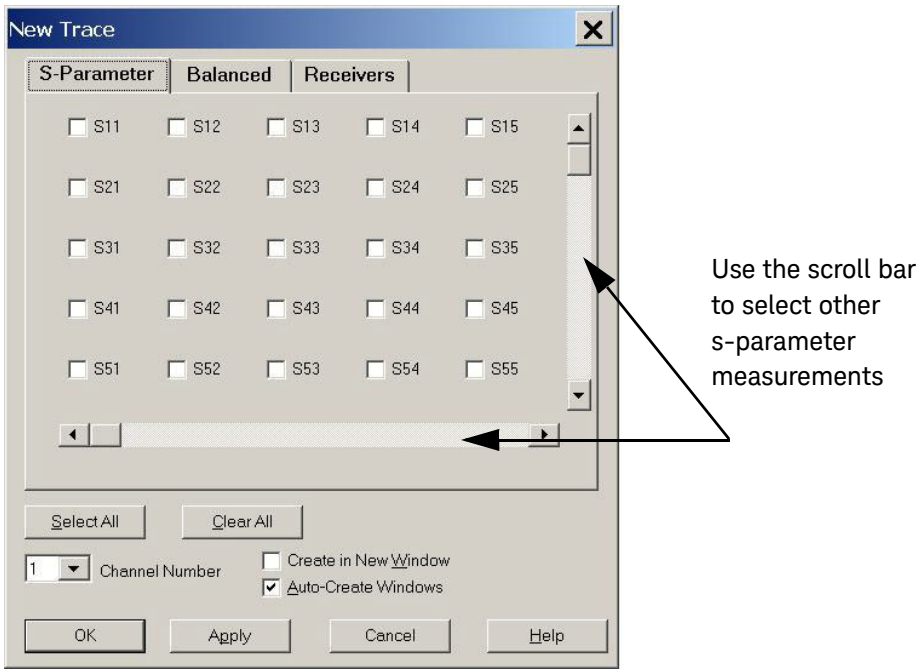



Figure 34 12-Port New Trace Measure (S88 - S1212)

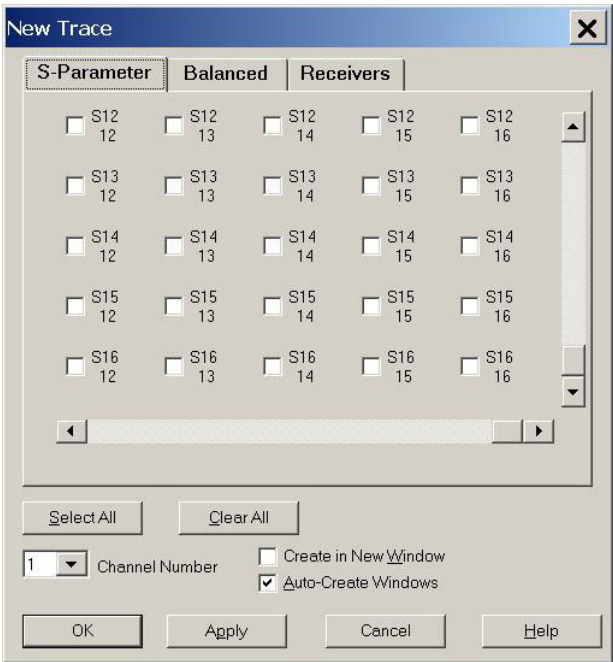

**Balanced Tab**      Balanced Measurements can be configured by selecting the Balance tab in the New Measurement menu.


For more information on balanced (differential) component measurement, refer to the Application Note 1373-1 and 1373-2 (5988-5634EN and 5988-5635EN) at <http://www.keysight.com>. In the search menu, type in “Multiport and Balanced.”

Figure 35      Selecting Balanced Measurements

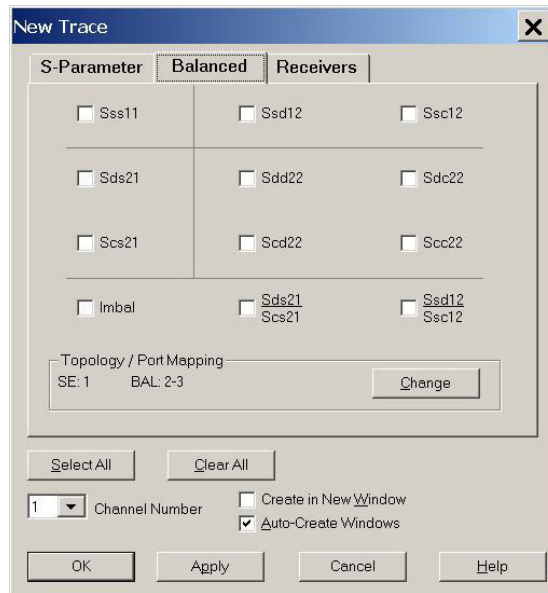

**Receiver Tab**      The S-Parameter measurements can be ratioed with selectable Denominators for each port and receiver. Refer to the standard PNA-X documentation for more information.

Figure 36      Receiver Measurements

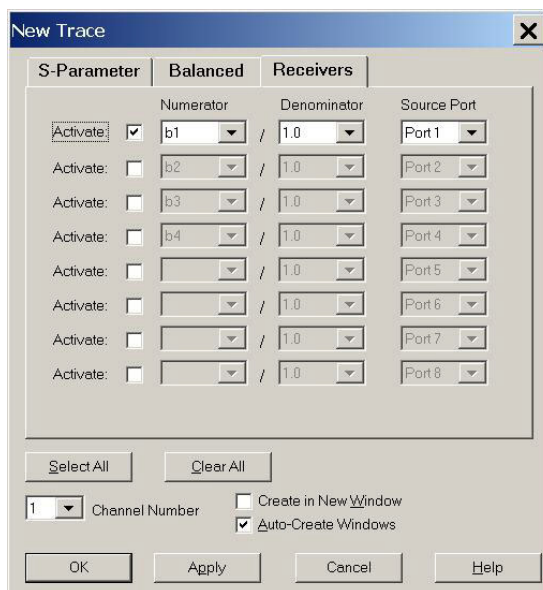


### Sweep Setup for Multiport and Standalone Modes

When the test set is connected to the analyzer, it is recommended that the analyzer's Sweep Setup be configured to Stepped Sweep before calibrating. This is slower than the Analog Sweep, but is more accurate due to the extra electrical length of the test set and test port cables. Only Stepped Sweep is available on all PNA models.

1. On the analyzer select **STIMULUS > Sweep > Sweep Setup**.
2. Select **Stepped Sweep**.
3. Set the **Dwell Time to 5 ms** > **OK**.

Figure 37 Sweep Setup

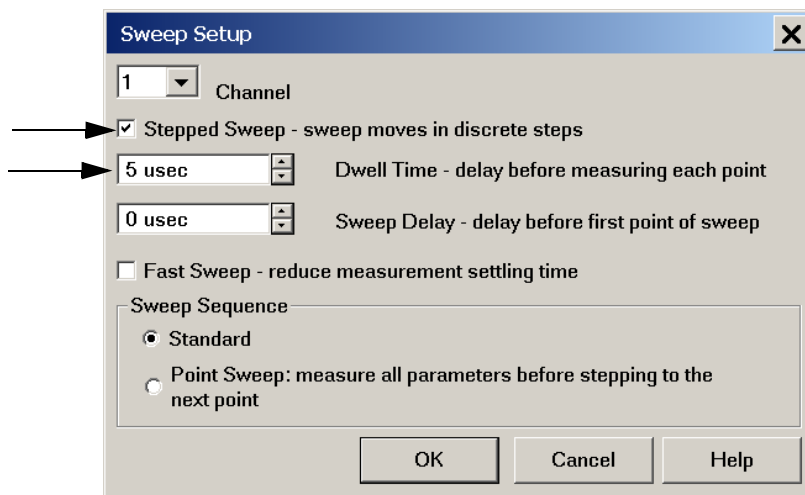

### Sweep Setup for PNA-X N52xxB Models

1. Select **[Sweep] > Sweep Setup > Timing**.
2. Select **Timing** tab.
3. Select **Sweep Mode: Stepped**.
4. Deselect **Time: Auto Sweep Time**.
5. Set **Dwell Time > Apply > OK**.

Figure 38 Sweep Setup, N52xxB

The screenshot shows the 'Sweep Setup' dialog box for PNA-X N52xxB models. The 'Timing' tab is selected. The 'Time' section contains three spinners: 'Sweep Time' set to 253.069 msec, 'Dwell time' set to 1.000 msec, and 'Sweep Delay' set to 0 usec. Below these are two checkboxes: 'Auto Sweep Time' (unchecked) and 'Fast Sweep - Reduce settling time' (unchecked). The 'Sweep Mode' section has two radio buttons: 'Auto' (unchecked) and 'Stepped' (checked). The 'Sweep Sequence' section has two radio buttons: 'Standard' (checked) and 'Point Sweep - measure all data before stepping to next point' (unchecked). At the bottom are four buttons: 'OK', 'Cancel', 'Apply', and 'Help'.


| Section        | Parameter  | Value                            |
|----------------|--|----------------------------------|
| Time           | Sweep Time   | 253.069 msec                     |
|                | Dwell time   | 1.000 msec                       |
|                | Sweep Delay  | 0 usec                           |
| Sweep Mode     | Auto   | <input type="radio"/>            |
|                | Stepped  | <input checked="" type="radio"/> |
| Sweep Sequence | Standard   | <input checked="" type="radio"/> |
|                | Point Sweep - measure all data before stepping to next point | <input type="radio"/>            |
| Time           | Auto Sweep Time  | <input type="checkbox"/>         |
|                | Fast Sweep - Reduce settling time                            | <input type="checkbox"/>         |

## RF Path Configuration with Option 029

If the analyzer has Option 029 or H29 (noise figure capability) verify that the path configuration is set to Default. If it is not in Default configuration, ports 5 and 9 will not operate correctly.

1. Select **Trace/Chan > Channel > Hardware Setup > Path Cong...** -OR- **(Instrument > Setup > Internal hardware > RF Path Config...)** and in the drop-down menu select **Default > OK**. Save this configuration as a User Preset by selecting **Save > User Preset > Save current state as User Preset**. Do not use the factory Preset (User Preset Off), the analyzer will return to Option 029 path configuration.
2. Verify that the Port 1 Noise Tuner Switch is set to external.  
Select **Utilities System > Configure > Preferences** -OR- **(Utility > System > System Setup > Preferences > User Preset)**. If not, select **Meas: Port 1 Noise Tuner Switch is set to external**.

Figure 39 RF Path Configuration

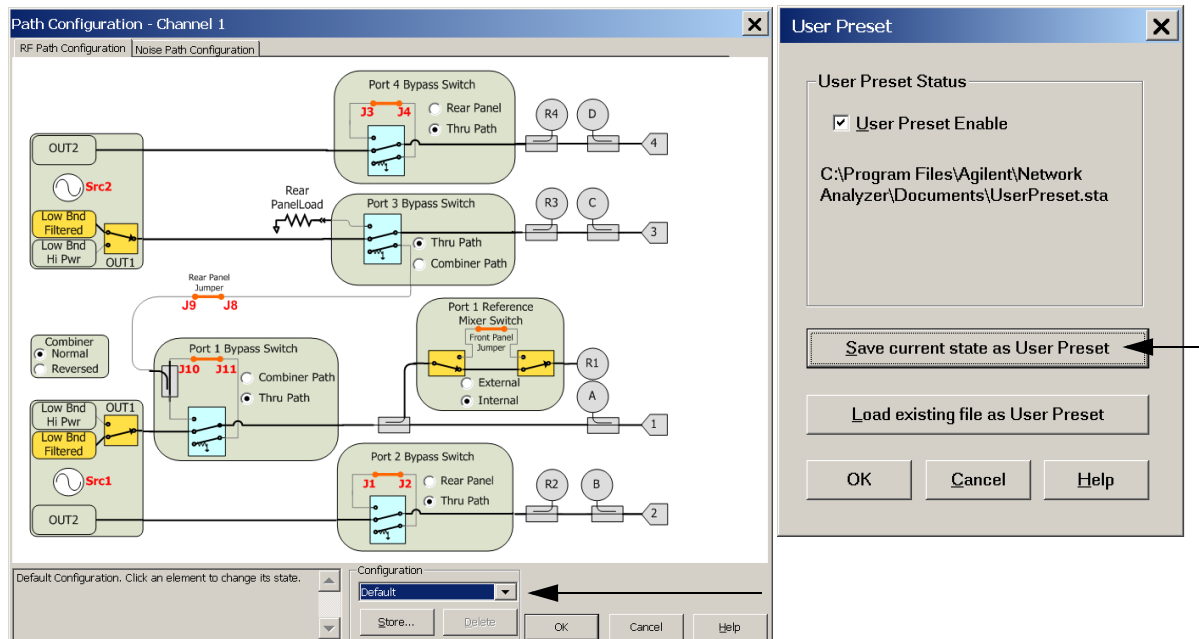



## N-Port Calibration with Analyzer

It is recommended that you perform an ECal characterization to minimize the connections required for multiple port calibration. The N4691B Option M0F is recommended with cable (85131F) if you are calibrating at the analyzer and test set ports.

Characterize the ECal module with adapters that will not be used in the measurement of the DUT. To characterize the ECal module select **Response > Cal > More > ECal > Characterize ECal Module -OR- (Response > Cal > Cal Sets & Cal Kits > Characterize ECals...)**.


Calibrate at the end of the test port RF cables and any adapters that are used to connect the DUT. This removes the effect on the measurement of the DUT. Failure to do this will create ripple and other measurement errors.

### NOTE

If measurement errors occur, ensure the newest version of firmware is installed on the analyzer. Measurement errors can be a result of firmware algorithms. Consult with Keysight Service or firmware web page for the latest firmware revisions and history at <http://na.support.keysight.com/pna/firmware/firmware.html>.


1. To perform an ECal characterization select **Response > Cal Wizard > Characterize ECal Module -OR- (Response > Cal > Other Cals > ECal...)** and follow the prompts.
2. Save the ECal characterization file. Refer to the Help menu for characterizing information.

Figure 40 ECal Characterization and Calibration Wizard

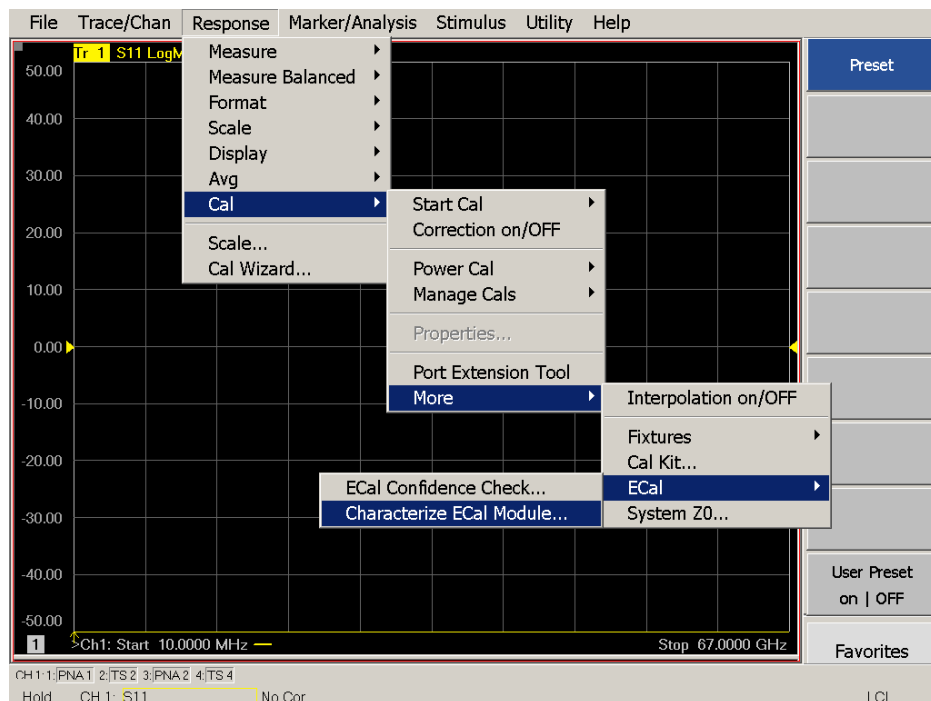

3. Continue following the Cal Wizard prompts. On the “Select Calibration Ports and ECal Module” window, press **Select All** or select the ports you are calibrating and press **Next**.
  - a. If using a mechanical cal kit, select **SmartCal (Guided Calibration)** > **Next**.
  - b. If using an ECal module, connect the ECal to an available USB port and select **Use Electronic Calibration (ECal)** > **Next**.
4. Continue following the Cal Wizard prompts. In the “Select Calibration Ports and ECal Module” dialog box press **Select All**, or select the ports you are calibrating and press **Next**. If an ECal characterization has been done, select **View/Select ECal Module** and select the previously saved user file from **step 3**.

Figure 41 12-Port Calibration

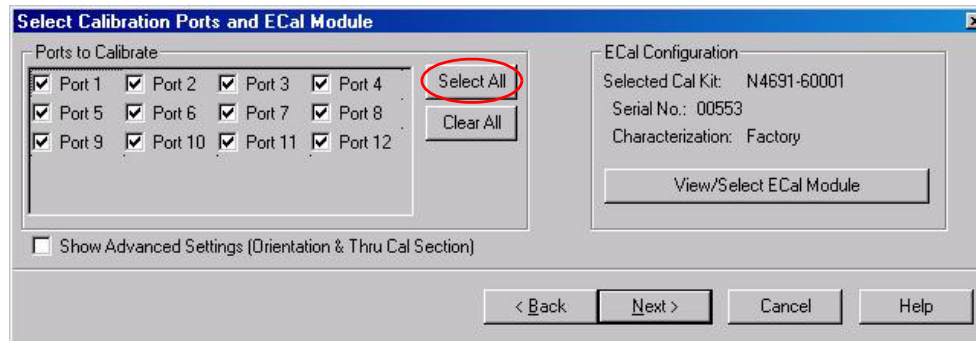

5. Connect the ECal or the mechanical cal kit to the ports you are calibrating following the Cal Wizard prompts and select **Measure** after each connection. The electrical delay value may be shown in the dialog box after the last measurement, press **OK**.
6. At the Calibration Completed prompt, select **Save As User Calset**, type the name and **Save**.
7. After calibrating test set ports, use a quality load and short to verify the calibration on each port or end of the test cable. Measure reflection and confirm the return loss is as expected. If the result is not as expected, repeat the calibration without the test set and ensure that the analyzer is in standard (non-multiport) mode.

## Interface Control Mode

### NOTE

Interface Control mode will not function properly when using multiport mode. Multiport mode will reset the switch path commands of the interface control. It is recommended that the network analyzer be restarted in stand-alone mode if the interface control is being used. Select **Utility > System > Configure > Multiport Capability**. In the dialog box select **Restart as a standalone PNA > OK**.

## Overview of the Interface Control

The Interface Control feature allows you to send data and remote commands to control external equipment using the GPIB, Material Handler I/O, test set I/O, and Auxiliary I/O without needing to create a remote program. Refer to Help menu, "Rear Panel Tour."

- A unique set of control data can be sent for each channel. In addition, a unique set of control data can be sent before the channel sweep starts and after the sweep ends.
- Interface Control settings can be saved and recalled from the Interface Control Dialog Box or with Instrument State Save and Recall.
- Interface Control settings can be copied to other channels using Copy Channels.
- Control data can only be WRITTEN to the interfaces, NOT READ from the interfaces.
- Control data is sent in the following order and this order cannot be changed:
  1. GPIB Interface
  2. Material Handler Interface (not covered in this manual)
  3. Test Set Interface (not covered in this manual)
  4. Dwell Time (not covered in this manual)


## How to Access Interface Control Mode

1. To access the Interface Control mode, select **Trace/Chan > Channel > Hardware Setup > Interface Control -OR- (Instrument > Setup > Internal Hardware > Interface Control...)** in the drop-down menu, and select **Enable Interface Control**.

### NOTE

The analyzer includes the Interface Control application and rear panel connection. Please review this application before connecting the test set to the network analyzer. Information regarding this application can be found in the Help menu, Interface Control.

Figure 42 Interface Control

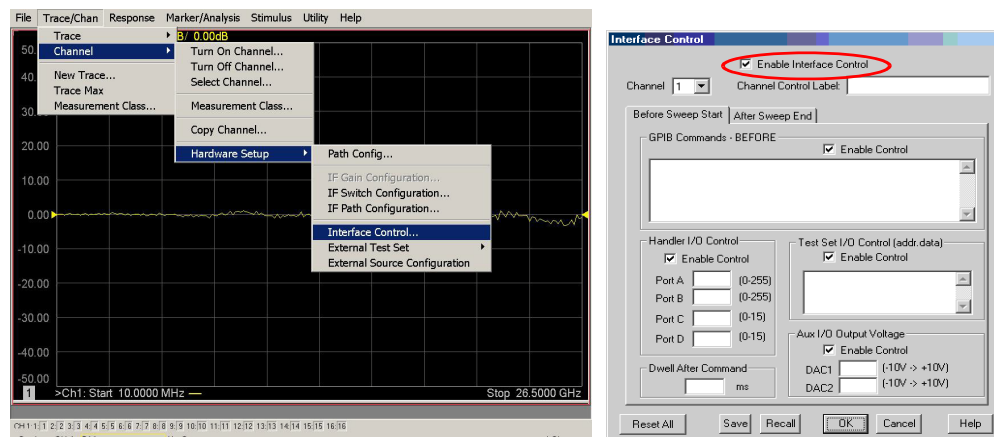

## Using Interface Control Mode

An Instrument Preset will reset all of the fields to their default settings.

### NOTE

If an error is encountered when sending Interface Control data, an error message is displayed on the screen and the Channel Trigger State is set to Hold. You must fix the condition that caused the error, then change the Channel Trigger State to its original setting.

Figure 43 Interface Control

The screenshot shows the 'Interface Control' dialog box. It has a title bar 'Interface Control'. Inside, there's a checkbox '(1) Enable Interface Control'. Below it, a dropdown '(4) Channel' is set to '1', and a text field '(5) Channel Control Label' is empty. There are two tabs: '(6) Before Sweep Start' and 'After Sweep End'. The 'Before Sweep Start' tab is active, showing a list box for 'GPIB Commands - BEFORE' with an 'Enable Control' checkbox. Below this is a section '(8) Handler I/O Control' with checkboxes for 'Enable Control' and four ports (A, B, C, D) with ranges. To the right is '(2) Test Set I/O Control (addr. data)' with an 'Enable Control' checkbox and a list box '(3)' containing '0.0', '16.1', and '32.2'. Below that is '(8) Aux I/O Output Voltage' with an 'Enable Control' checkbox and two DAC controls (DAC1, DAC2) with ranges. At the bottom left is '(7) Dwell After Command' with a text field and 'ms' unit. At the bottom are buttons: 'Reset All', 'Save', 'Recall', 'OK', 'Cancel', and 'Help'.

### Enable Interface Control: (1)

Enables and disables ALL Interface Control communication. When cleared (default setting) Interface Control is disabled and NO data is sent. To send data, the individual interfaces must also be enabled.

### Test Set I/O Control (address data): (2)

Provides control of the test set I/O Interface on the rear panel of the PNA-X. Used to control your test set.

Only positive integers are allowed to select switch positions or states of DUT control interface lines. Refer to ["Address and Data Values" on page 54](#).

Address and data are separated by a period. Entries should be separated by a new line, or carriage return. The front panel Enter key inserts a new line into the field. The number of test set I/O entries that can be entered is limited by the available memory of the analyzer.

0.0  
16.1  
32.2

### **Channel 1: (4)**

Specifies the channel number for dialog settings. Each channel is configured individually. The drop down menu illustrates the channels that currently have measurements. There must be at least one displayed trace for the Test Set I/O interface to function.

### **Channel Control Label: (5)**

Specifies the label to be displayed on the screen during the channel sweep.

### **Before Sweep Start– After Sweep End Tabs: (6)**

Commands (GPIB, I/O's and Dwell) can be sent Before Sweep Start and After Sweep End. However, they are configured and enabled separately on the "Interface Control" dialog box. For example; to send a command before and after a PNA sweep, the "Enable Interface Control" check box must be selected and commands entered in both the Before Sweep Start and After Sweep End tabs. The **Before Sweep Start** data is sent before the first trace on the channel begins sweeping. The **After Sweep Start** data is sent after the last trace on the channel sweep is completed.

### **Dwell After Command: (7)**

Specifies a wait time, in milliseconds, after all commands to all interfaces are sent. Any positive integer is allowed. This is used to allow all external devices to settle before beginning a measurement. An erratic trace could indicate that more settling time is necessary.

### **Handler I/O Control and Aux I/O Output Voltage: (8)**

Provides I/O interface control through the rear panel of the analyzer. Refer to the Help menu for further information.

### **Reset All:**

Sets all fields on all channels to their default values.

### **Save and Recall:**

Saves and recalls the contents of the dialog box. If the Interface Control dialog box is populated with settings during an Instrument State Save, the settings are automatically recalled with the instrument state settings. Interface control uses an \*.xml file type. An example file is stored on the analyzer's hard drive. You can recall it into the dialog, or you can open and edit it with a word processor, such as Word Pad.

### **OK:**

Applies the settings and closes the dialog box.

### **Cancel:**

Does not apply changes that were made and closes the dialog box.

### **Help:**

Provides additional information for using the interface control application.

## SCPI Control Mode

The Command Processor feature allows you to send remote commands and data to the analyzer's rear-panel GPIB connector and Test Set I/O connector. More information regarding the Command Processor can be found in the Help menu.

### Overview of the SCPI Control

The Command Processor allows you to send address and data to control an external test set, without needing to create a remote program. The user is required to manually input address and data using the Command Processor Console in the Help menu.

- Command Processor settings can not be saved or recalled.
- Address and data can be *written* and *read* from the Command Processor.

## How to Access the Command Processor

1. To access the Command Processor, select **Utility > System > Configure > SICL/GPIB/SCPI -OR- (System > System Setup > Remote Interface > SCPI Monitor Input > Show SCPI Parser Console).**
2. Check the **SCPI Command Processor Console** box.

Figure 44 Command Console for 'A' Model Analyzers


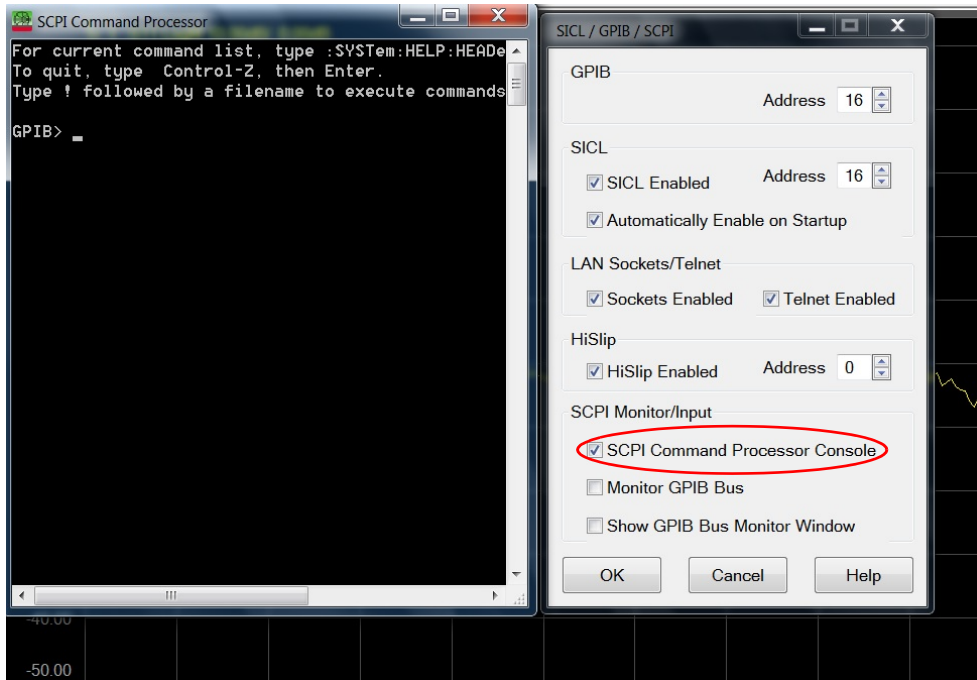


Figure 45 Command Console for 'B' Model Analyzers

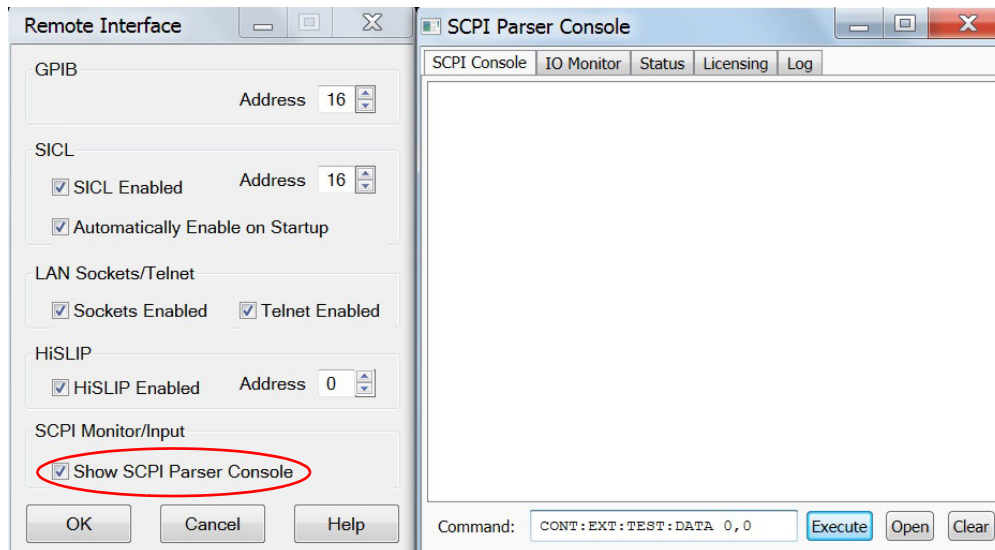

## SCPI Command Processor Console

There are two methods in which the PNA-X Command Processor Console can be used to control the Test Set internal switches to configure the Multiport system for S-Parameter measurements.

When the Command Processor Console is opened as instructed in the previous page, examples of the two control methods will be provided.


### Method 1 - Using GPIB/SCPI Command Values

This method is available while the system is in Multiport mode only.

The Test Set internal switch settings are programmed into the Test Set firmware; they are configured by the PNA-X S-parameter values. Method 1 provides more PNA-X control capability than Method 2.

The following example shows two executable commands needed to create an S-parameter measurement on your Multiport system.

Figure 46 Method 1 - Using GPIB/SCPI Command Values

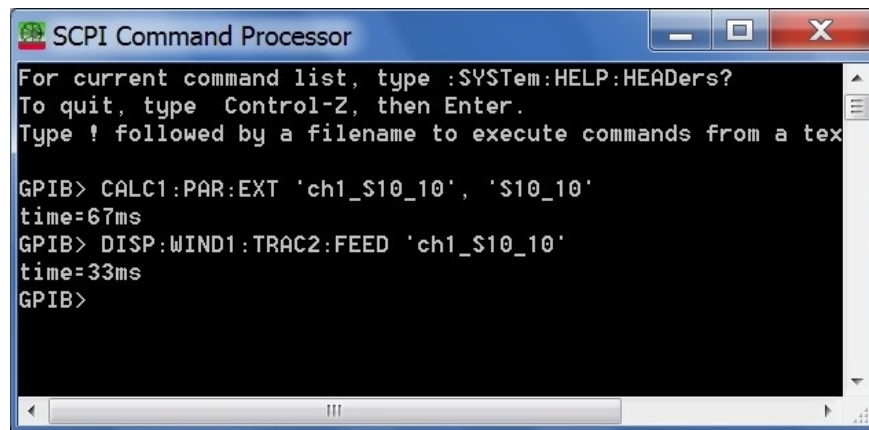

This first command creates a new S10\_10 measurement on channel 1 of the PNA-X, named "ch1\_S10\_10," and configures the internal Test Set RF switches.

CALC1:PAR:EXT 'ch1\_S10\_10', 'S10\_10'

This second command feeds the newly created measurement named "ch1\_S10\_10" to trace 2 on the PNA-X so that it will be displayed on the PNA-X screen.

DISP:WIND1:TRAC2:FEED 'ch1\_S10\_10'

NOTE: Here are syntax format examples for single digit S-parameters:

'ch1\_S99'      'ch1\_S22'      'ch1\_S9\_10'    'ch1\_S10\_9'



## Method 2 - Using the Test Set Address and Data Values

This method is available while the system is in Standalone mode only. The Address and Data values for the Test Set can be found in the “Address and Data Values” section on [page 54](#).

The Test Set internal switch settings are programmed into the firmware of the Test Set and can be controlled with the specific Address and Data values. Each Address and Data value pair sets the Source or Receiver switch paths. For an S-parameter measurement, two pairs of Address and Data values will be needed.

Address and Data values are separated by a comma. Commands should be separated by a new line, or carriage return.


For example:

```
CONT:EXT:TEST:DATA <address>,<data>
```

```
CONT:EXT:TEST:DATA 0,0
```

Example: CONT:EXT:TEST:DATA 0,0

Figure 47 Method 2 - Using Test Set Address and Data Values

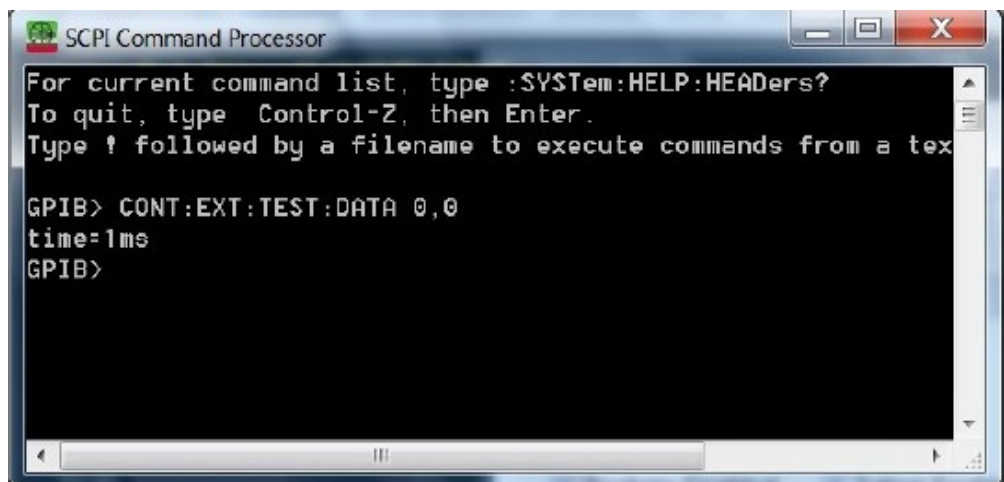

## Address and Data Values

### Setting the Test Port Paths with Address and Data

Refer to [Table 12](#) below and [Figure 48 on page 55](#) for information to set the internal switch paths of the test set.

The address is the first value in the Test Set I/O control or GPIB data command. The second value controls the source and receiver paths of the ports. To select a test set port configuration both switches must be set to complete the source and receiver paths. To do this you must add the data values together to determine the data command value for each port, which is the second number in the Test Set I/O or GPIB command. Refer to [“Interface Control Mode” on page 47](#) and in [“SCPI Control Mode” on page 50](#).

**Example 1:** If the ports have different addresses, two separate address data commands must be used. Refer to [Figure 48 on page 55](#).

Port 9 is the Source and Port 10 is the Receiver.

Source Port 9 = address 0, data 8 and Receiver Port 10 = address 16, data 128.

Two separate commands must to be sent, you may use the same dialog box. Send address 0 and data 8 in one command line, and address 16 and data 128 in the second line.

For further information refer to [“How to Access Interface Control Mode” on page 47](#) and [“How to Access the Command Processor” on page 51](#).

**Example 2:** If the ports have the same address, only one command is needed.


Port 5 is the Source and Ports 9 is the Receiver.

Source Port 5 = address 0, data 2 and Receiver Port 9 = address 0, data 128. The data values are added together, the entry will be 0.130.

Table 12 Source and Receiver Address and Data

| Address        |       | Source Path |   |    | Receiver Path |    |     |
|----------------|-------|-------------|---|----|---------------|----|-----|
| N5230C PNA-L   |       |             |   |    |               |    |     |
|                | Data  | 1           | 2 | 8  | 16            | 32 | 128 |
| 0              | Ports | 1           | 5 | 9  | 1             | 5  | 9   |
| 16             | Ports | 2           | 6 | 10 | 2             | 6  | 10  |
| 32             | Ports | 3           | 7 | 11 | 3             | 7  | 11  |
| 64             | Ports | 4           | 8 | 12 | 4             | 8  | 12  |
| N5242A/B PNA-X |       |             |   |    |               |    |     |
|                | Data  | 1           | 2 | 8  | 16            | 32 | 128 |
| 0              | Ports | 1           | 5 | 9  | 1             | 5  | 9   |
| 16             | Ports | 3           | 6 | 10 | 3             | 6  | 10  |
| 32             | Ports | 4           | 7 | 11 | 4             | 7  | 11  |
| 64             | Ports | 2           | 8 | 12 | 2             | 8  | 12  |

Figure 48 Example 1: Address and Data (Ports 9 & 10)

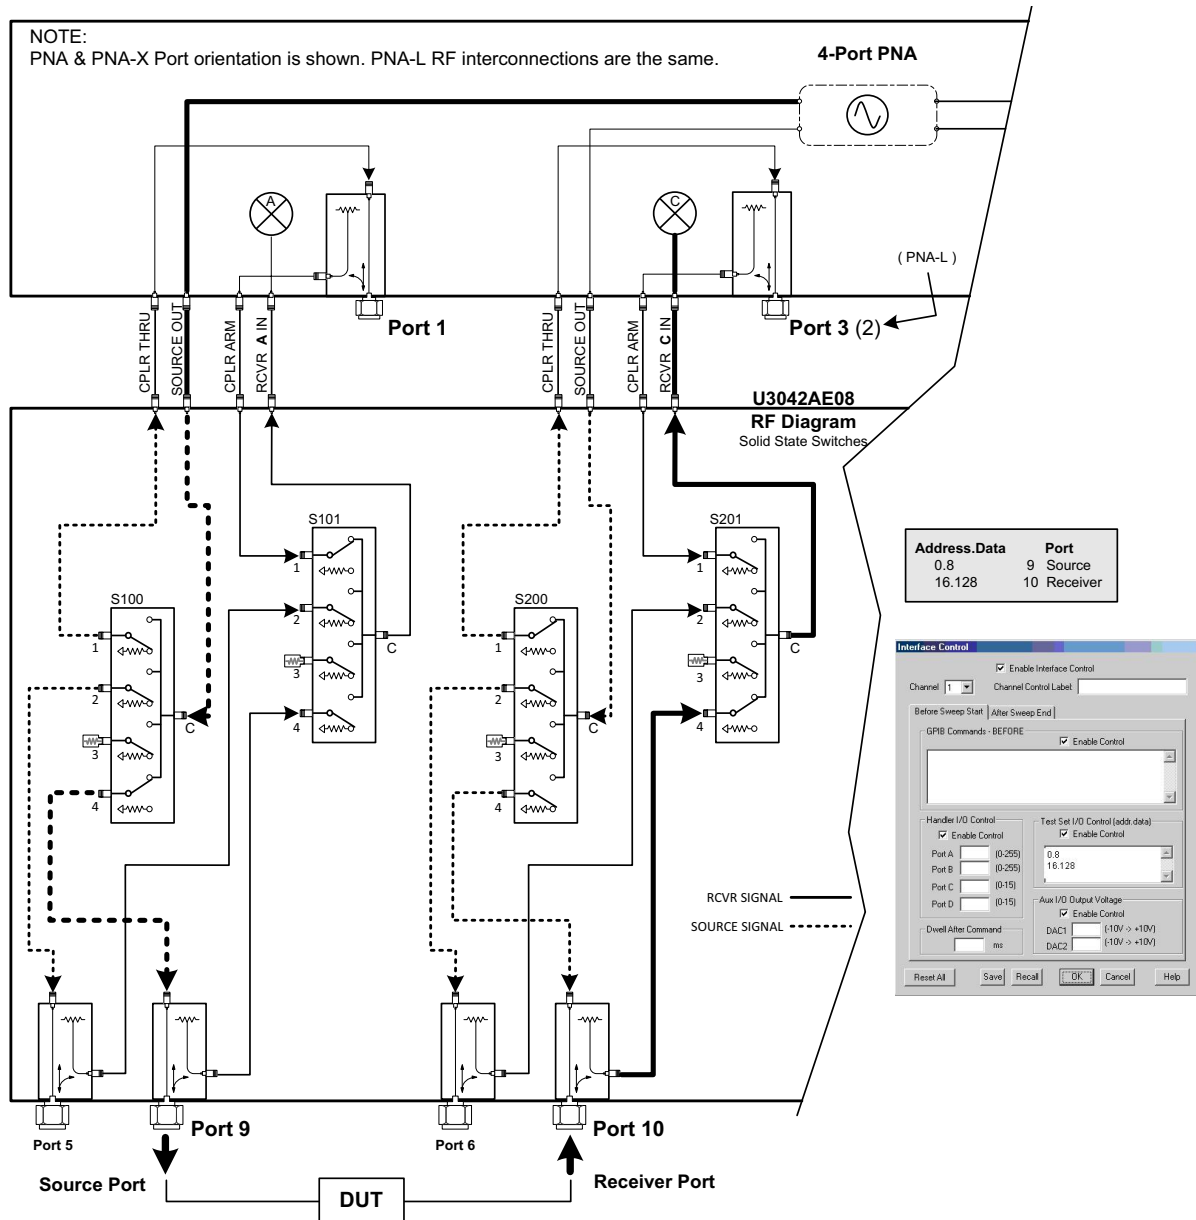

## Control Lines

The 15 pin female D-Sub connector on the front panel provides 8 latched data lines that can be used to control your device under test (DUT). The lines can be controlled with the Multiport External Test Set control, or Test Set I/O commands. Refer to [“Setting the Test Port Paths with Address and Data” on page 54](#). See [Table 13](#) for DUT control line specification.

The output voltage of the lines can be from the internal adjustable voltage source (+2 to +5 Vdc), or an external DC power supply depending on how the connection to the control line is configured. When using an external power supply a positive or negative voltage can be used. Refer to [Figure 50 on page 58](#) and [Table 14 on page 57](#) for control line pin location and description. Refer to [“Internal Voltage Supply Configuration” on page 58](#) and [“External Voltage Supply Configuration” on page 59](#) for configurations.

Table 13 DUT Control Specifications

| Item                       | Specifications      |
|----------------------------|---------------------|
| Connector Type             | 15-pin female D-Sub |
| Max Output Line Current    | 100 mA (each line)  |
| Control Line DC resistance | < 10 W (each line)  |
| Voltage Range:             |                     |
| Positive Input             | 0 to +5 V           |
| Negative Input             | –5 to 0 V           |
| Internal Variable Voltage  | +2 to +5 V          |

Figure 49 DUT Control Line Pin Assignment (rear panel view)

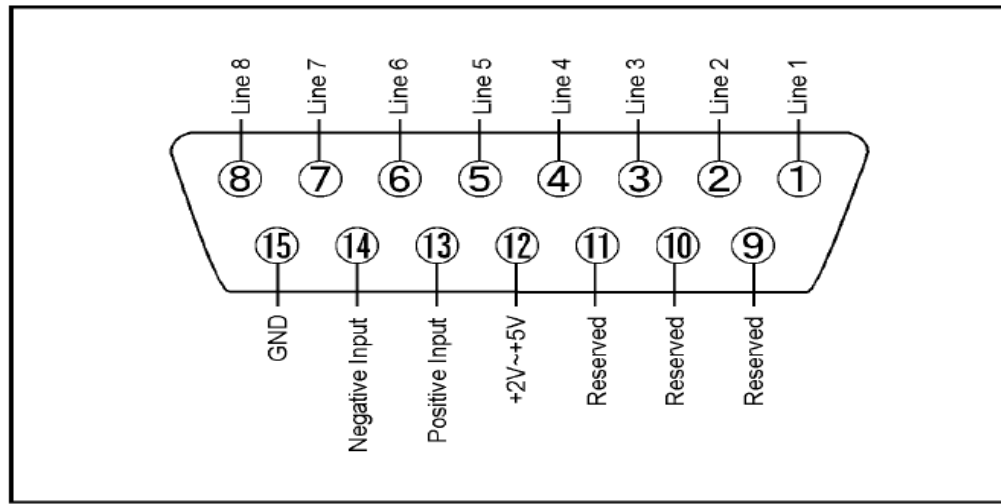


Table 14 DUT Control Line Pin Assignment

| Pin      | Signal Name    | Description   |
|----------|----------------|---|
| 1        | Line 1         | Control Line Output of the voltage from pin 13 or pin 14.             |
| 2        | Line 2         | Control Line Output of the voltage from pin 13 or pin 14.             |
| 3        | Line 3         | Control Line Output of the voltage from pin 13 or pin 14.             |
| 4        | Line 4         | Control Line Output of the voltage from pin 13 or pin 14.             |
| 5        | Line 5         | Control Line Output of the voltage from pin 13 or pin 14.             |
| 6        | Line 6         | Control Line Output of the voltage from pin 13 or pin 14.             |
| 7        | Line 7         | Control Line Output of the voltage from pin 13 or pin 14.             |
| 8        | Line 8         | Control Line Output of the voltage from pin 13 or pin 14.             |
| 9,10 &11 |                | Not used  |
| 12       | +2 V to +5 V   | Internal voltage output, adjusted with the trimmer on the rear panel. |
| 13       | Positive Input | Connection for internal (pin 12) or external positive voltage supply. |
| 14       | Negative Input | Connection for ground (pin 15) or external negative voltage supply.   |
| 15       | Gnd            | ground terminal   |

## Internal Voltage Supply Configuration

The output voltage of pin 12 can be varied from +2 to +5 V. Perform the following procedure to set the voltage:


1. Turn On the test set.
2. Measure the voltage between pin 12 and 15 using a multimeter.
3. Rotate the voltage adjustment trimmer on the front panel until the multimeter indicates the appropriate voltage.

**Figure 50** below illustrates an example of the connection between the DUT and the test set using the internal DC power supply. Connect pin 12 to pin 13 and pin 14 to pin 15 to provide the ground path. Connect the control lines to the external DUT.

### CAUTION

You may only connect pin 12–13, and pin 14–15. Damage may result if any other path is short-circuited.

Figure 50 Internal DC Power Configuration (rear panel view)

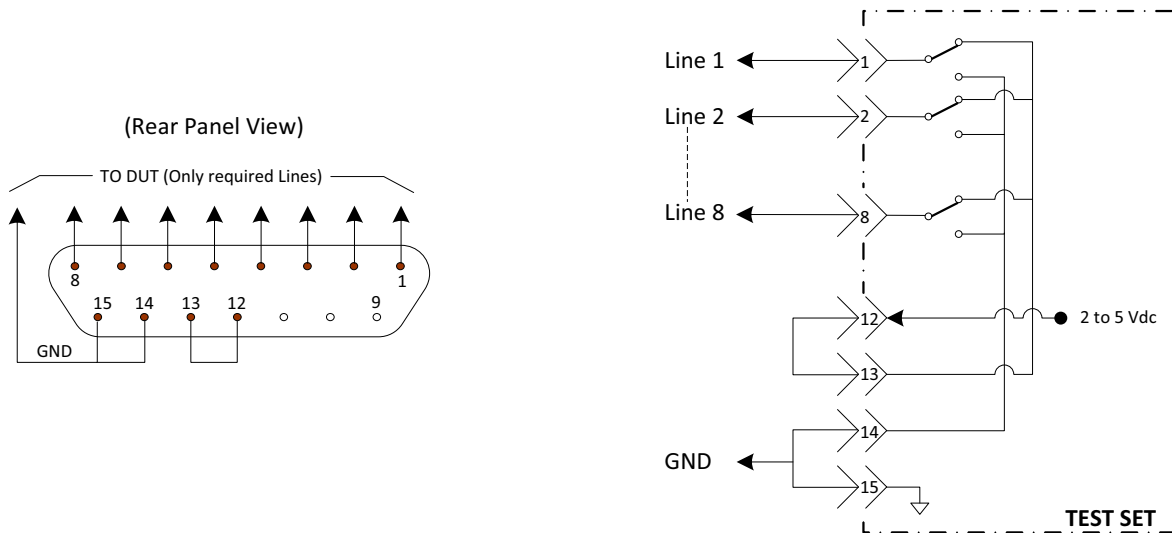

## External Voltage Supply Configuration

**Figure 51** below illustrates an example of the connection with an external DC power supply. Connect the positive and negative voltage supply from the external power supply to the positive input (pin 13) and the negative input (pin 14). Connect the power supply DC ground to pin 15.


### Turning On the Test Set using an External Power Supply.

1. Turning On the test set.
2. Connect the DUT.
3. Turn On the external power supply.

### Turning Off the Test Set using an External Power Supply.

1. Turning Off the power supply.
2. Turning Off the test set.
3. Disconnect the DUT.

Figure 51 Test Set to the DUT and External DC Power Supply

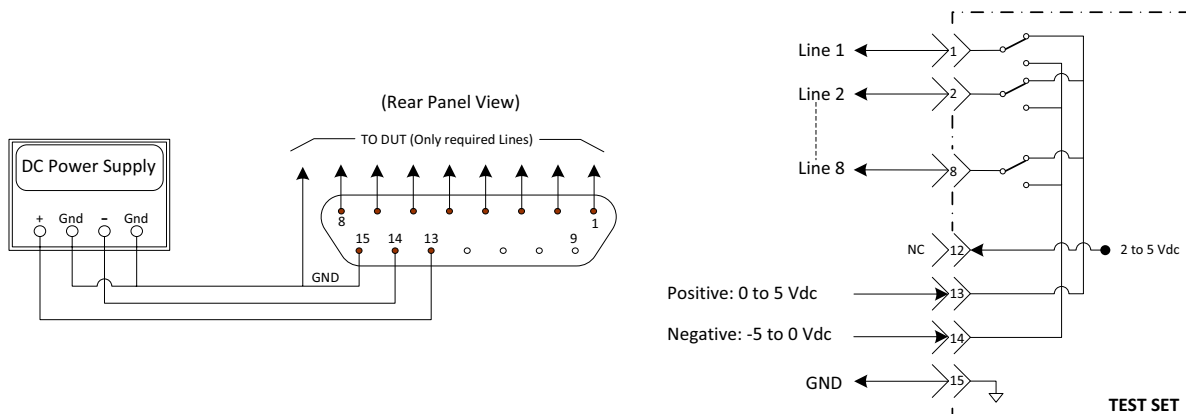

## Setting the Control Lines with Address and Data Values

This section describes how to control the rear panel DUT control lines.

### NOTE

The following control feature will function only while the analyzer is in Standalone Mode.

Setting the Network Analyzer to Standalone Mode.

1. Select **Utility > System > Configure > Multiport Capability -OR- (Instrument > Setup > External Hardware > Multiport > Multiport Configuration...)**.  
In the dialog box select **Restart as a standalone PNA > OK**.

As described in “[Setting the Test Port Paths with Address and Data](#)” on page 54, the <address>.<data> values are determined in a similar manner, with the following exceptions:

- [Table 15](#) will be used.
- The <address> value is always = 112

Table 15 Test Set DUT Control Address and Data Logic Table

| <Address> | <Data> | Description  | Line/Pin |
|-----------|--------|--|----------|
| 112       | 0      | ALL DUT Control Lines set to logic high or connected to Pin 13 | 1-8      |
| 112       | 255    | ALL DUT Control Lines set to logic high or connected to Pin 14 | 1-8      |
| 112       | 1      | DUT Control Line 1 set to logic low or connected to Pin 14     | 1        |
| 112       | 2      | DUT Control Line 2 set to logic low or connected to Pin 14     | 2        |
| 112       | 4      | DUT Control Line 3 set to logic low or connected to Pin 14     | 3        |
| 112       | 8      | DUT Control Line 4 set to logic low or connected to Pin 14     | 4        |
| 112       | 16     | DUT Control Line 5 set to logic low or connected to Pin 14     | 5        |
| 112       | 32     | DUT Control Line 6 set to logic low or connected to Pin 14     | 6        |
| 112       | 64     | DUT Control Line 7 set to logic low or connected to Pin 14     | 7        |
| 112       | 128    | DUT Control Line 8 set to logic low or connected to Pin 14     | 8        |



After a power reset, all DUT control lines are initially configured to a logic high state or connected to Pin 13 (refer to [Figure 50 on page 58](#)). To reset all control lines to logic high, without having to reset the power switch on the test set, make the following analyzer entry:

Front panel analyzer Interface Control Mode line entry = **112.0 > OK**.

Always determine which control lines you want set to a logic zero, the other remaining lines will automatically be set to a logic high. Note the <data> value of these lines and calculate the SUM of their <data> values.

Listed are two examples to illustrate this concept. Refer to [Figure 49 on page 57](#) shown with all lines = logic high.

*Example 1:* To change lines 1 & 8 to equal logic Low, all others logic high.

1. Line 1 (<address> = 112 and <data> = 1)
2. Line 8 (<address> = 112 and <data> = 128)
3. The SUM of the <data> values = 129
4. Front panel analyzer Interface Control Mode line entry = 112.129 > OK.

*Example 2:* From Example 1 to only change Lines 2 & 3 to equal logic low, all others logic high.

1. Line 2 (<address> = 112 and <data> = 2)
2. Line 3 (<address> = 112 and <data> = 4)
3. The SUM of the <data> values = 6
4. Front panel analyzer Interface Control Mode line entry = 112.6 > OK.

---

**NOTE**

Since all control lines have the same <address>, only one "<address>.<data>" command line is needed to control all 8 lines.

---

## Cal Kit Operational Check

The following procedure can be used to confirm that the test set and analyzer are operational. The operation verification limits provided ensure that your test set and analyzer are operating properly within the limits. Refer to [“General Specifications” on page 11](#).

### Equipment Required

The Keysight U3042AE08 requires that the user be familiar with the equipment and components listed in [Table 16](#).

This section provides an equipment list and setup of the analyzer and test set.

Table 16      Equipment List

| Description  | Qty |
|--|-----|
| N4691A 3.5 mm ECal Module 10 MHz - 26.5 GHz (Option 00F or M0F) <i>or</i><br>N4691B 3.5 mm ECal Module 300 kHz - 26.5 GHz (Option 00F or M0F) <i>or</i><br>Mechanical cal kit 85052B or 85052D | 1   |
| N5230C 4-Port Network Analyzer (Option 245 and 551) <i>or</i><br>N5242A/B Option 400 and 551   | 1   |
| Set of interconnect cables (analyzer and Test Set), see<br><a href="#">“PNA-L RF Interface Cable Connections (U3021-60045)” on page 24</a> .   | 1   |

## Verification Limits

Specifications for the test set are typical. System performance for the analyzer and test set are only characteristic and intended as non warranted information. Only a functional certificate is provided for the U3042AE08.

It is recommended that you return your instrument to Keysight Technologies for servicing or repair if the test set and analyzer performance exceed the operational verification limits.

### NOTE

Typical specifications are based on 1 to 2 units performance. Refer to [Table 17](#) and [Table 18](#) below.

Table 17 N5230C Reflection Tracking Limits<sup>1</sup>

| Frequency        | Standard Port 1-12 <sup>2</sup> | Option 001 or 002 Port 1-12 |
|------------------|---------------------------------|-----------------------------|
| 10 MHz to 4 GHz  | -10.0 dB                        | 0 dB                        |
| 4 GHz to 6 GHz   | -13.0 dB                        | -2.5 dB                     |
| 6 GHz to 10 GHz  | -16.0 dB                        | -5.0 dB                     |
| 10 GHz to 15 GHz | -17.0 dB                        | -7.5 dB                     |
| 15 GHz to 20 GHz | -25.0 dB                        | -15.0 dB                    |

1. Reflection Tracking takes into account Source Loss, Receiver Loss, Margin, and analyzer's Mixer Cal.

2. A standard unit is one without Options 001 or 002.

Table 18 N5242A/B Reflection Tracking Limits<sup>1</sup>

| Frequency          | Standard <sup>2</sup> Port 1-12 | Options 001 or 002 Port 1-12 |
|--------------------|---------------------------------|------------------------------|
| 10 MHz to 4 GHz    | -10.0 dB                        | 0 dB                         |
| 4 GHz to 6 GHz     | -13.0 dB                        | -2.5 dB                      |
| 6 GHz to 10 GHz    | -16.0 dB                        | -5.0 dB                      |
| 10 GHz to 15 GHz   | -17.0 dB                        | -7.5 dB                      |
| 15 GHz to 20 GHz   | -25.0 dB                        | -15.0 dB                     |
| 20 GHz to 26.5 GHz | -30.0 dB                        | -40 dB                       |

1. Reflection Tracking takes into account Source Loss, Receiver Loss, Margin, and analyzer's Mixer Cal.

2. A standard unit is one without Options 001 or 002.

### NOTE

If you suspect that your 12-Port configuration is not operating properly, ensure that all front RF jumper interconnect cables are correctly attached.


## Operational Check Procedure

The sequence of this procedure is very important and must be followed or the performance accuracy and results may vary from the reference plots provided. Ensure that the test set is not connected to the analyzer if you are performing the Operator's Check. The analyzer will indicate false failures if the test set is connected.

### Preparing the N5230C or N5242A/B

1. Connect the test set to the N5242A/B 4-Port PNA-X using the interconnect cables as shown in [Figure 17 on page 27](#) and [Table 10 on page 26](#). If you are using a N5230C, refer to [Figure 16 on page 25](#) and [Table 9 on page 24](#).
2. Turn On the test set.
3. On the analyzer, select **Response > CAL > Manage Cals > Cal Set -OR- (Cal Sets & Cal Kits > Cal Set...)**. Delete or Rename any Cal Sets titled "999.1" thru "999.12" (12-Port), although it is unlikely that you will find Cal Sets with these names.
4. Verify that the analyzer is in 12-Port. See the bottom of the measurement window.
  - a. If only four S-Parameters are listed, press **Utility > System > Configure > Multiport Capability -OR- (Instrument > Setup > External Hardware > Multiport > Multiport Configuration...)**. On the Multiport Restart dialog, select **Restart as multiport PNA with this test set**. Select **U3042AE08 (12-Port)**.
5. **[Preset]** the analyzer.
6. Verify that the **[Stop Frequency]** is set to **[20 GHz]** or **[26.5 GHz]**.
7. Verify that the **[Start Frequency]** is set to **[10 MHz]**.
8. Verify that the **[Power]** is set to **[-5 dBm]**.
9. Select **Response > Avg > IF Band width > 100 Hz**.
10. Select **Stimulus > Sweep > Number of Points > 401**.
11. Connect the ECal module to the analyzer's USB port on the front or rear panel. This procedure assumes you are using a ECal. If you are not, see ["1-Port Calibration and Verification Procedure" step 2](#).
12. Allow the ECal module, test set and analyzer to warm up for a minimum of 30 minutes.


Figure 52 Setting the IF Bandwidth

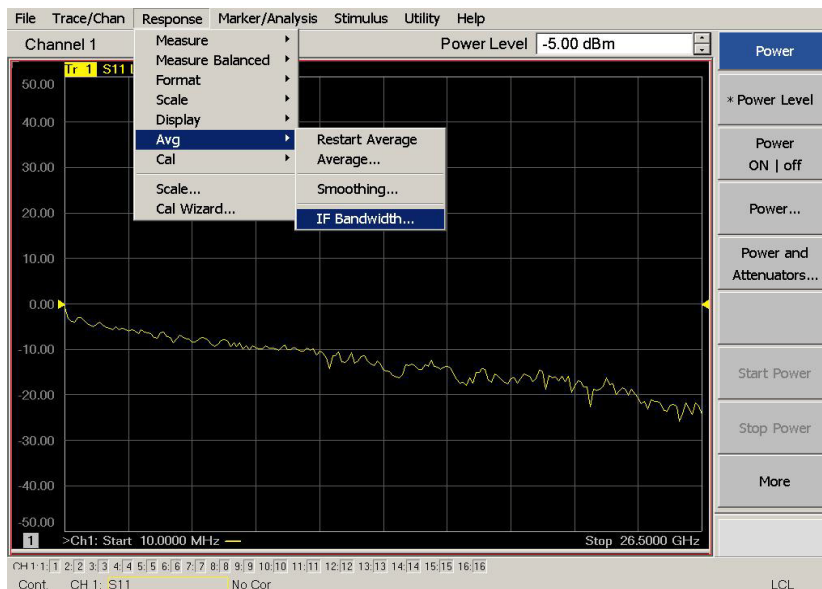

## 1-Port Calibration and Verification Procedure

1. Connect the ECal or the mechanical cal kit to Port 1 or the port you are testing. Torque to 8 in-lb. For more information press the **Help** button, see [Figure 53](#).
2. On the analyzer perform a 1-Port Calibration on Port 1.  
Select **Response > Cal > Start Cal > Calibration Wizard -OR- (Response > Cal > Other Cals)**.
  - a. If using a mechanical cal kit, select **SmartCal (Guided Calibration) > Next**.
  - b. If using an ECal module, connect the ECal to an available USB port and select **Use Electronic Calibration (ECal) > Next**.
3. Continue following the Cal Wizard prompts. In the “Select Calibration Ports and ECal Module” window, press **Clear All** and select **Port 1**, then press **Next > Measure**.
4. Ensure the Cal Kit you are using is shown on the right side of the dialog box.

Figure 53 1-Port Calibration

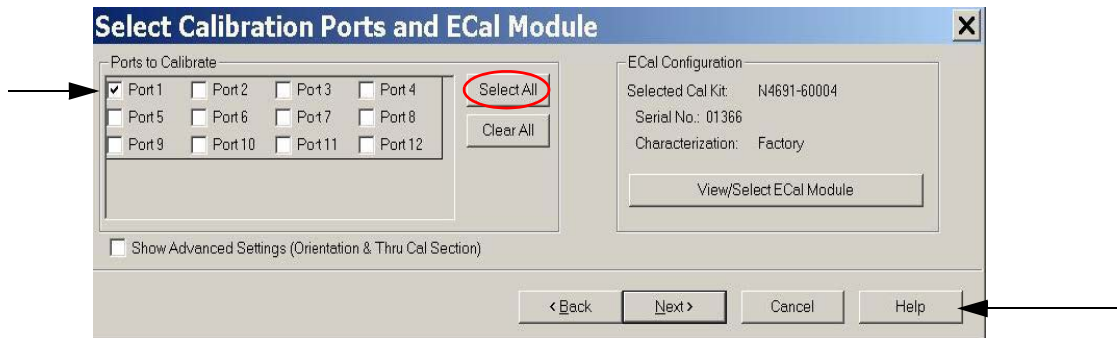

5. Continue to follow the prompts. At the Calibration Completed dialog box, select **Save As User Calset**, type the name **999.1**. Overwrite the Calset if it already exists and **Save**.


### NOTE

If you do not have a keyboard, select **Save As User Calset > Edit Name** and save as 999.x. X is the port number you are calibrating. Use the numeric keypad on the analyzer's front panel to enter "999.1." Refer to [Figure 54](#).

6. Repeat [step 1](#) thru [step 5](#) (1-Port Calibration Procedure) for Ports 2 thru 12, or just the specific test port being verified. When finished, there should be sixteen Cal Sets saved with the titles "999.1" thru "999.12" (12-Port).

If you are using an ECal module you can verify the individual port calibration by selecting **Response > CAL > More > ECAL > ECAL Confidence Check**. Select **Change Measurement -OR- (Response > Cal > Cal Sets & Cal Kits > ECal Confidence Check)** and select the test port **S-Parameter > Apply > OK > Read > Module Data**. For further information refer to the Help menu.


Figure 54 Calibration Complete

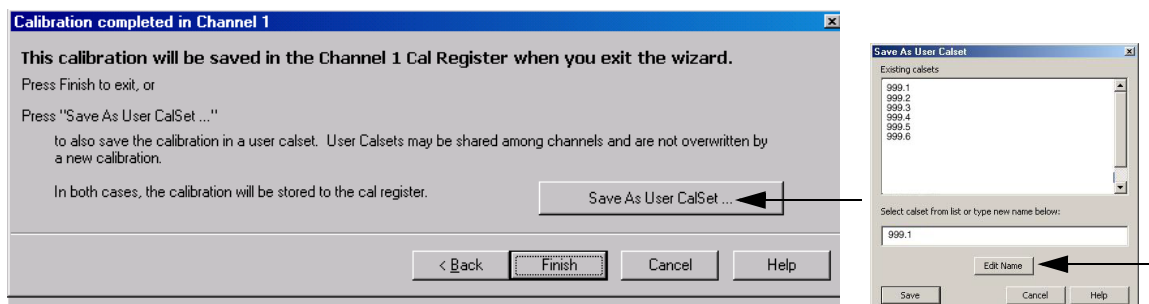

## Cal Set Verification

1. Select **Trace/Chan > Trace > Delete Trace** -OR- (**Instrument > Trace > Delete Trace**). There should be no traces on the display.
2. To launch the Cal Set Viewer tool bar. Select **Response > Cal > Manage Cals > Cal Set Viewer** -OR- (**Response > Cal > Cal Sets & Cal Kits > Cal Set Viewer [On/Off]**).

Figure 55 Calibration, Cal Set Viewer

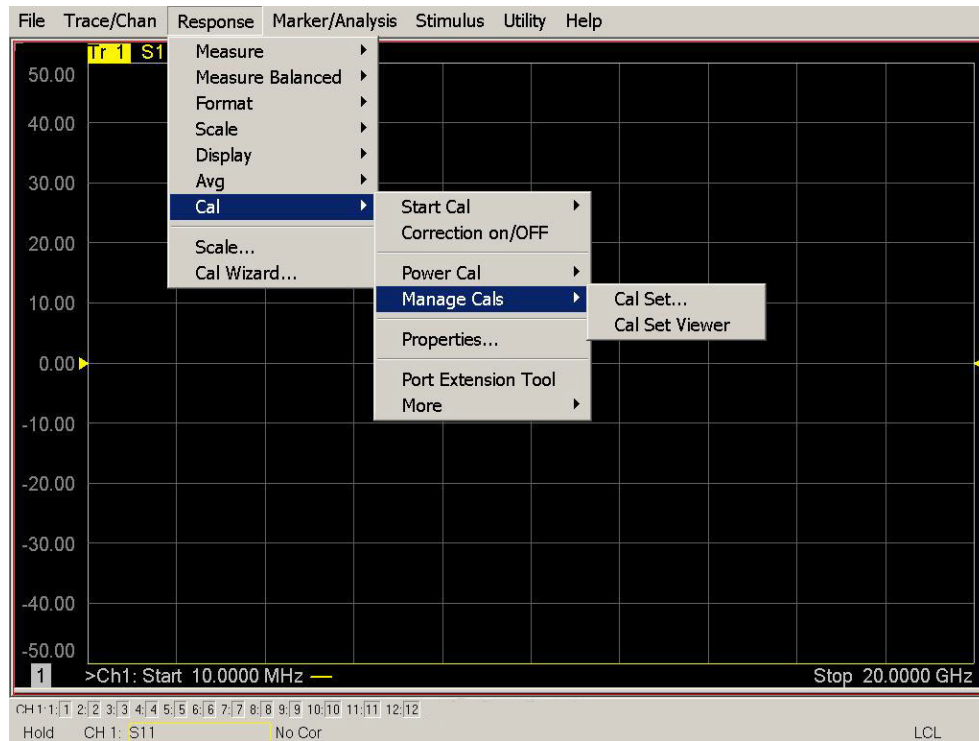

3. From the Cal Sets drop-down menu, select **999.1** and check **Enable**. Select the **Reflection Tracking(1,1)** term in the center drop-down menu and ensure that the **Enable** and **Error Terms** are selected.
4. Compare the Reflection Tracking (1,1) trace to the appropriate limits in [Table 17 on page 63](#) (N5230C) or [Table 18 on page 63](#) (N5242A/B). This can be done using Limit Lines (press **Marker/Analysis > Analysis > Limit Test**). The trace should be above the limit. PASS will be displayed on the screen if the limit lines are used.
5. Repeat [step 3](#) and [step 4](#) for Cal Sets “999.1” thru “999.12” (12-Port).

Figure 56 Option 001 or 002 Reflection Tracking Trace (Port 1-12) with N5230C


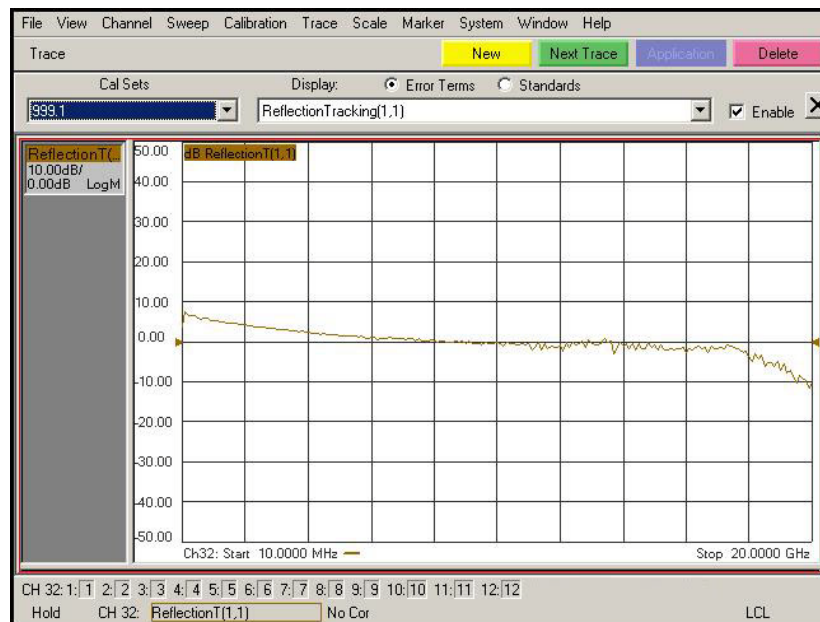


Figure 57 Standard Reflection Tracking Trace (Port 1-12) with N5230C

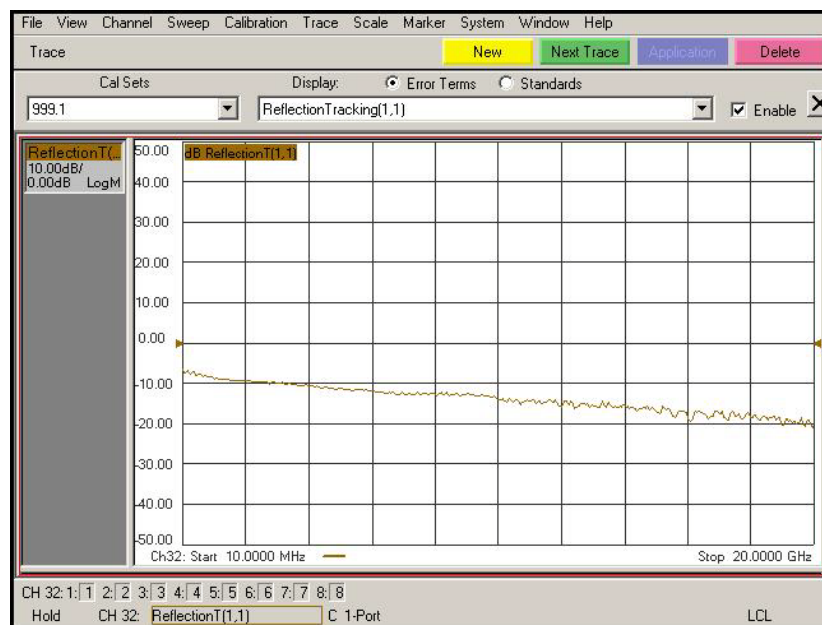

Reflection Tracking Plot Examples

Figure 58      Option 001 or 002 Reflection Tracking Trace (Port 1-4) with N5242A


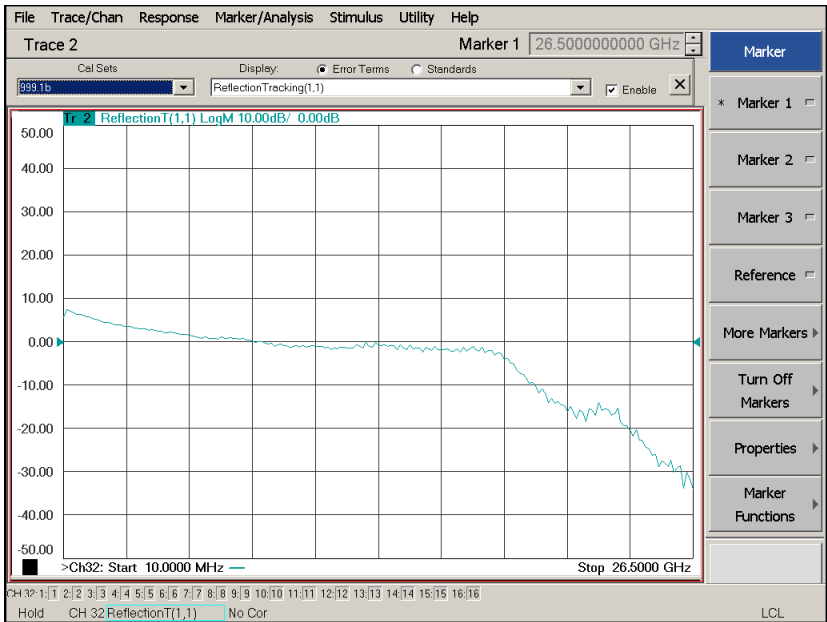


Figure 59      Option 001 or 002 Reflection Tracking Trace (Port 5-12) with N5242A

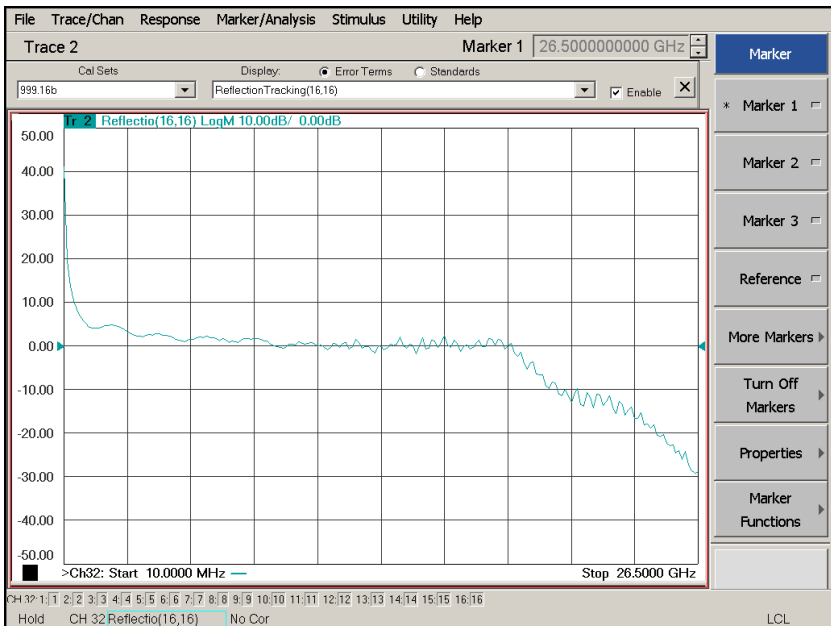

**NOTE** Response from 10 MHz to 500 MHz is normal due to the PNA-X Couplers in comparison to the test set bridges. The bridges have more gain in the coupled RF path.



Figure 60 Standard Reflection Tracking Trace (Port 1-4) with N5242A


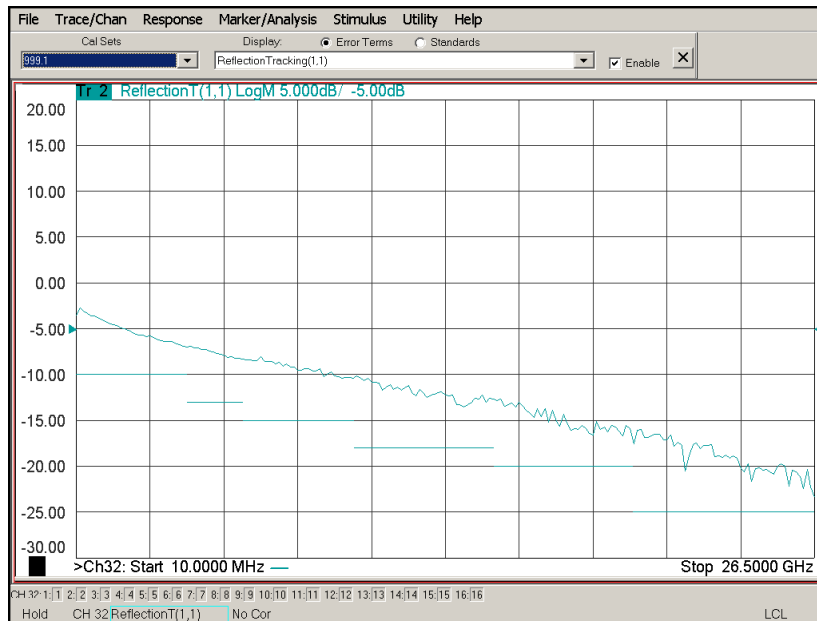


Figure 61 Standard Reflection Tracking Trace (Port 5-12) with N5242A

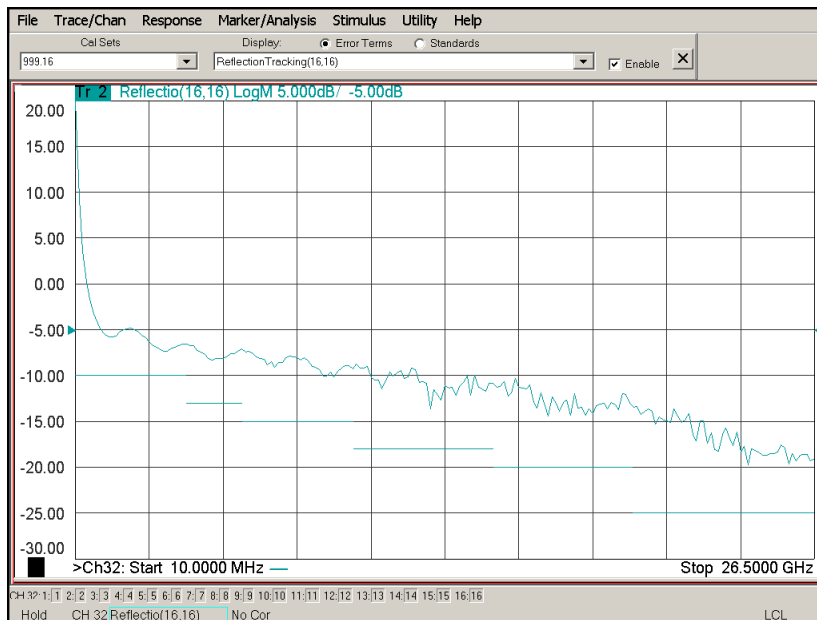

**NOTE**

Response from 10 MHz to 500 MHz is normal due to the PNA-X couplers in comparison to the test set bridges. The bridges have more gain in the coupled RF path.

## Verifying Cal Kit Operational Check Failures

If your test results fail the Operational Check limits, see [Table 7](#) and [Table 8 on page 14](#) and verify the following:


1. Ensure that the test set is turned on and connected properly to the analyzer.
2. Check all appropriate network analyzer and test set connectors for damage, cleanliness, and proper torque.
3. Repeat the relevant 1-Port calibrations.
4. Verify that the stand-alone network analyzer is operating properly and meeting its published specifications.

### ECal Confidence Check

The following procedure verifies the accuracy of a 1-Port calibration using mechanical standards or an ECal module. To perform this check, the test port of the ECal module must be connected directly to the test port being verified (without adapters).

1. Perform a 1-Port calibration on the test set port being tested.
2. Connect the ECal module to the port being tested. Terminate any remaining ports on the ECal module.
3. Select the Cal Set to be tested. **[Cal] > Cal Set > Cal\_file > Apply Cal > Close** -OR- **([CAL] Cal Set & Cal Kits > Cal Set... > Apply Cal)**. If the Choose Stimulus Settings prompt appears, select **Change the active channel's stimulus > OK > Close**.
4. Select **[Response] > Cal > More > ECal > ECal Confidence Check** -OR- **(Response > Cal > ECal Confidence Check...)**.
5. Select **Trace View Options > Data and Memory**.
6. Select the ECal Confidence Check: Select **Change Measurement**, then select the test port S-Parameter > **Apply > OK**. Select **Read Module Data**.
7. Select the ECal Module: Select the ECal module you are using, then select **ECal Module Memory and Factory ID > OK**. If the two traces show excessive differences, verify the integrity of the test path cables, ports and connections.

Figure 62 ECal Confidence Check

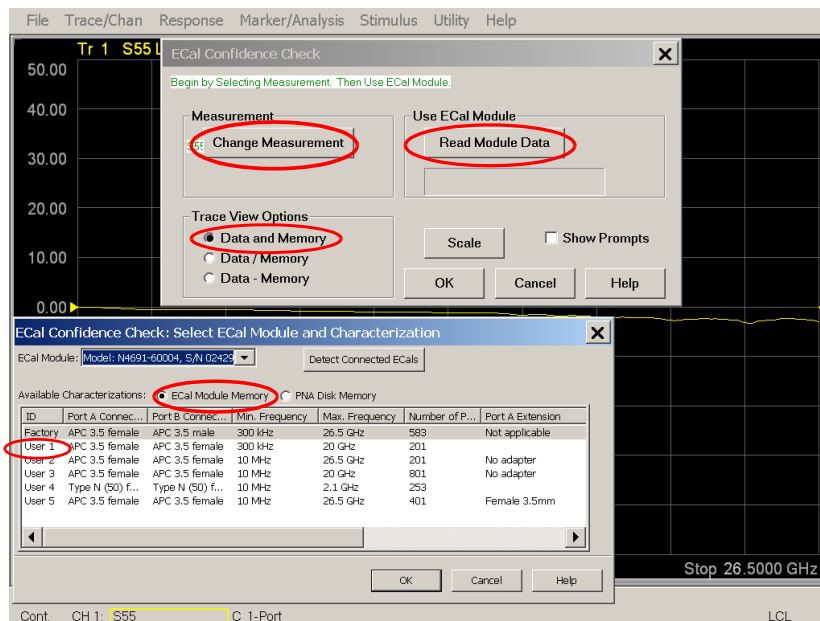

## Service Information

There are many other repair and calibration options available from the Keysight Technologies support organization. These options cover a range of service agreements with varying response times. Contact Keysight for additional information on available service agreements for this product.

### WARNING

**No operator serviceable parts inside. Refer servicing to qualified personnel. To prevent electrical shock do not remove covers.**

### WARNING

**These servicing instructions are for use by qualified personnel only. To avoid electrical shock, do not perform any servicing unless you are qualified to do so.**

## Electrostatic Discharge Protection

Electrostatic discharge (ESD) can damage or destroy electronic components. The product is shipped in materials that prevent damage from static, and should only be removed from the packaging in an anti-static area ensuring that the correct anti-static precautions are taken.

Two types of ESD protection are listed below. Purchase acceptable ESD accessories from your local supplier.

- Conductive table-mat and wrist-strap combination
- Conductive floor-mat and heel-strap combination

Both types, when used together, provide a significant level of ESD protection. To ensure user safety, static-safe accessories must provide at least 1 M $\Omega$  of isolation from ground.

### WARNING

**These techniques for a static-safe work station should not be used when working on circuitry with a voltage potential greater than 500 volts.**

## Replaceable Parts

The following replaceable parts are available from Keysight Technologies at <https://www.keysight.com/my/faces/fapHomePage.jspx>.

Table 19 Available Replacement Parts (SPO)

| Description                                | Keysight Part Number |
|--|----------------------|
| Screw                                      | 0515-2317            |
| PWR Supply (AC/DC SWG 650W 9- Output       | 0950-4729            |
| Fuse (8 A 250 V non-time delay (1.25 inch) | 2110-0342            |

(Continued on next page)

Table 19 Available Replacement Parts (SPO) (Continued from previous page)

|   |                                      |
|---|--------------------------------------|
| Fuse (5 A 250 V non-time delay (20 mm)) | 2110-0709                            |
| Locking Feet for a PNA & PNA-X          | 5023-0132                            |
| Test Set Locking Feet to a PNA-L        | 5063-9253                            |
| Amplifier (Option 001 & 002)            | 5087-7290 <i>or</i> 5087-7750 (RoHS) |
| Quad Switch                             | 5087-7306 <i>or</i> 5087-7751 (RoHS) |
| Coupler/Bridge                          | 5087-7716 <i>or</i> 5087-7752 (RoHS) |
| Fan (rear panel)                        | 87050-60027                          |
| Fan (Deck)                              | 87075-60021                          |
| Test Set I/O Cable                      | N4011-21002                          |
| PNA-X Test Set Rear Lock Feet (right)   | N5242-20138                          |
| PNA-X Test Set Rear Lock Feet (left)    | N5242-20139                          |
| Port 1 CPLR ARM                         | U3042-20029                          |
| Port 1 RCVR A IN                        | U3042-20030                          |
| Port 1 SOURCE OUT                       | U3042-20031                          |
| Port 1 CPLR THRU                        | U3042-20032                          |
| Port 3 CPLR ARM                         | U3042-20033                          |
| Port 3 RCVR C IN                        | U3042-20034                          |
| Port 3 SOURCE OUT                       | U3042-20035                          |
| Port 3 CPLR THRU                        | U3042-20036                          |
| Port 4 CPLR ARM                         | U3042-20037                          |
| Port 4 RCVR D IN                        | U3042-20038                          |
| Port 4 SOURCE OUT                       | U3042-20039                          |
| Port 4 CPLR THRU                        | U3042-20040                          |
| Port 2 CPLR ARM                         | U3042-20041                          |
| Port 2 RCVR B                           | U3042-20042                          |
| Port 2 SOURCE OUT                       | U3042-20043                          |
| Port 2 CPLR THRU                        | U3042-20044                          |
| RF Cable, Semi-rigid                    | Z5623-20418                          |
| RF Cable, Semi-rigid                    | Z5623-20419                          |


The following replaceable parts may be ordered by sending an e-mail request to [ctd-soco\\_support@keysight.com](mailto:ctd-soco_support@keysight.com). Be sure to include test set model, options and serial number. Some parts may have long lead times.

Table 20 Replacement Parts (E12)

| Description                        | Keysight Part Number              |
|------------------------------------|-----------------------------------|
| Bias Tee (Option 002)              | 5087-7239                         |
| LED Status Ribbon Cable            | N5261-60001                       |
| LED Status Board                   | N5261-63005                       |
| Controller Board                   | N5261-63006                       |
| DUT Control Board                  | U3020-63223                       |
| U3042AE08 User's and Service Guide | U3042-90002                       |
| Power Switch and LED               | Z5623-60221                       |
| Switch Interface Board             | Z5623-63647 or Z5623-63998 (RoHS) |


## System Block Diagram

Figure 63 U3042AE08 Standard Configuration

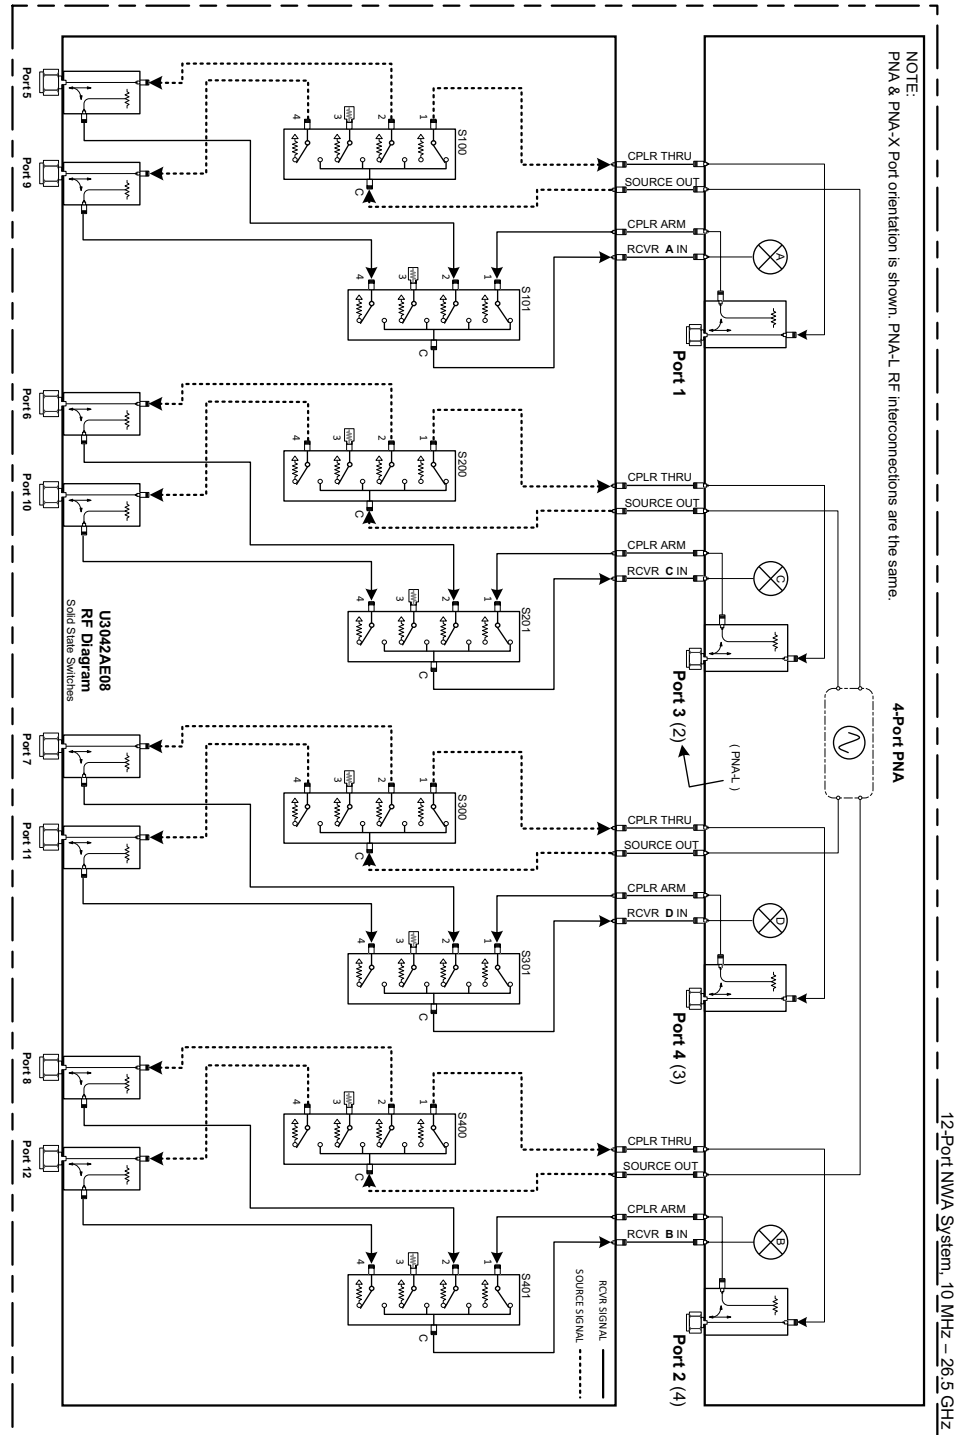


U3042AE08  
System Block Diagram

Figure 64 U3042AE08 Option 001 Configuration

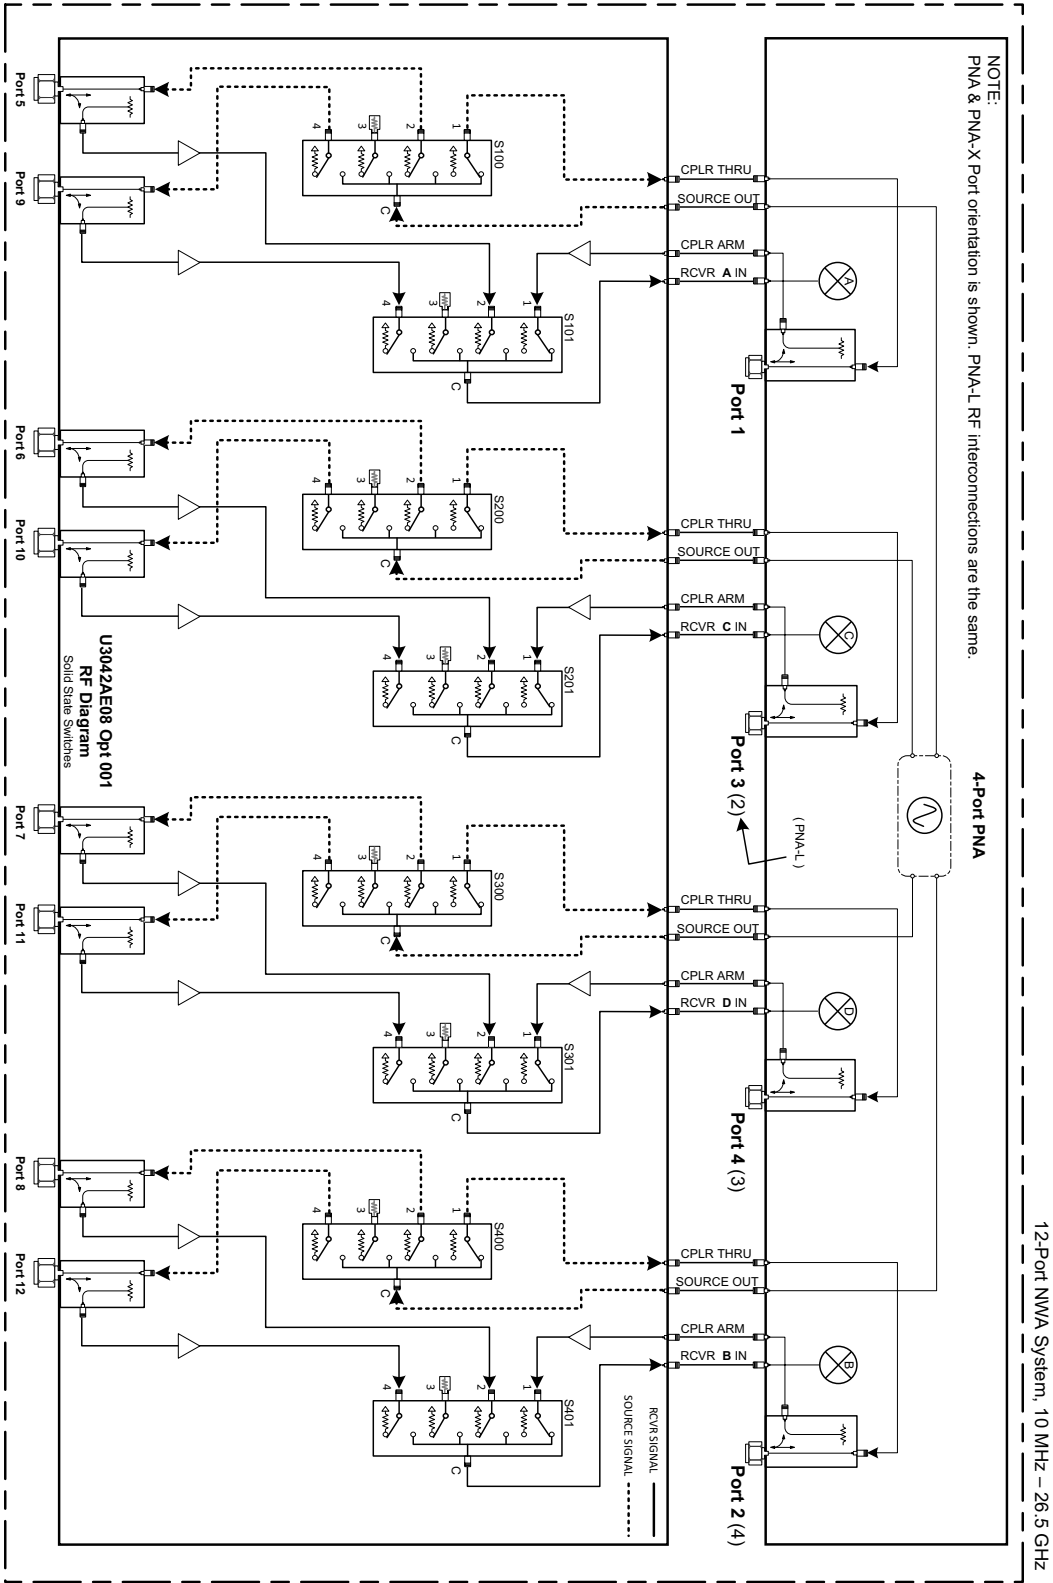

U3042AE08  
System Block Diagram

Figure 65 U3042AE08 Option 002 Configuration

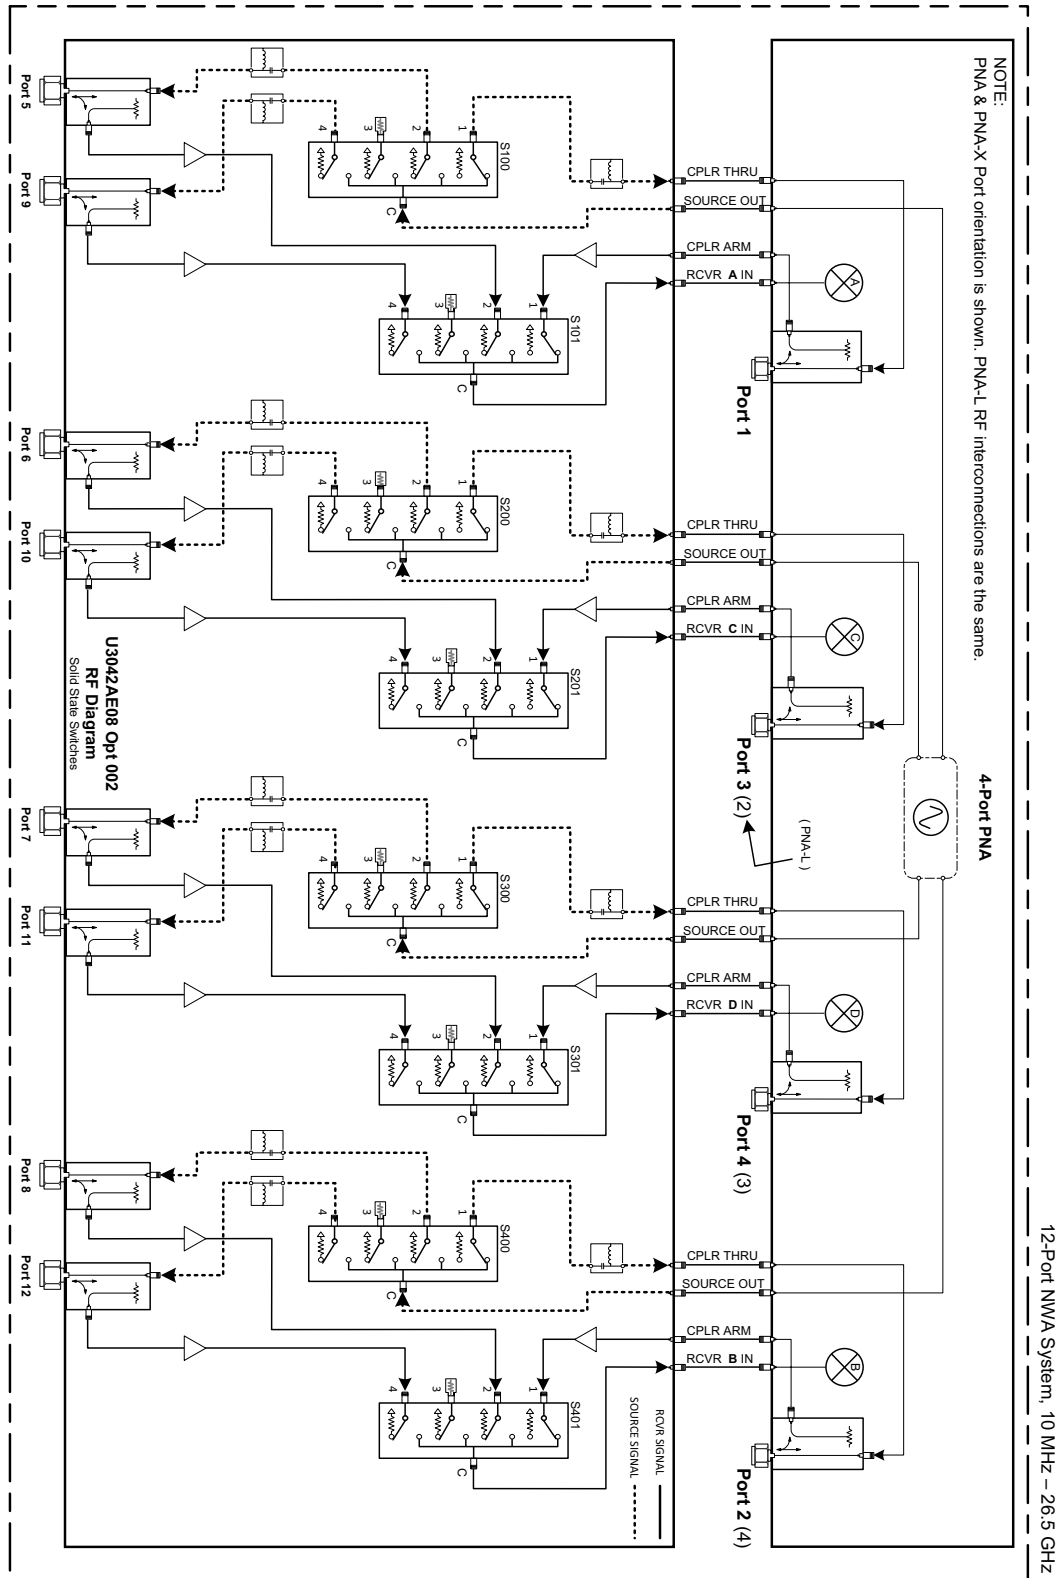



## Theory of Operation

The following is a description of the operation of the test set. Reference the test set block diagrams shown in “**System Block Diagram**” beginning on [page 74](#). This section assumes the user has a general understanding of couplers, switches, and network analyzers

### RF Coupler/Bridges


The test set uses four coupler/bridges (5087-7716 or RoHS compliant 5087-7752) on the front panel for RF Test Ports 5 to 12. The coupler/bridges provide the signal separation of the source and receiver paths, using resistor networks. The test set ports can receive from or stimulate a signal to the DUT.

The RF Test Port connectors are male 3.5 mm. The coupling factor is approximately -16 dB for the Coupled Arm (minimum -22 dB and max -12 dB at 26.5 GHz). The insertion loss through the CPLR THRU path is typically < 4 dB at 26.5 GHz. Do not use excessive RF power or DC voltage, or damage may occur to the internal resistors.

### RF Switch Components

The test set uses eight solid-state switches (5087-7306 or RoHS compliant 5087-7751) that have internal 50 Ohm termination for each path. The switches select the RF paths from the analyzer’s source and receiver through interconnect cables to the test set. Network analyzer Ports 1 thru 4 and test set ports 5 thru 12.

Figure 66 Switch

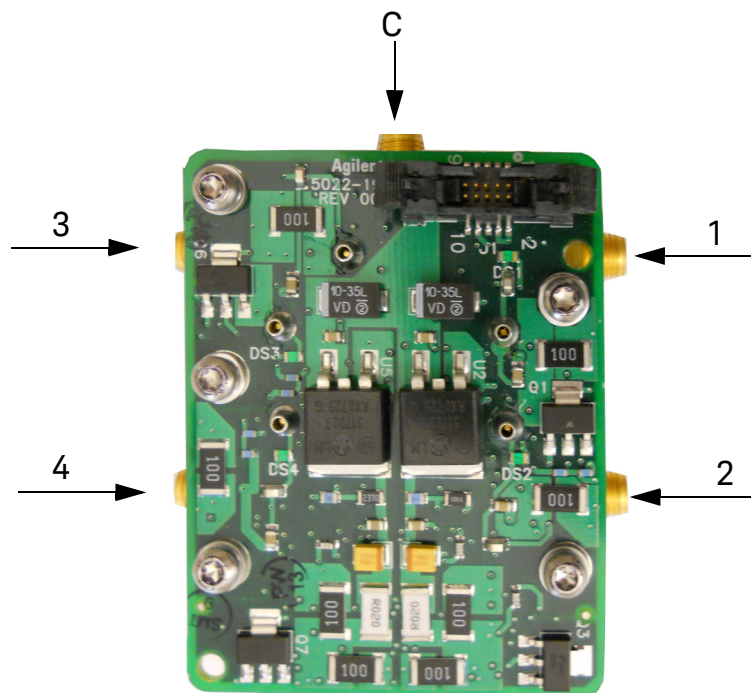

## Test Set Switch Paths

|   |   |
|---|---|
| <b>S100 - Source Output to Ports (1, 5 and 9)</b> | Switch 100 provides control of the Source Output path to PNA Port 1 and test set Port 5 and 9. In the state shown in the block diagram, switch 100 routes the RF Source back to the PNA Port 1, and the test set Source path to Port 5 and 9 is terminated.           |
| <b>S200 - Source to Ports (2, 6 and 10)</b>       | Switch 200 provides control of the Source Output path to PNA Ports 2 and test set Port 6 and 10. In the state shown in the block diagram, switch 200 routes the RF Source back to the PNA Port 2, and the test set Source Output path to Port 6 and 10 is terminated. |
| <b>S300 - Source to Ports (3, 7 and 11)</b>       | Switch 300 provides control of the Source Output path to PNA Port 3 and test set Port 7 and 11. In the state shown in the block diagram, switch 300 routes the RF Source back to the PNA Port 3, and the test set Source path to Port 7 and 11 is terminated.         |
| <b>S400 - Source to Ports (4, 8 and 12)</b>       | Switch 400 provides control of the Source Output path to PNA Port 4 and test set Port 8 and 12. In the state shown in the block diagram, switch 400 routes the RF Source back to the PNA Port 4, and the test set Source path to Port 8 and 12 is terminated.         |
| <b>S101 - Receiver to Ports (1, 5 and 9)</b>      | Switch 101 provides control of the Receiver Input path to PNA Port 1 and test set Port 5 and 9. In the state shown in the block diagram, switch 101 routes the Port 1 Coupler Arm to the Receiver, and test set Port 5 and 9 Coupler Arm path is terminated.          |
| <b>S201 - Receiver to Ports (2, 6 and 10)</b>     | Switch 201 provides control of the Receiver Input path to PNA Port 2 and test set Port 6 and 10. In the state shown in the block diagram, switch 201 routes the Port 2 Coupler Arm to the Receiver, and test set Port 6 and 10 Coupler Arm path is terminated.        |
| <b>S301 - Receiver to Ports (3, 7 and 11)</b>     | Switch 301 provides control of the Receiver Input path to PNA Port 3 and test set Port 7 and 11. In the state shown in the block diagram, switch 301 routes the Port 3 Coupler Arm to the Receiver, and test set Port 7 and 11 Coupler Arm path is terminated.        |
| <b>S401 - Receiver to Ports (4, 8 and 12)</b>     | Switch 401 provides control of the Receiver Input path to PNA Port 4 and test set Port 8 and 12. In the state shown in the block diagram, switch 401 routes the Port 4 Coupler Arm to the Receiver, and test set Port 8 and 12 Coupler Arm path is terminated.        |

## PNA-X Switch Paths

|   |   |
|---|---|
| <b>S100 - Source Output to Ports (1, 5 and 9)</b> | Switch 100 provides control of the Source Output path to PNA Port 1 and test set Port 5 and 9. In the state shown in the block diagram, switch 100 routes the RF Source back to the PNA Port 1, and the test set Source path to Port 5 and 9 is terminated.           |
| <b>S200 - Source to Ports (3, 6 and 10)</b>       | Switch 200 provides control of the Source Output path to PNA Ports 3 and test set Port 6 and 10. In the state shown in the block diagram, switch 200 routes the RF Source back to the PNA Port 3, and the test set Source Output path to Port 6 and 10 is terminated. |
| <b>S300 - Source to Ports (4, 7 and 11)</b>       | Switch 300 provides control of the Source Output path to PNA Port 4 and test set Port 7 and 11. In the state shown in the block diagram, switch 300 routes the RF Source back to the PNA Port 4, and the test set Source path to Port 7 and 11 is terminated.         |
| <b>S400 - Source to Ports (2, 8 and 12)</b>       | Switch 400 provides control of the Source Output path to PNA Port 2 and test set Port 8 and 12. In the state shown in the block diagram, switch 400 routes the RF Source back to the PNA Port 2, and the test set Source path to Port 8 and 12 is terminated.         |
| <b>S101 - Receiver to Ports (1, 5 and 9)</b>      | Switch 101 provides control of the Receiver Input path to PNA Port 1 and test set Port 5 and 9. In the state shown in the block diagram, switch 101 routes the Port 1 Coupler Arm to the Receiver, and test set Port 5 and 9 Coupler Arm path is terminated.          |
| <b>S201 - Receiver to Ports (3, 6 and 10)</b>     | Switch 201 provides control of the Receiver Input path to PNA Port 3 and test set Port 6 and 10. In the state shown in the block diagram, switch 201 routes the Port 3 Coupler Arm to the Receiver, and test set Port 6 and 10 Coupler Arm path is terminated.        |
| <b>S301 - Receiver to Ports (4, 7 and 11)</b>     | Switch 301 provides control of the Receiver Input path to PNA Port 4 and test set Port 7 and 11. In the state shown in the block diagram, switch 301 routes the Port 4 Coupler Arm to the Receiver, and test set Port 7 and 11 Coupler Arm path is terminated.        |
| <b>S401 - Receiver to Ports (2, 8 and 12)</b>     | Switch 401 provides control of the Receiver Input path to PNA Port 2 and test set Port 8 and 12. In the state shown in the block diagram, switch 401 routes the Port 2 Coupler Arm to the Receiver, and test set Port 8 and 12 Coupler Arm path is terminated.        |

## Troubleshooting the Test Set

If the test set is not operating properly, use the following procedures to isolate the problem. It is recommended that a qualified service technician perform the following procedures.

Refer to the Keysight PNA Series: Service & Support Home Page at:  
<http://na.keysight.com/pna> for further information.

To request service, please contact your local service center. In the US, call 800-829-4444.  
For more details, please visit us at <http://keysight.com/find/assist>.

### WARNING

**No operator serviceable parts inside. Refer servicing to qualified personnel. To prevent electrical shock do not remove covers.**

---

### Non-RF Failures

Non RF failures are; Power Supply, Fans, Control Lines, Status LEDs or Interface not operating. Refer to [Figure 67 on page 81](#) and [Figure 68 on page 81](#).

1. Verify that the front panel Power Switch is operational. The front panel Active LED will be *off* unless the test set interface cable is connected and the test set is addressed by the network analyzer.
2. Turn on the test set and the analyzer.
3. The rear panel Deck and Internal power supply fans should be operational. If not continue with [step 4](#).
4. AC Line voltage checks (remove AC power from the instrument).
  - a. Ensure the proper AC Line voltage is present at the instrument line cord.
  - b. Remove the AC power cord from the instrument. Verify the instrument AC Line Module fuse (2119-0709) and replace if necessary. Refer to [Figure 5 on page 17](#).
  - c. Verify the Internal AC lines fuse (2110-0342). Remove the instrument bottom cover. Near the rear panel are two fuse holders, verify the fuses and replace if necessary. See [Figure 76 on page 91](#).
5. Internal DC Power checks.
  - a. Set the front panel switch to the Standby position. No fans or indicator lights should be operational.
  - b. Remove the top cover.
  - c. Set the Standby switch to the *on* position. Both the rear panel and internal power supply fans should be operational. Verify that the DC indicator LEDs are *on* as shown in [Figure 67 on page 81](#).


### NOTE

LEDs indicators for +9, -10 and +24 Vdc are off.

---


U3042AE08  
Troubleshooting the Test Set

Figure 67 DC Power Status LEDs

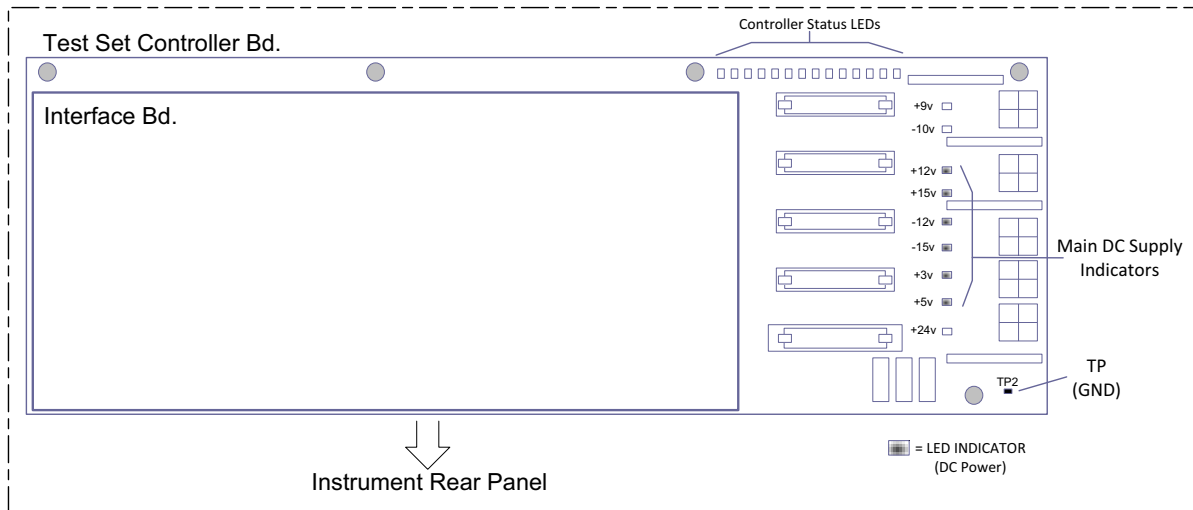

- d. If the DC Indicator LEDs are not on, suspect the main power supply module or front panel switch. The power supply (0950-4729) terminal connections should also be verified with a DVM. Verify the voltages on the power supply label.
- e. If the rear panel or deck fans are not operating and the DC Indicator LEDs are on, replace the fan.

Figure 68 Test Set Diagram

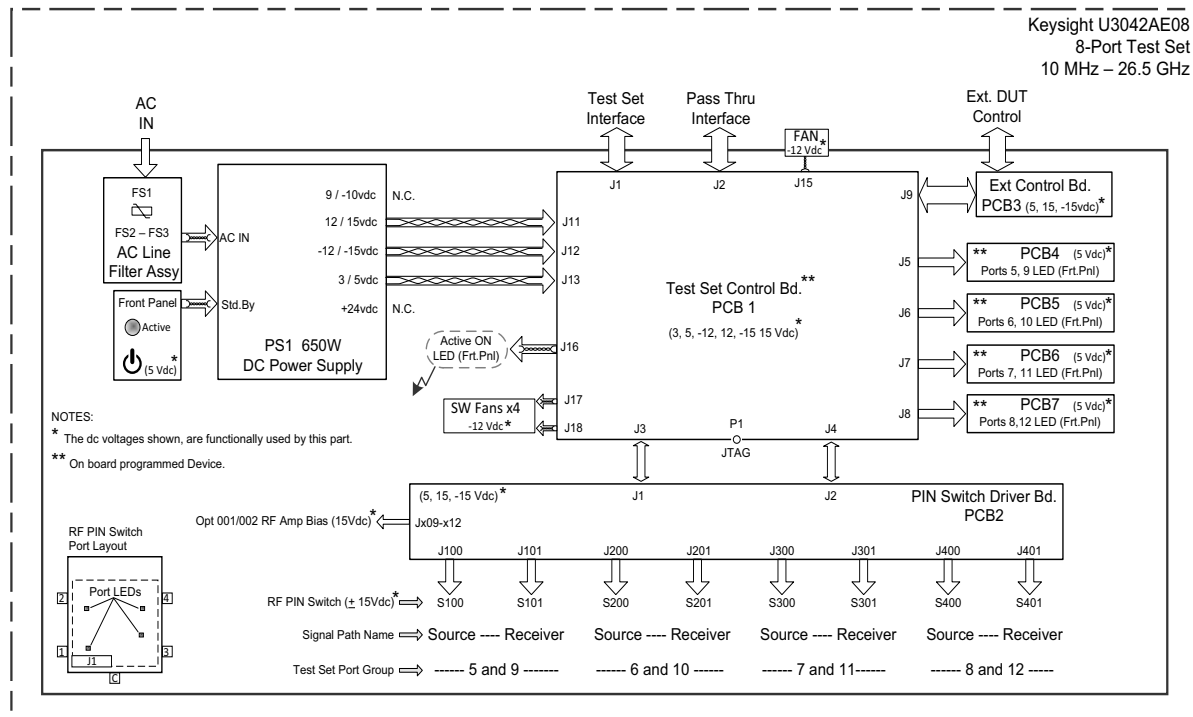

6. Front Panel R and S indicator LED Check.  
Verify the test set's Controller board Controller Status LEDs, shown in [Figure 67 on page 81](#).
  - a. If none are on, remove the Switch Driver board and recheck. If still no indication, replace the Controller board.
  - b. If the Controller Status LEDs are on and the front panel Active LED is on, suspect the front panel LED boards or the ribbon cables. Replace as needed.
7. Control Lines are not working.
  - a. Verify that the control voltage pin connections to the DUT control lines are connected properly. Refer to ["Control Lines" on page 56](#).
  - b. Verify that the DC voltage control adjustment can be set to 5 Vdc. Refer to [Figure 3 on page 15](#).

## RF Switching Path Test

If you suspect an RF signal path problem with the test set and have verified that the problem is not the front panel RF interface cables, the following procedure will check all of the RF signal paths through the test set.

- Install the Test Set I/O cable from the analyzer to the test set's rear panel.
- Remove the front panel RF interface cables and reinstall the analyzer's front panel jumper cables.

## Equipment Required

If you suspect an RF signal path problem with the test set and have verified that the problem is not the front panel RF interface cables, the following procedure will check all of the RF signal paths through the test set.

- PNA, PNA-L or PNA-X Network Analyzer
- Two RF Flex Cables (3.5 mm male)
- 3.5 mm Adapters (female to female)
- Test Set I/O Cable

## Equipment Setup

1. Turn on the test set and the analyzer.
2. **[Preset]** the analyzer and set it to Standalone Mode. Select **Utility > System > Configure > Multiport Capability**. In the dialog box select **Restart as a standalone PNA > OK**.
3. Confirm the frequency range is set to 10 MHz to 26.5 GHz. Option 001 set the Stop Frequency to 20 GHz.
4. Connect the RF flexible cables to Port 1 and 2. Connect the cables together using a 3.5 mm adapter.
5. Configure the analyzer to measure S21 and normalize the response trace.
6. Set the analyzer to Interface Control Mode: Select **Channel > Hardware Setup > More > Interface Control...** and select **Enable Interface Control**.

### NOTE

The <addr>.<data> entries noted in the following Test Instructions table will be used to configure the RF switches for this testing. After making your entry select <OK> to execute the command, to return back for further entries, select **Interface Control** on the analyzer's display.

## Source and Receiver Path Tests

Refer to [Table 21 on page 84](#) for measuring the S21 response of the Source and Receiver signal paths. The tables indicate RF cable connections as well as Address and Data command for each path test.

Connect the RF cables as indicated in the tables. The expected results should be similar to [Figure 69](#) and [Figure 70 on page 86](#).

Table 21 Signal Path Connections and Commands

| PNA Port-2 to Test Set                                    | PNA Port-1 to Test Set | <Addr>.<Data> | Path Components    | Response (typical)   |
|---|------------------------|---------------|--------------------|----------------------|
| <b>PNA-L Ports 1 &amp; 5 or PNA/PNA-X Ports 1 &amp; 5</b> |                        |               |                    |                      |
| Source IN   | Port 5                 | 0.2           | P5 CPLR, S100      | Figure 69 on page 86 |
| Source IN   | CPLR THRU              | 0.1           | S100               | Figure 70 on page 86 |
| RCVR OUT  | Port 5                 | 0.32          | P5 CPLR, S101      | Figure 71 on page 87 |
| RCVR OUT (Opt 001)  | Port 5                 | 0.32          | P5 CPLR, S101, AMP | Figure 72 on page 87 |
| RCVR OUT  | CPLR ARM               | 0.16          | S101               | Figure 73 on page 88 |
| RCVR OUT (Opt 001)  | CPLR ARM               | 0.16          | S101, AMP          | Figure 74 on page 88 |
| <b>PNA-L Ports 2 &amp; 6 or PNA/PNA-X Ports 3 &amp; 6</b> |                        |               |                    |                      |
| Source IN   | Port 6                 | 16.2          | P6 CPLR, S200      | Figure 69 on page 86 |
| Source IN   | CPLR THRU              | 16.1          | S200               | Figure 70 on page 86 |
| RCVR OUT  | Port 6                 | 16.32         | P6 CPLR, S201      | Figure 71 on page 87 |
| RCVR OUT (Opt 001)  | Port 6                 | 16.32         | P6 CPLR, S201, AMP | Figure 72 on page 87 |
| RCVR OUT  | CPLR ARM               | 16.16         | S201               | Figure 73 on page 88 |
| RCVR OUT (Opt 001)  | CPLR ARM               | 16.16         | S201, AMP          | Figure 74 on page 88 |
| <b>PNA-L Ports 3 &amp; 7 or PNA/PNA-X Ports 4 &amp; 7</b> |                        |               |                    |                      |
| Source IN   | Port 7                 | 32.2          | P7 CPLR, S300      | Figure 69 on page 86 |
| Source IN   | CPLR THRU              | 32.1          | S300               | Figure 70 on page 86 |
| RCVR OUT  | Port 7                 | 32.32         | P7 CPLR, S301      | Figure 71 on page 87 |
| RCVR OUT (Opt 001)  | Port 7                 | 32.32         | P7 CPLR, S301, AMP | Figure 72 on page 87 |
| RCVR OUT  | CPLR ARM               | 32.16         | S301               | Figure 73 on page 88 |
| RCVR OUT (Opt 001)  | CPLR ARM               | 32.16         | S301, AMP          | Figure 74 on page 88 |
| <b>PNA-L Ports 4 &amp; 8 or PNA/PNA-X Ports 2 &amp; 8</b> |                        |               |                    |                      |
| Source IN   | Port 8                 | 64.2          | P8 CPLR, S400      | Figure 69 on page 86 |
| Source IN   | CPLR THRU              | 64.1          | S400               | Figure 70 on page 86 |
| RCVR OUT  | Port 8                 | 64.32         | P8 CPLR, S401      | Figure 71 on page 87 |
| RCVR OUT (Opt 001)  | Port 8                 | 64.32         | P8 CPLR, S401, AMP | Figure 72 on page 87 |
| RCVR OUT  | CPLR ARM               | 64.16         | S401               | Figure 73 on page 88 |
| RCVR OUT (Opt 001)  | CPLR ARM               | 64.16         | S401, AMP          | Figure 74 on page 88 |

(Continued on next page)



Table 21 Signal Path Connections and Commands (Continued from previous page)

| PNA Port-2 to Test Set                                      | PNA Port-1 to Test Set | <Addr>.<Data> | Path Components     | Response (typical)   |
|---|------------------------|---------------|---------------------|----------------------|
| <b>PNA-L Ports 1 &amp; 9 or PNA/PNA-X Ports 1 &amp; 9</b>   |                        |               |                     |                      |
| Source IN   | Port 9                 | 0.8           | P9 CPLR, S100       | Figure 69 on page 86 |
| Source IN   | CPLR THRU              | 0.1           | S100                | Figure 70 on page 86 |
| RCVR OUT  | Port 9                 | 0.128         | P5 CPLR, S101       | Figure 71 on page 87 |
| RCVR OUT (Opt 001)  | Port 9                 | 0.128         | P5 CPLR, S101, AMP  | Figure 72 on page 87 |
| RCVR OUT  | CPLR ARM               | 0.16          | S101                | Figure 73 on page 88 |
| RCVR OUT (Opt 001)  | CPLR ARM               | 0.16          | S101, AMP           | Figure 74 on page 88 |
| <b>PNA-L Ports 2 &amp; 10 or PNA/PNA-X Ports 3 &amp; 10</b> |                        |               |                     |                      |
| Source IN   | Port 10                | 16.8          | P10 CPLR, S200      | Figure 69 on page 86 |
| Source IN   | CPLR THRU              | 16.1          | S200                | Figure 70 on page 86 |
| RCVR OUT  | Port 10                | 16.128        | P10 CPLR, S201      | Figure 71 on page 87 |
| RCVR OUT (Opt 001)  | Port 10                | 16.128        | P10 CPLR, S201, AMP | Figure 72 on page 87 |
| RCVR OUT  | CPLR ARM               | 16.16         | S201                | Figure 73 on page 88 |
| RCVR OUT (Opt 001)  | CPLR ARM               | 16.16         | S201, AMP           | Figure 74 on page 88 |
| <b>PNA-L Ports 3 &amp; 11 or PNA/PNA-X Ports 4 &amp; 11</b> |                        |               |                     |                      |
| Source IN   | Port 11                | 32.2          | P11 CPLR, S300      | Figure 69 on page 86 |
| Source IN   | CPLR THRU              | 32.1          | S300                | Figure 70 on page 86 |
| RCVR OUT  | Port 11                | 32.32         | P11 CPLR, S301      | Figure 71 on page 87 |
| RCVR OUT (Opt 001)  | Port 11                | 32.32         | P11 CPLR, S301, AMP | Figure 72 on page 87 |
| RCVR OUT  | CPLR ARM               | 32.16         | S301                | Figure 73 on page 88 |
| RCVR OUT (Opt 001)  | CPLR ARM               | 32.16         | S301, AMP           | Figure 74 on page 88 |
| <b>PNA-L Ports 4 &amp; 12 or PNA/PNA-X Ports 2 &amp; 12</b> |                        |               |                     |                      |
| Source IN   | Port 12                | 64.8          | P12 CPLR, S400      | Figure 69 on page 86 |
| Source IN   | CPLR THRU              | 64.1          | S400                | Figure 70 on page 86 |
| RCVR OUT  | Port 12                | 64.128        | P12 CPLR, S401      | Figure 71 on page 87 |
| RCVR OUT (Opt 001)  | Port 12                | 64.128        | P12 CPLR, S401, AMP | Figure 72 on page 87 |
| RCVR OUT  | CPLR ARM               | 64.16         | S401                | Figure 73 on page 88 |
| RCVR OUT (Opt 001)  | CPLR ARM               | 64.16         | S401, AMP           | Figure 74 on page 88 |

Figure 69 Source IN to Ports 5-8 Path Response (Std/001)

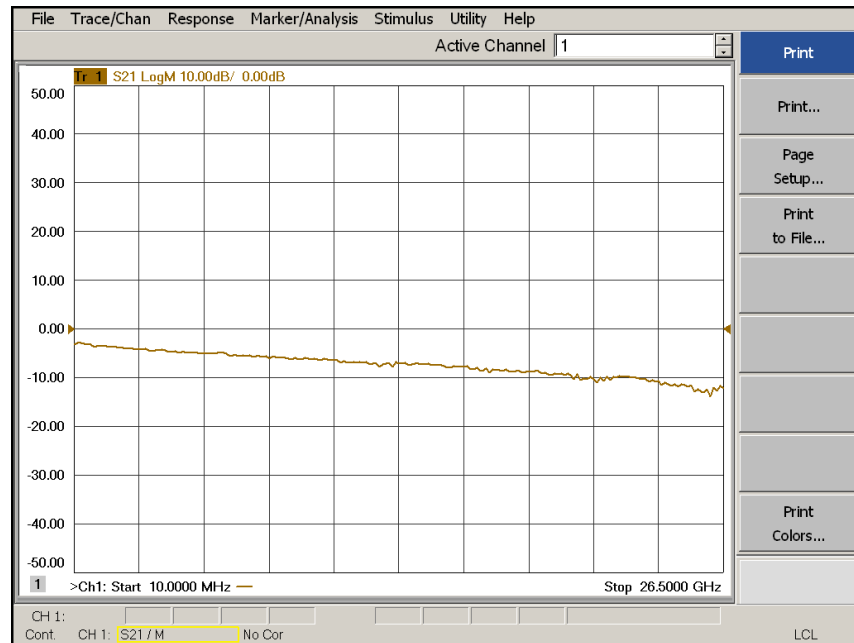


Figure 70 Source IN to CPLR THRU Path Response (Std/001)

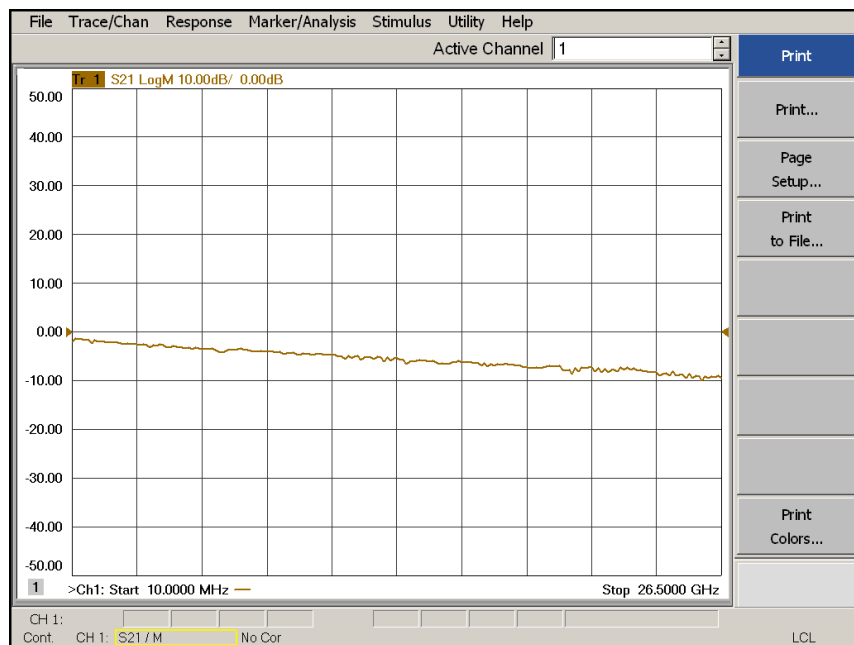


Figure 71 RCVR OUT to Ports 5-8 Path Response (Std)

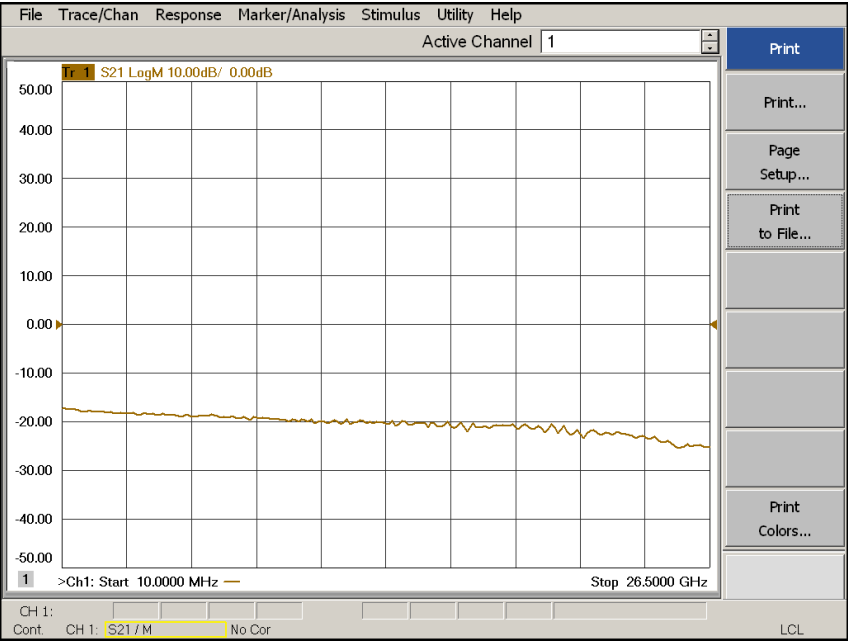


Figure 72 RCVR OUT to Ports 5-8 Path Response (Option 001)

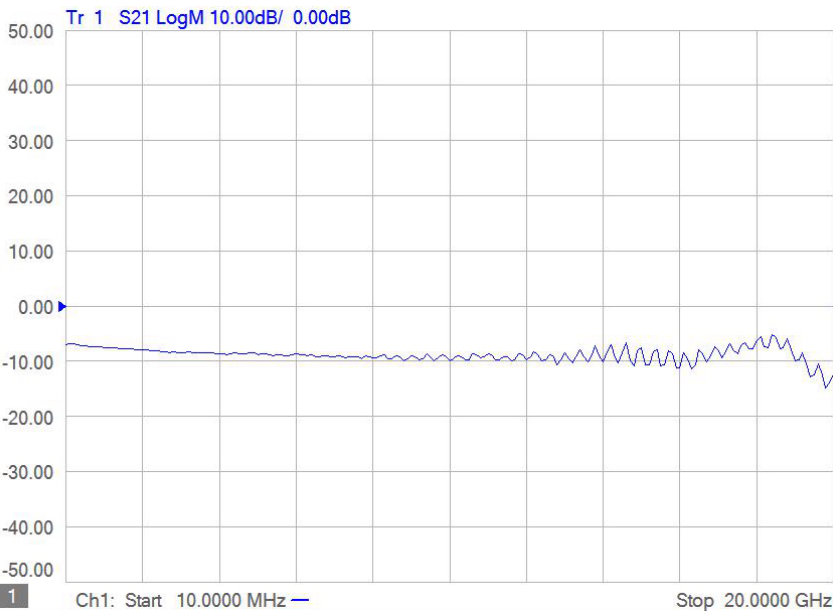


Figure 73 RCVR OUT to CPLR ARM Path Response (Std)

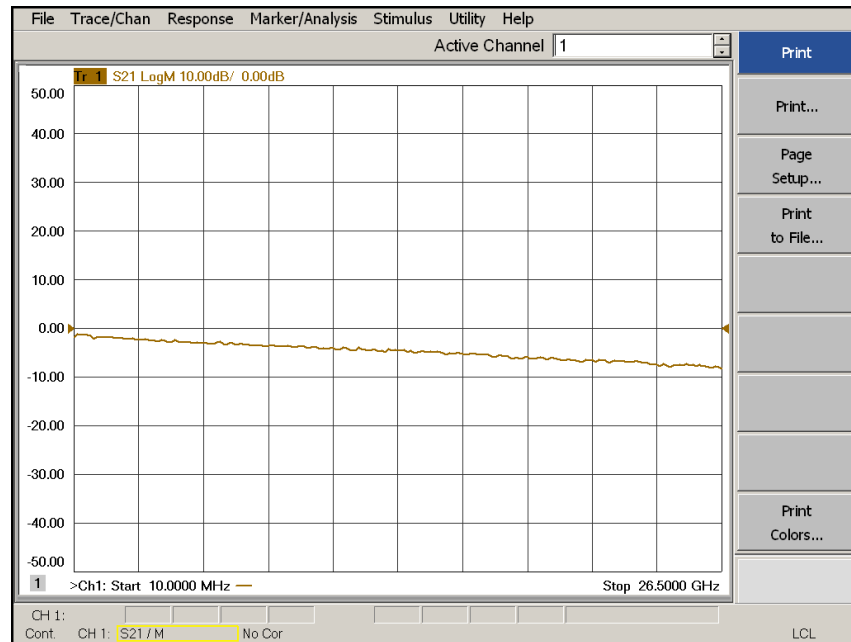


Figure 74 RCVR OUT to CPLR ARM Path Response (Option 001)



## Connection Tables and Diagrams

Table 22      Controller Board Connection

| Controller Board                             | Connections          |
|--|----------------------|
| <b>LED Ribbon Cables from the LED Board:</b> |                      |
| J5   | Port 5 & 9           |
| J6   | Port 6 & 10          |
| J7   | Port 7 & 11          |
| J8   | Port 8 & 12          |
| <b>Wire Harness Active LED:</b>              |                      |
| J16  | Active LED           |
| <b>DUT Control Ribbon Cable:</b>             |                      |
| J9   | DUT Controller Board |
| <b>Power Supply Wire Harness:</b>            |                      |
| J11-13                                       | Power Supply         |

Table 23      Switch Interface Board

| Switch Interface Board                    | Connection             |
|---|------------------------|
| <b>Switch Interface Board Connection:</b> |                        |
| J100                                      | Port 5 & 9 (Source)    |
| J101                                      | Port 5 & 9 (Receiver)  |
| J200                                      | Port 6 & 10 (Source)   |
| J201                                      | Port 6 & 10 (Receiver) |
| J300                                      | Port 7 & 11 (Source)   |
| J301                                      | Port 7 & 11 (Receiver) |
| J400                                      | Port 8 & 12 (Source)   |
| J401                                      | Port 8 & 12 (Receiver) |

Figure 75 Top View (Std)


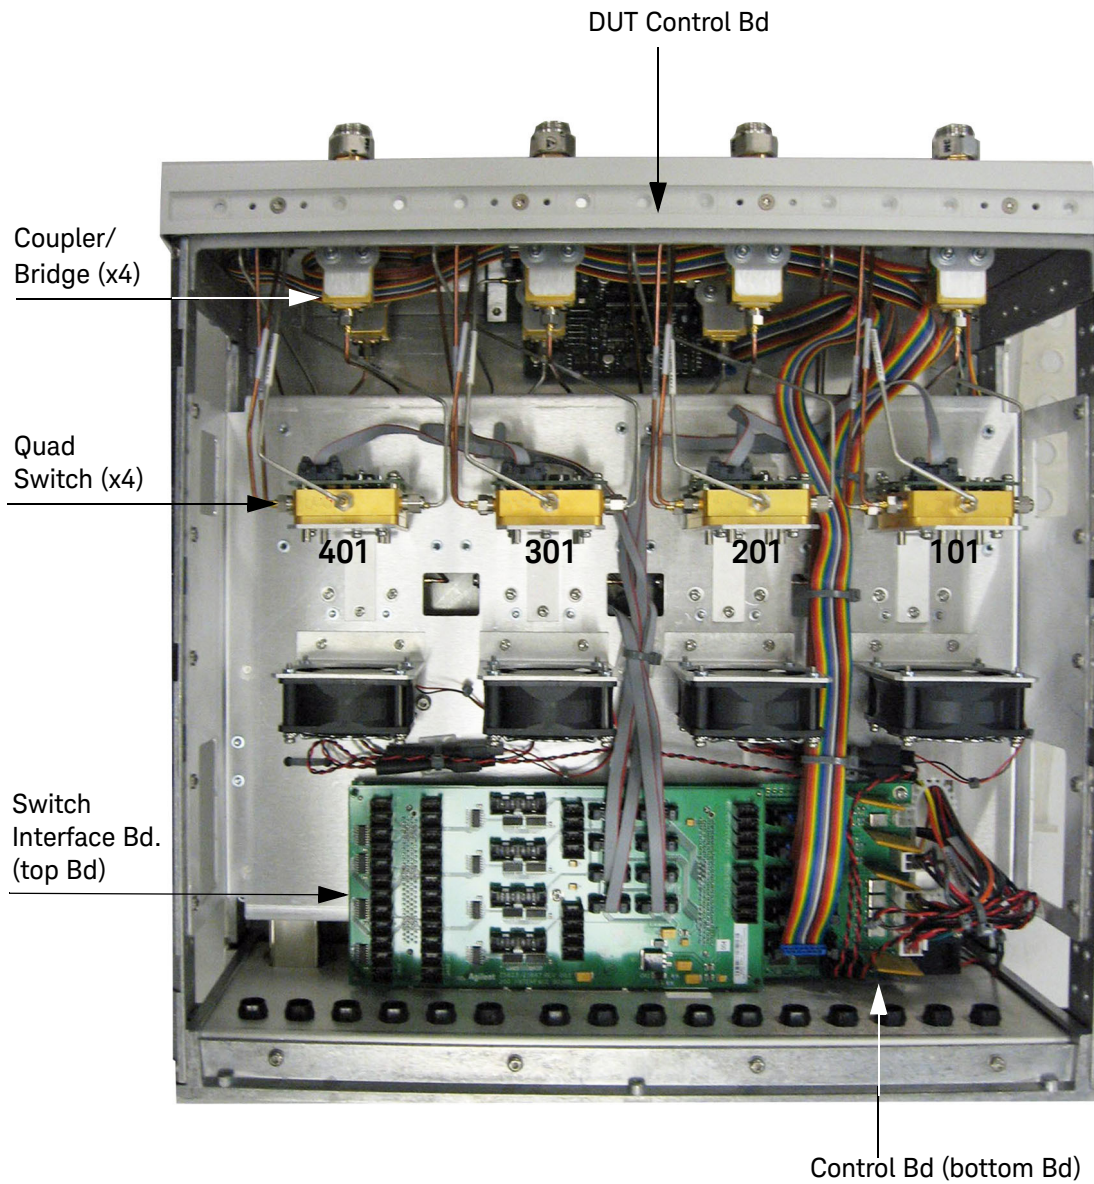




Figure 76 Bottom View (Std/001)

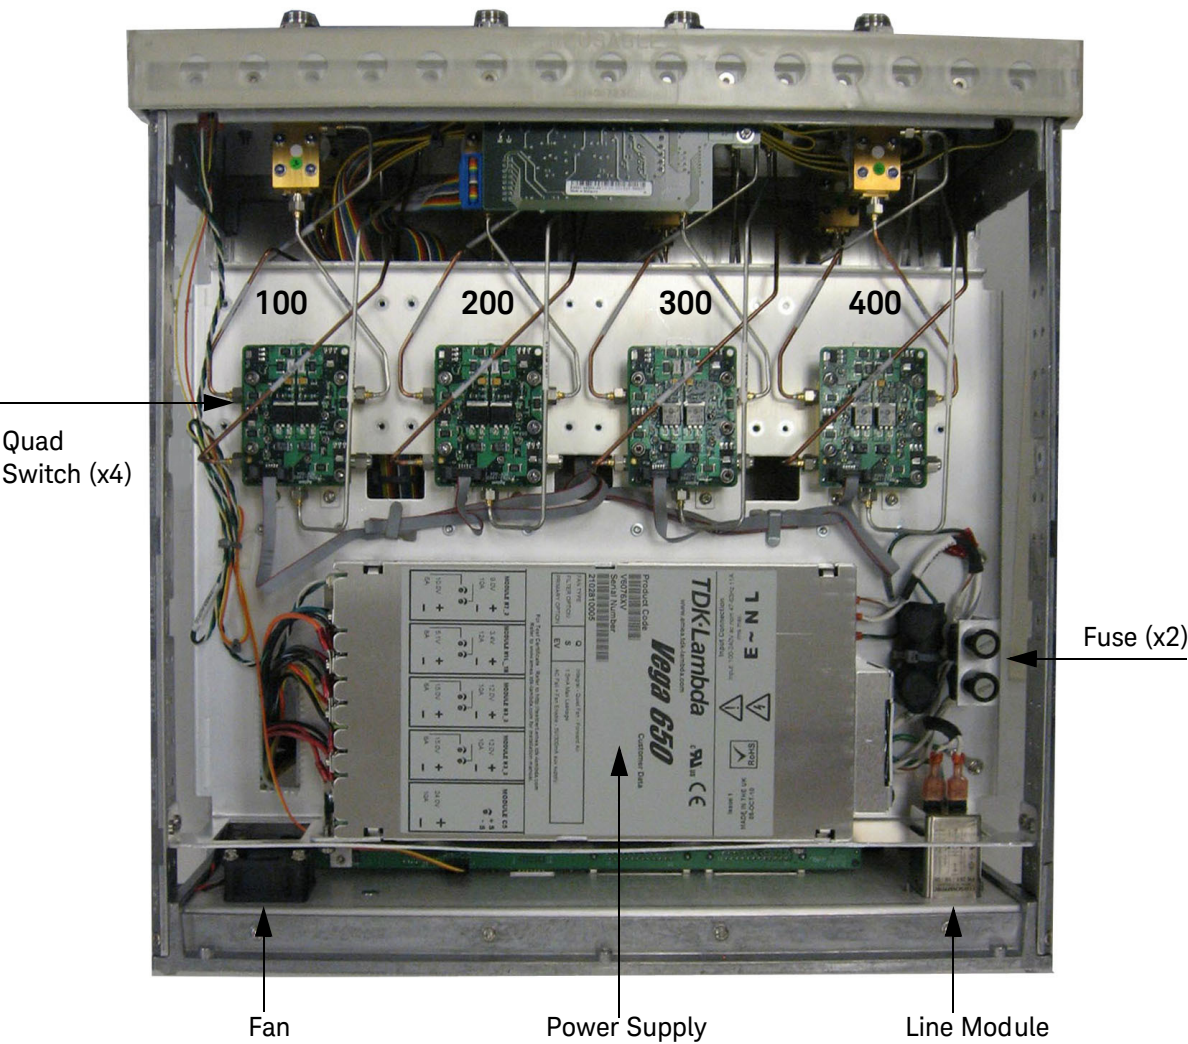

## Safety and Information

### Introduction

Review this product and related documentation to familiarize yourself with safety markings and instructions before you operate the instrument.

This product has been designed and tested in accordance with accepted industry standards, and has been supplied in a safe condition. The documentation contains information and warnings that must be followed by the user to ensure safe operation and to maintain the product in a safe condition.

### Safety Earth Ground

#### WARNING

This is a Safety Class I Product (provided with a protective earthing ground incorporated in the power cord). The mains plug shall only be inserted in a socket outlet provided with a protective earth contact. Any interruption of the protective conductor inside or outside of the product is likely to make the product dangerous. Intentional interruption is prohibited.

---

#### CAUTION

Always use the three prong AC power cord supplied with this product. Failure to ensure adequate earth grounding by not using this cord may cause product damage and the risk of electrical shock.

---

### Statement of Compliance

This product has been designed and tested in accordance with accepted industry standards, and has been supplied in a safe condition. The documentation contains information and warnings that must be followed by the user to ensure safe operation and to maintain the product in a safe condition.

### Connector Care and Cleaning Precautions

Remove the power cord to the instrument. To clean the connectors use alcohol in a well ventilated area. Allow all residual alcohol moisture to evaporate, and fumes to dissipate prior to energizing the instrument.

#### WARNING

To prevent electrical shock, disconnect the Keysight U3042AE08 from mains electrical supply before cleaning. Use a dry cloth or one slightly dampened with water to clean the external case parts. Do not attempt to clean internally.

---

#### WARNING

If flammable cleaning materials are used, the material shall not be stored, or left open in the area of the equipment. Adequate ventilation shall be assured to prevent the combustion of fumes, or vapors.

---



## Before Applying Power

Verify that the premises electrical supply is within the range of the instrument. The instrument has an autoranging power supply.

### WARNING

If this product is not used as specified, the protection provided by the equipment could be impaired. This product must be used in a normal condition (in which all means for protection are intact) only.

---

### CAUTION

The Mains wiring and connectors shall be compatible with the connector used in the premise electrical system. Failure, to ensure adequate earth grounding by not using the correct components may cause product damage, and serious injury.

---

### CAUTION

Always use the three prong AC power cord supplied with this product. Failure to ensure adequate earth grounding by not using this cord may cause product damage and the risk of electrical shock.

---

### CAUTION

This product is designed for use in Installation Category II and Pollution Degree.

---

### CAUTION

Before switching on this instrument, make sure the supply voltage is in the specified range.

---

### CAUTION

Verify that the premise electrical voltage supply is within the range specified on the instrument.

---

### CAUTION

Ventilation Requirements: When installing the instrument in a cabinet, the convection into and out of the instrument must not be restricted. The ambient temperature (outside the cabinet) must be less than the maximum operating temperature of the instrument by 4 °C for every 100 watts dissipated in the cabinet. If the total power dissipated in the cabinet is greater than 800 watts, forced convection must be used.

---

**WARNING**

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended. Discard used batteries according to manufacturer's instructions.

---

**WARNING**

For continued protection against fire hazard replace line fuse only with same type and rating. The use of other fuses or material is prohibited.

---

**WARNING**

These servicing instructions are for use by qualified personnel only. To avoid electrical shock, do not perform any servicing unless you are qualified to do so.

---

**WARNING**

The opening of covers or removal of parts is likely to expose the user to dangerous voltages. Disconnect the instrument from all voltage sources before opening.

---

**WARNING**

No operator serviceable parts inside. Refer servicing to qualified personnel. To prevent electrical shock, do not remove covers.

---

**WARNING**

The detachable power cord is the instrument disconnecting device. It disconnects the mains circuits from the mains supply before other parts of the instrument. The front panel switch is only a standby switch and is not a LINE switch (disconnecting device).

---

## Regulatory Information

### Instrument Markings

Listed below are definitions for the markings that may be found on the product.



The instruction documentation symbol. The product is marked with this symbol when it is necessary for the user to refer to the instructions in the documentation.



The AC symbol indicates the required nature of the line module input power.



This symbol indicates separate collection for electrical and electronic equipment, mandated under EU law. All electric and electronic equipment are required to be separated from normal waste for disposal (Reference WEEE Directive).



This symbol indicates that the power line switch is ON.



This symbol indicates that the power line switch is in the STANDBY position.



This symbol indicates that the power line switch is in the OFF position.



This symbol is used to identify a terminal which is internally connected to the product frame or chassis.



The CE mark is a registered trademark of the European Community.

ccr.keysight@keysight.com

The Keysight email address is required by EU directives applicable to our product.



The CSA mark is a registered trademark of the CSA International.



This is a symbol of an Industrial Scientific and Medical Group 1 Class A product (CISPR 11, Clause 5).



This is a marking to indicate product compliance with the Canadian Interference-Causing Equipment Standard (ICES-001).



Direct Current.

**IP 2 0**

The instrument has been designed to meet the requirements of IP 2 0 for ingress and operational environment.



The RCM mark is a registered trademark of the Australian Communications and Media Authority.



Indicates the time period during which no hazardous or toxic substance elements are expected to leak or deteriorate during normal use. Forty years is the expected useful life of the product.



This symbol on all primary and secondary packaging indicates compliance to China standard GB 18455-2001.



South Korean Certification (KC) mark; includes the marking's identifier code which follows the format: MSIP-REM-YYY-ZZZZZZZZZZZZ.

**Battery:** Do not throw batteries away but collect as small chemical waste, or in accordance with your country's requirements. You may return the battery to Keysight Technologies for disposal. Refer to **"Contacting Keysight" on page 97** for assistance.

**EMC:** Complies with the essential requirements of the European EMC Directive as well as current editions of the following standards (dates editions are cited in the Declaration of Conformity):

- IEC/EN 61326-1
- CISPR Pub 11 Group 1, class A
- AS/NZS CISPR 11
- ICES/NMB-00 1  
This ISM device complies with Canadian ICES-001.  
Cet appareil ISM est conforme a la norme NMB-001 du Canada.

#### South Korean Class A EMC Declaration

If there is a "KC" mark on the instrument, then the following statement applies:

This equipment has been conformity assessed for use in business environments. In a residential environment, this equipment may cause radio interference.

※ This EMC statement applies to the equipment only for use in a business environment.

| 사 용 자 안 내 문  |
|--|
| 이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서<br>가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다. |

※ 사용자 안내문은 "업무용 방송통신기자재"에만 적용한다.

**SAFETY:** Complies with the essential requirements of the European Low Voltage Directive as well as current editions of the following standards (dates and editions are cited in the Declaration of Conformity):

- IEC/EN 61010-1
- Canada: CSA C22.2 No. 61010-1
- USA: UL std no. 61010-1

#### Acoustic Statement: (European Machinery Directive):

- Accoustical noise emission  
LpA<70 dB  
Operator position  
Normal operation mode Per ISO 7779

**Declarations of Conformity:** To find a current Declaration of Conformity for specific Keysight product, go to: <http://regulations.about.keysight.com/DoC/search.htm>

## Keysight Technical Support and Services

There are many other repair and calibration options available from the Keysight Technologies support organization. These options cover a range of service agreements with varying response times. Contact Keysight for additional information on available service agreements for this product.

### Contacting Keysight

To contact Keysight for sales and technical support, refer to support links on the following Keysight websites: <http://www.keysight.com/find> (product specific information and support, software and documentation updates) <http://www.keysight.com/find/assist> (worldwide contact information for repair and service).

#### NOTE

In any correspondence or telephone conversation, refer to the Keysight product by its model number and full serial number. With this information, the Keysight representative can determine the warranty status of your unit.

---

### Shipping Your Product to Keysight for Service or Repair

**IMPORTANT** Keysight Technologies reserves the right to reformat or replace the internal hard disk drive in your analyzer as part of its repair. This will erase all user information stored on the hard disk. It is imperative, therefore, that you make a backup copy of your critical test data located on the analyzer's hard disk before shipping it to Keysight for repair.

---

If you wish to send your instrument to Keysight Technologies for service or repair:

- Include a complete description of the service requested or of the failure and a description of any failed test and any error message.
- Remove and retain the front handles and all rack mount hardware. The analyzer should be sent to Keysight in the same configuration as it was originally shipped.
- Remove and retain the front handles and all rack mount hardware. The analyzer should be sent to Keysight in the same configuration as it was originally shipped.
- Contact Keysight for instructions on where to ship your analyzer.



This information is subject to change without notice.

© Keysight Technologies 2011-2020

Edition 6, October 2020

Supersedes: March 2019



U3042-90002

U3042-90002

[www.keysight.com](http://www.keysight.com)